



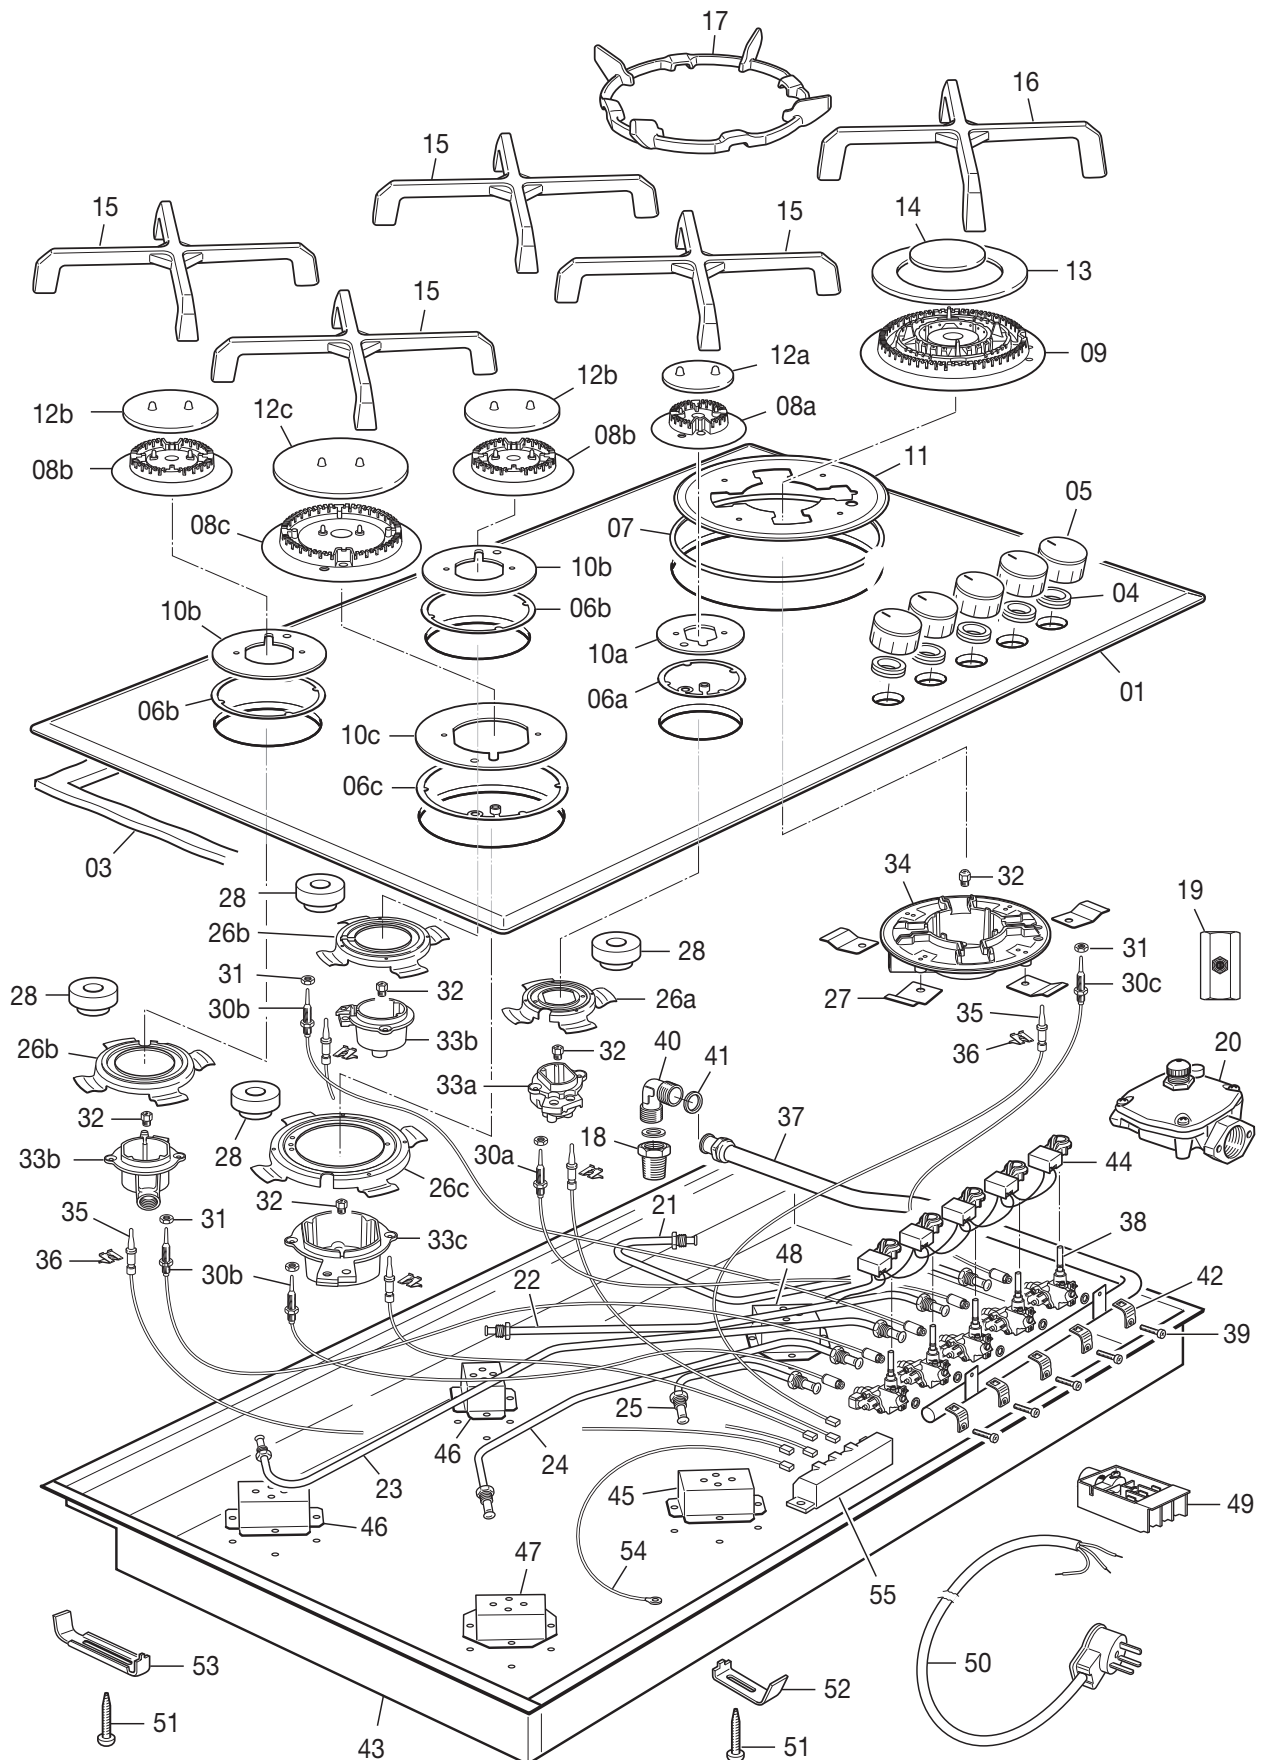

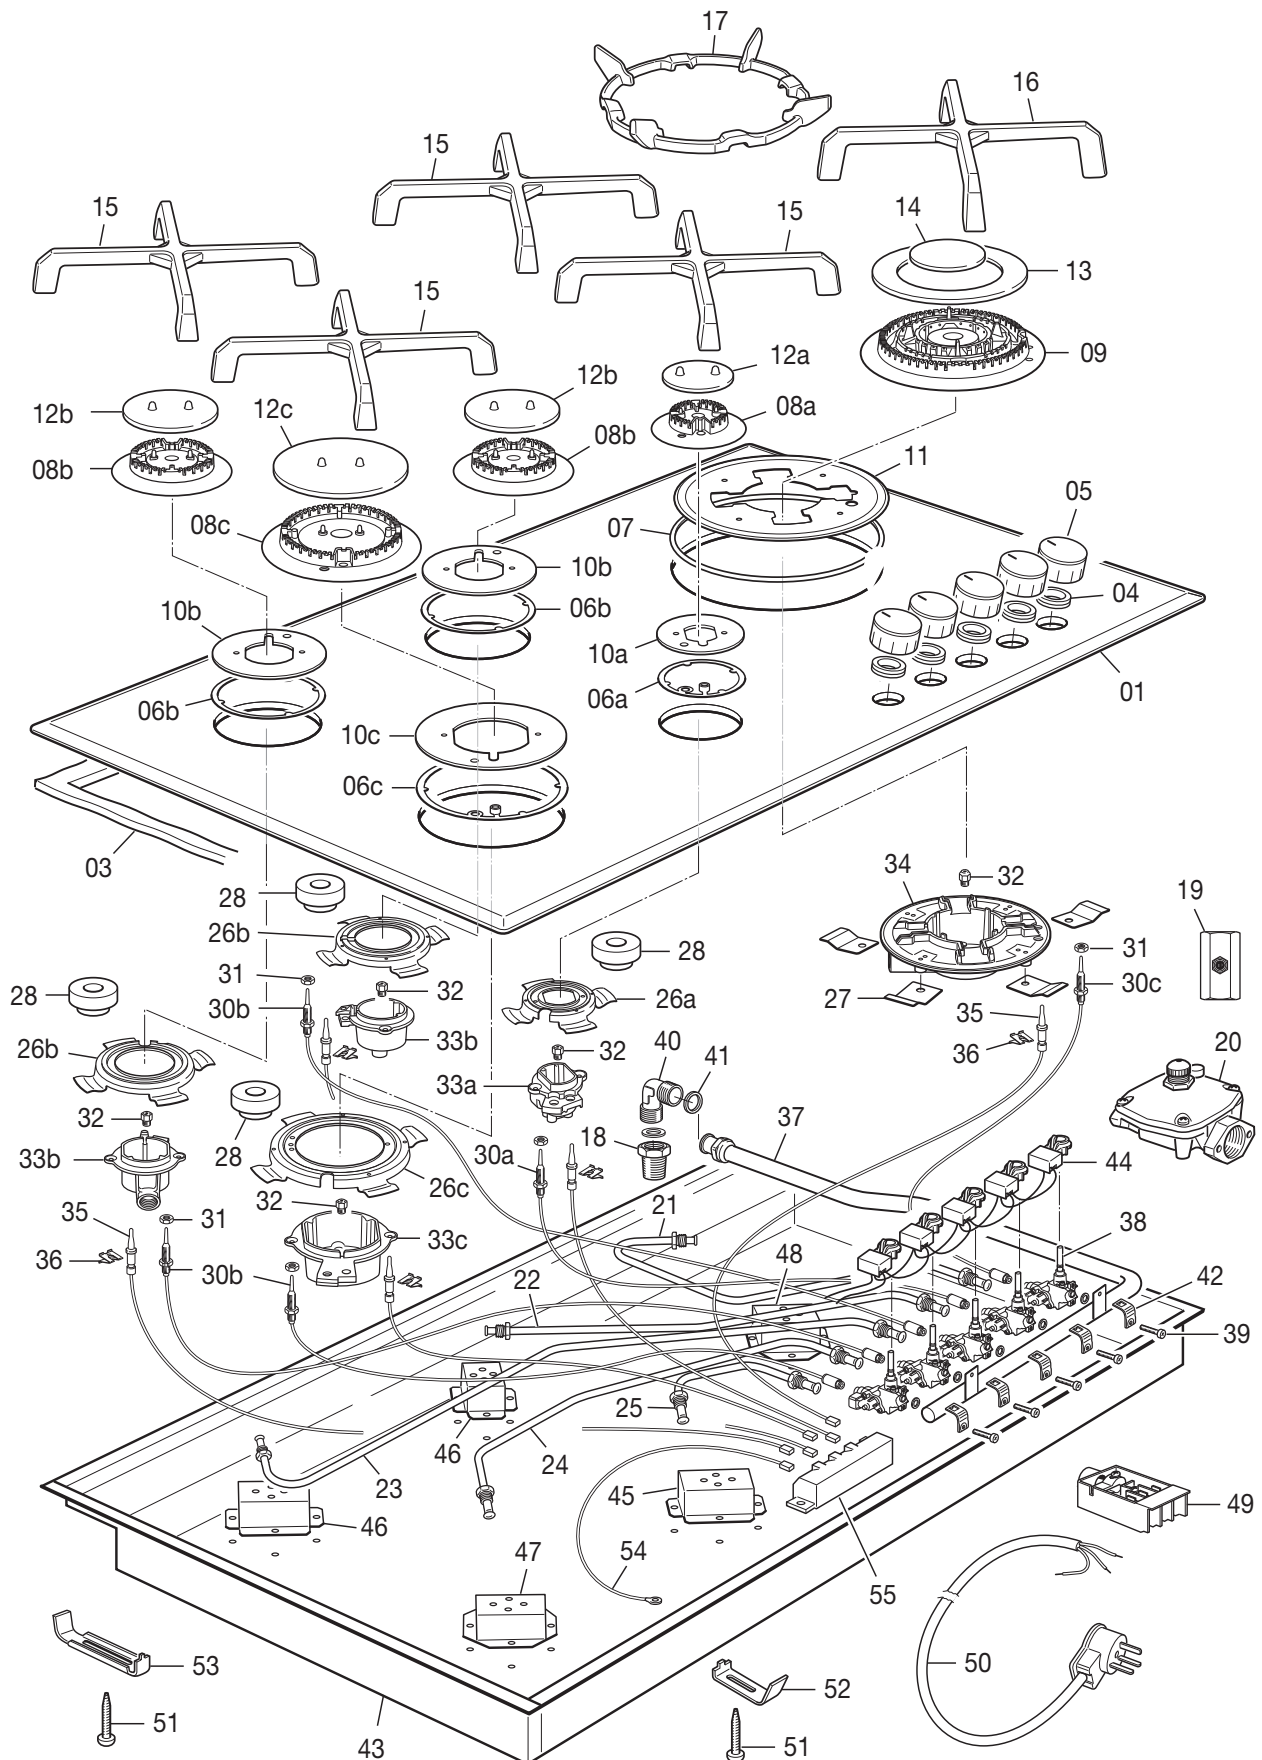

Position	Code	description
01	032G9007	Hob top
03	053076	Seal
04	040087	Rubber joint
05	218900A463	Control knob
06a	053136	Burner gasket A
06b	053137	Burner gasket SR
06c	053138	Burner gasket R
07	053107	Burner gasket
08a	068121035A	Burner-head A
08b	068122035A	Burner-head SR
08c	068123035A	Burner-head R
09	068138035A	Burner-head
10a	51BPG01A	Burner flange A
10b	51BPG02A	Burner flange
10c	51BPG03A	Burner flange R
11	51BPG07A	Burner flange
12a	216140005A	Burner-cap A
12b	216141005A	Burner-cap SR
12c	216142005A	Burner-cap R
13	216160005A	Burner-cap outside
14	216161005A	Burner-cap inside
15	217642	Top grate
16	217643	Top grate
17	217498	Grid for woks
18	067026	Conical adaptor
19	103468	Test point adaptor
20	103347	Gas pressure regulator 1/2
21	029935	Inlet pipe TR
22	029932	Inlet pipe - rear right SR
23	029933	Inlet pipe - rear left SR
24	029931	Inlet pipe A
25	029934	Inlet pipe R
26a	035129	Burner spring A
26b	035120	Burner spring SR
26c	035121	Burner spring R
27	035122	Burner spring
28	085102	Burner bush

30c	107057	Burner thermocouple L = 450
30a	107064	Burner thermocouple L = 250
30b	107068	Burner thermocouple L = 650 mm
31	214057	Nut
32a	101182	Injector NATURAL GAS Ø 0.85 - A
32h	101233	Injector ULPG Ø 0.95 - TR
32g	101244	Injector Rapid diam 0.91 - LPG
32d	101335	Injector NATURAL GAS Ø 1.60 - TR
32b	101260	Injector NATURAL GAS Ø 1.12 - SR
32e	101262	Injector ULPG Ø 0.53 - A
32f	101263	Injector ULPG Ø 0.70 - SR
32c	101273	Injector Rapid diam 1.45 - NG
33a	215486	Burner-cup A
33b	215487	Burner-cup SR
33c	215488	Burner-cup R
34	215489	Burner cup
35a	084028	Spark plug L=250mm (auxiliary burner)
35b	084029	Spark plug L=630mm (semirapid &
35c	084047	Spark plug TR L=600 mm
36	035094	Igniter spring
37	342G750004	5 gas inlet pipe
38a	106249	Tap Auxiliary diam 0.27
38b	106252	Tap Semi-rapid diam 0.34
38c	106253	Tap Rapid diam 0.44
38d	106254	Tap Triple-ring diam 0.65
39	001202	Screw
40	067008	Elbow
41	053024.1	Sealing washer
42	094616	Tap bracket
43	411G901	Burner casing
44	1031126	Ignition switches
45	094794	Burner bracket A
46	094716	Burner bracket SR
47	094717	Burner bracket R
48	094718	Burner bracket
49	051054	Terminal block
50	054131	Cord 3x0.75
51	001217	Screw

52	094335	Fixing bracket
53	094389	Bracket
54	103827	Cable
55	6300088	KIT IGNITION COIL