


SECTION 1

FW-55BU40H /KD-55X9*H

Sony CONFIDENTIAL
For Authorized Servicer

1-2. BOARD LOCATION

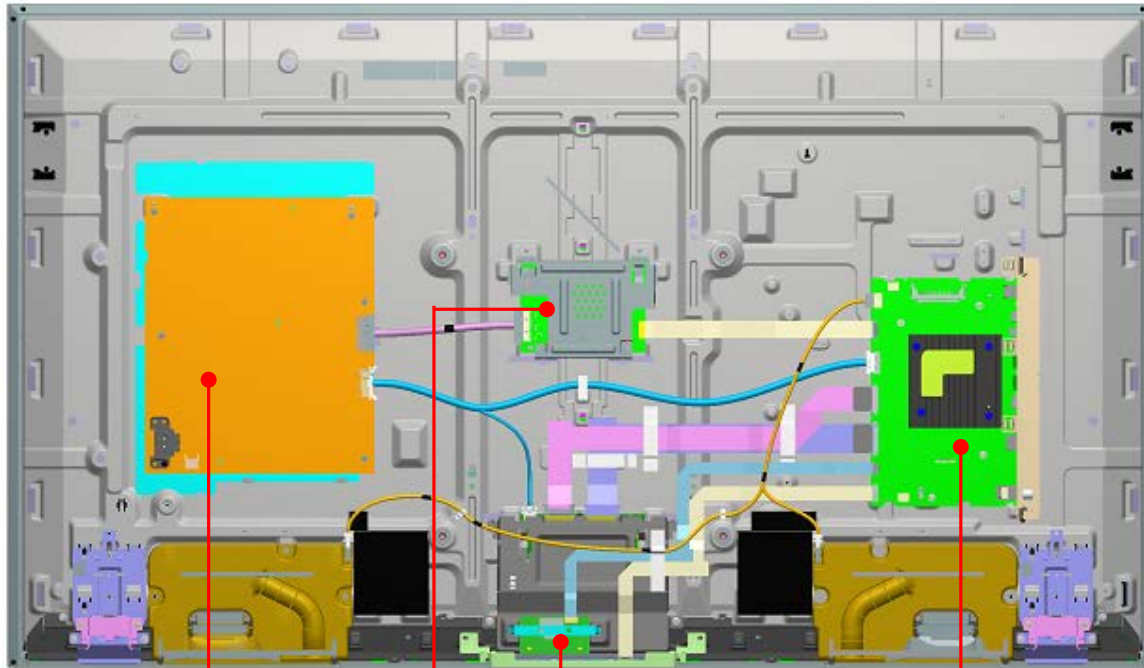


POWER BOARD

LOCAL DIMMING BOARD

WLAN/BT MODULE

MAIN BOARD

SMART CORE

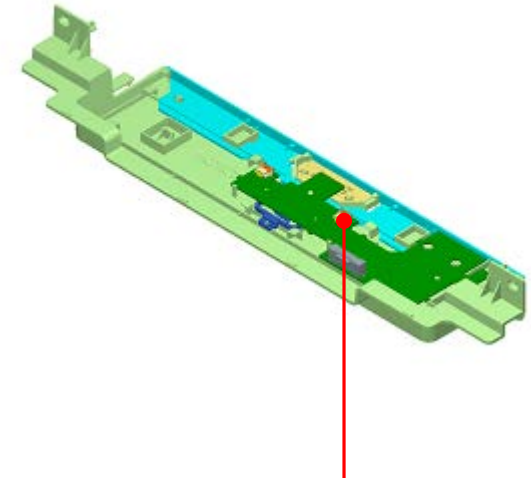

RECEIVER BOARD
NOTE:
Power-on switch is
located on this board

SECTION 1


FW-55BU40H /KD-55X9*H

Sony CONFIDENTIAL
For Authorized Servicer

- Place the TV set facing downwards on a stable, level surface before disassembly and assembly of parts.
-  and shaded parts are critical for safety. Replace only with part number specified.
-  Parts contain confidential information. Strictly follow the instruction whenever the components are repaired and/or replaced.

- \ (*) Parts are not stocked since they are seldom required for routine service. Some delays should be anticipated when ordering these components.
- \ Picture provided in this section might have slight difference from the actual sets.
- \ The reference number beside the part indicates the disassembly sequence.
- \ Remove screws before disassembly. Unplug connectors before disassembly

1-4 EXPLODED VIEW AND PART LIST

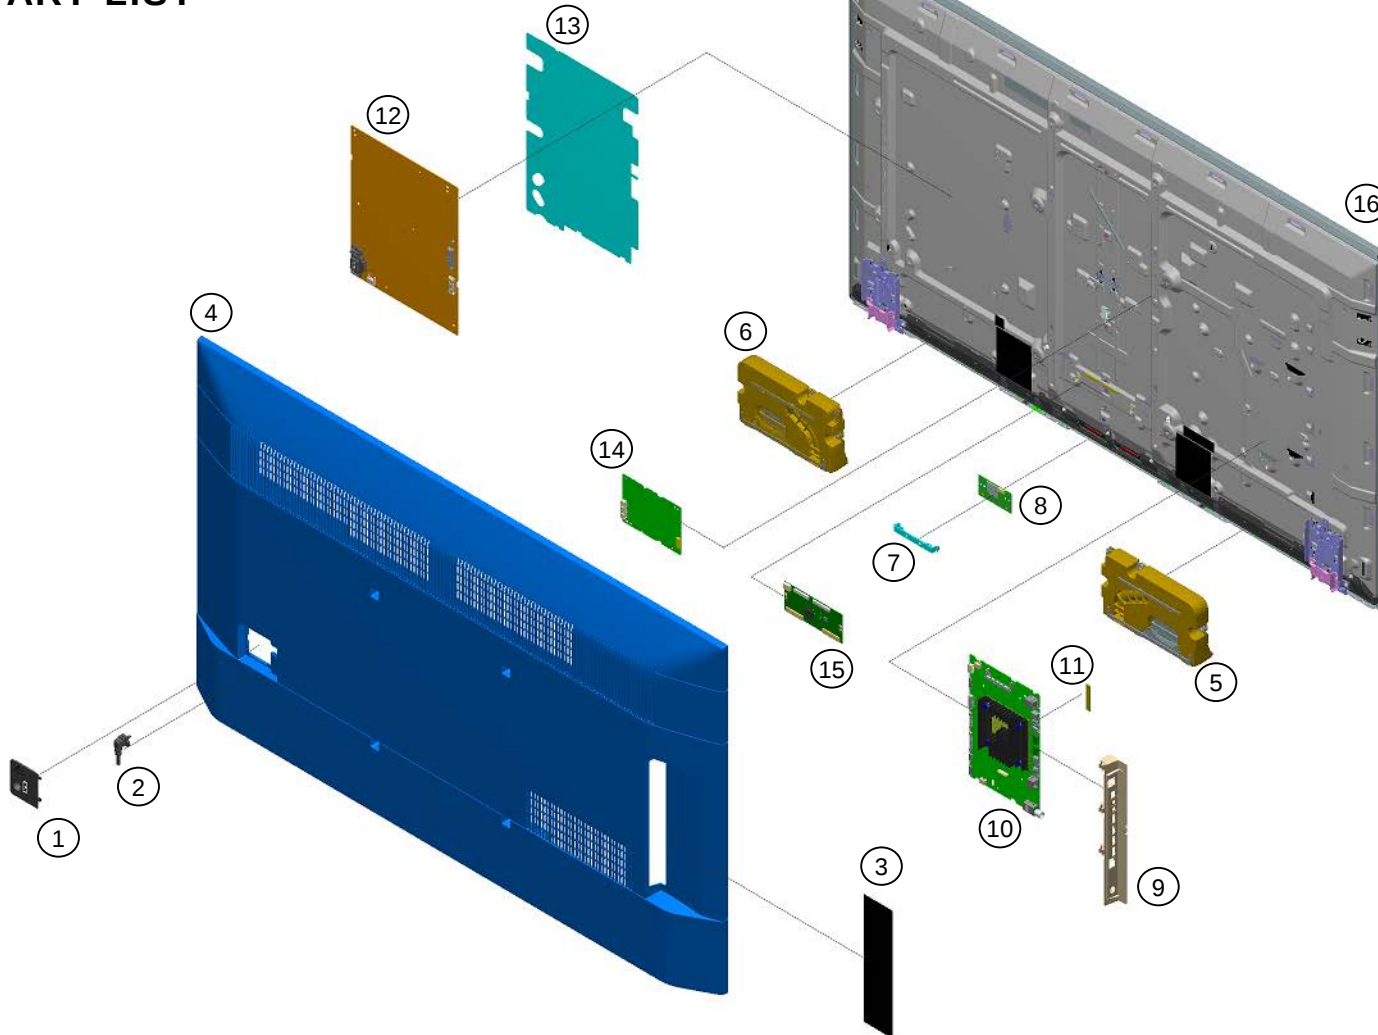

Stand




SECTION 2

FW-65BU40H /KD-65X9*H

Sony CONFIDENTIAL
For Authorized Servicer

2-2. BOARD LOCATION

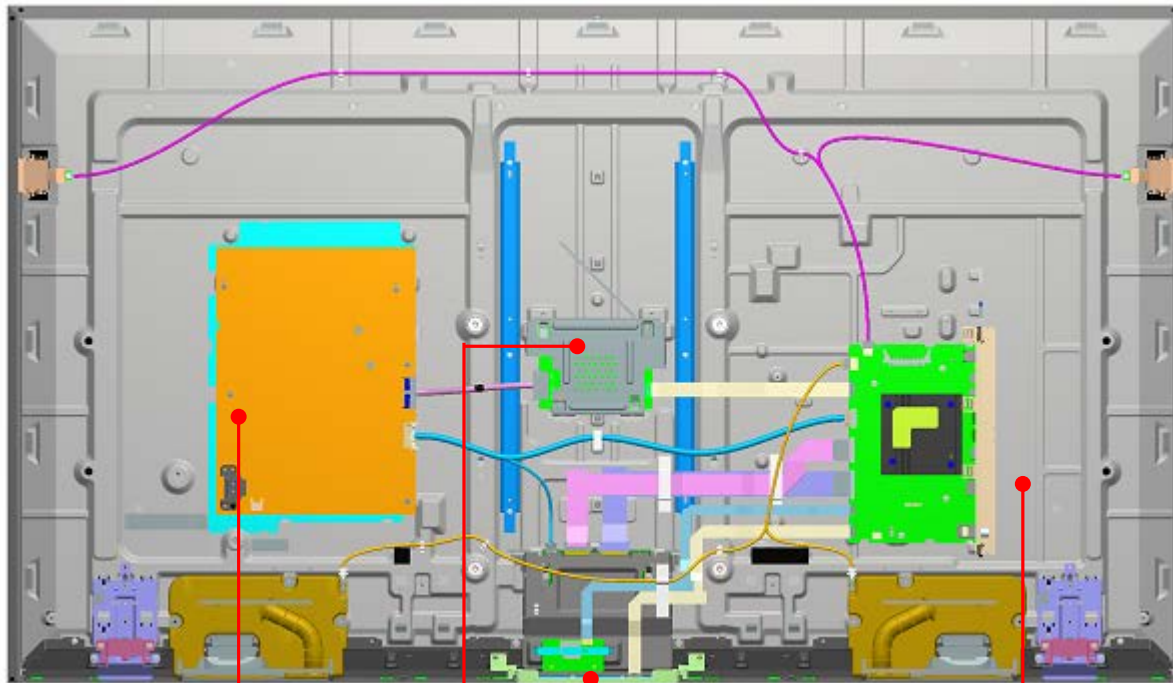


POWER BOARD

LOCAL DIMMING BOARD


WLAN/BT MODULE

MAIN BOARD

SMART CORE

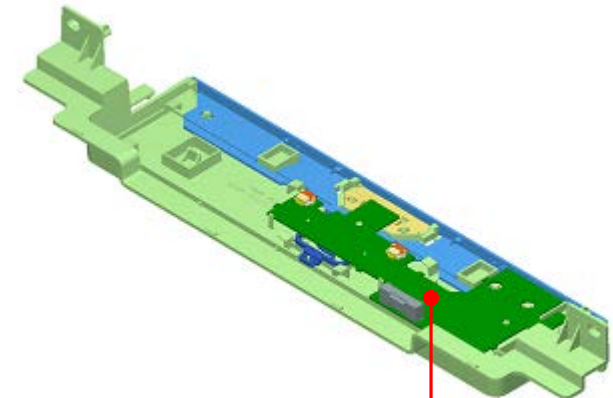

RECEIVER BOARD
NOTE:
Power-on switch is
located on this board

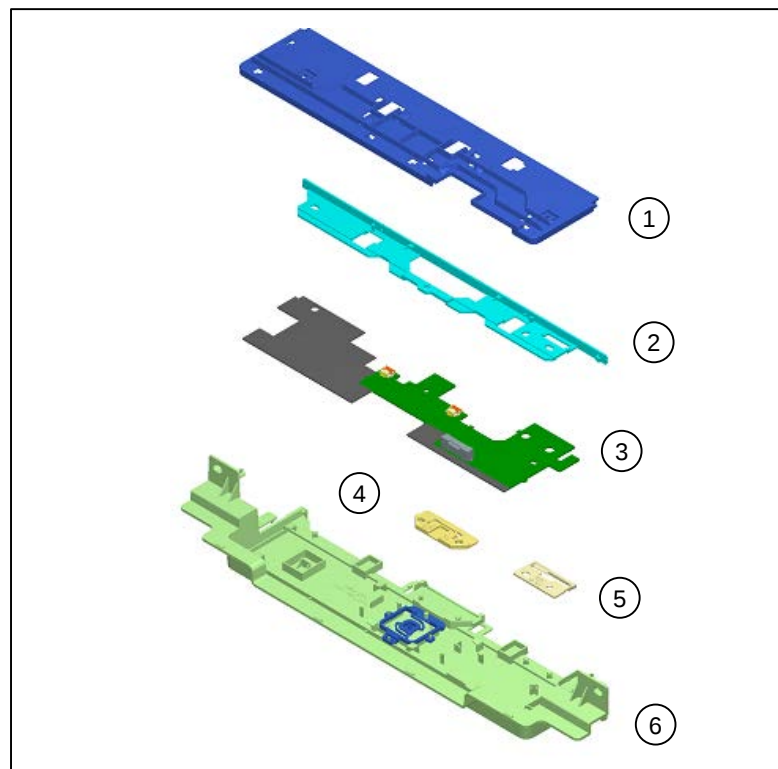SMART CORE**PART LIST**

REF. NO	PART NO.	DESCRIPTION
1	5-009-259-12	COVER, TOP(BNN)
2	5-016-947-21	OP, INNER(BNN) A (Except KD-55/65/75 X9088H)
2	501694741	OP, INNER(BNN) A (KD-55/65/75 X9088H only)
3	A-5015-202-A	HT1_4K_CT_NX MOUNT
4	5-009-264-11	LIGHT, GUIDE ILM(BNN)
5	5-009-265-11	LIGHT, GUIDE OPT(BNN)
6	5-009-262-11	COVER, BTM(PCH)