


5. REPAIR PARTS LIST


DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL SECTION

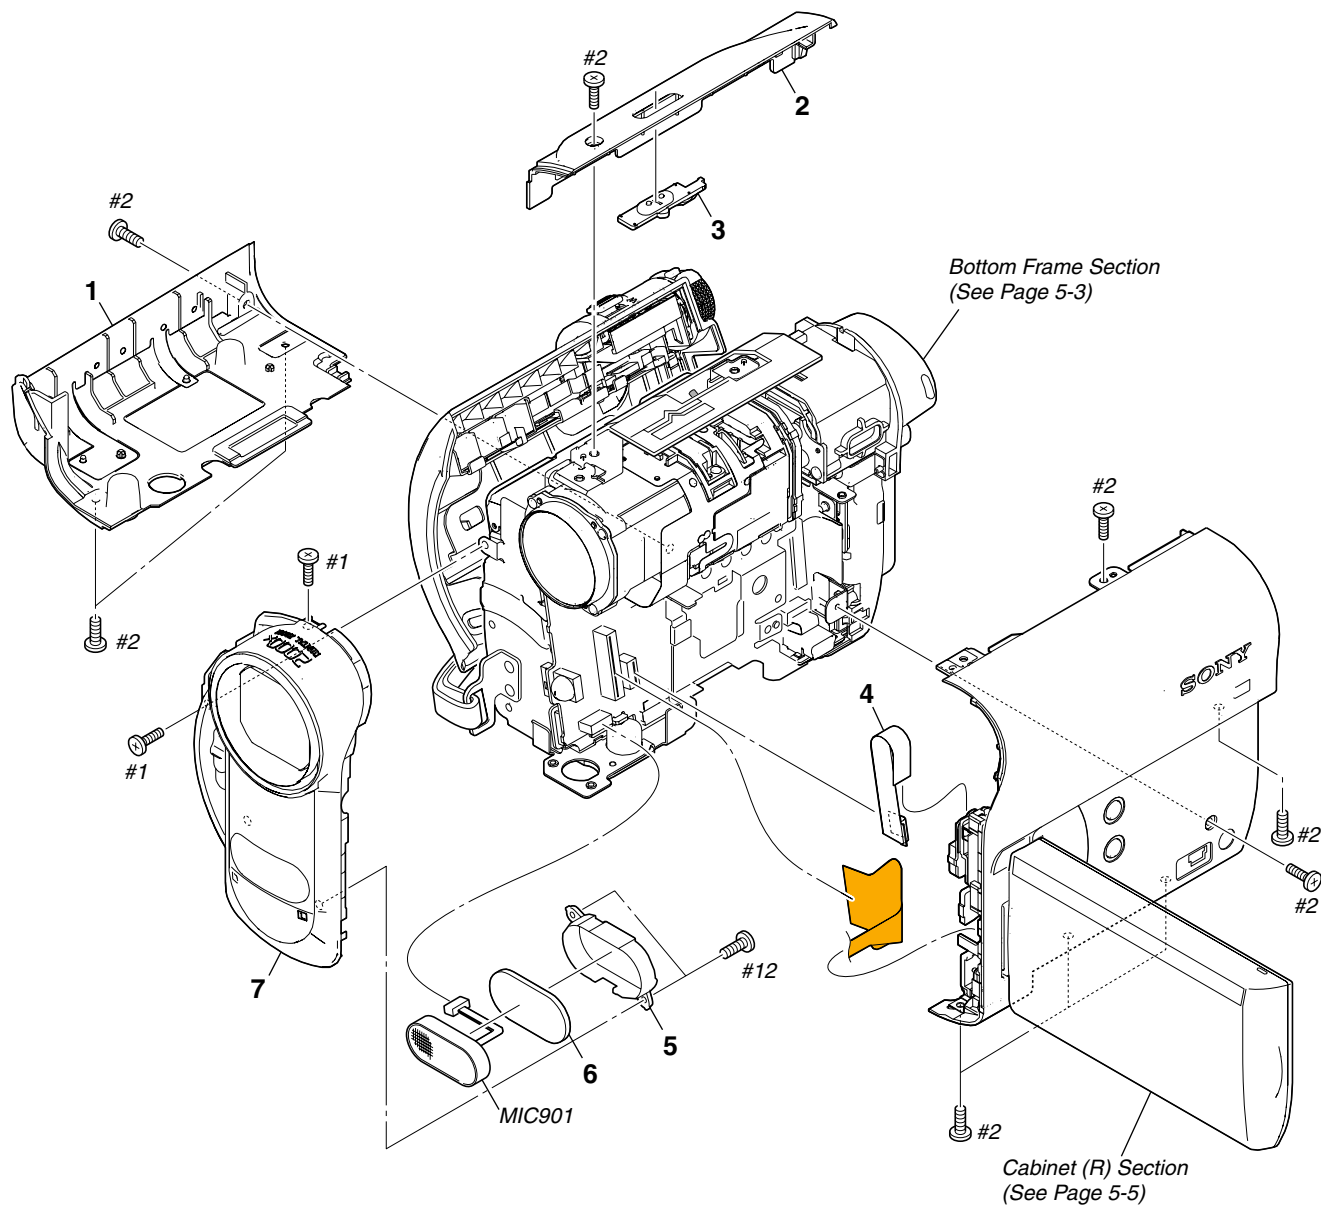

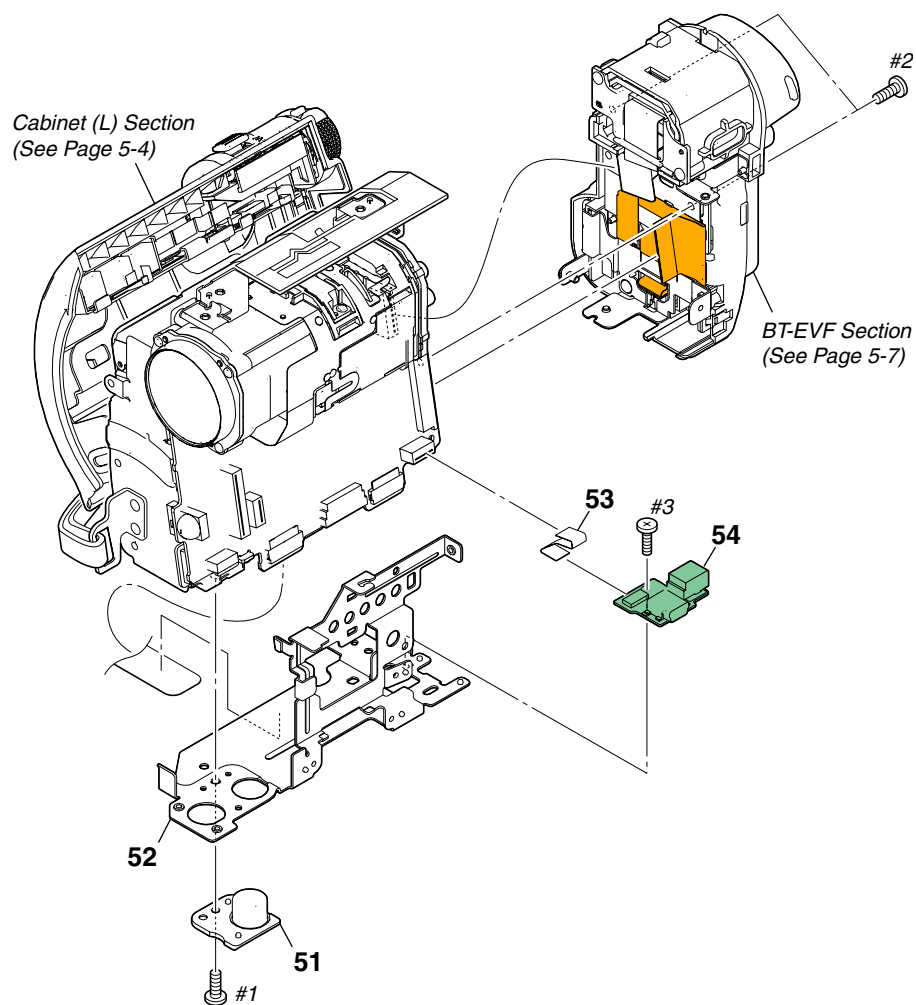5. REPAIR PARTS LIST**DISASSEMBLY****HARDWARE LIST****5-1-2. BOTTOM FRAME SECTION**

5. REPAIR PARTS LIST


DISASSEMBLY

HARDWARE LIST

5-1-3. CABINET (L) SECTION

ns: not supplied

Mechanism Deck Section
(See Page 5-8)

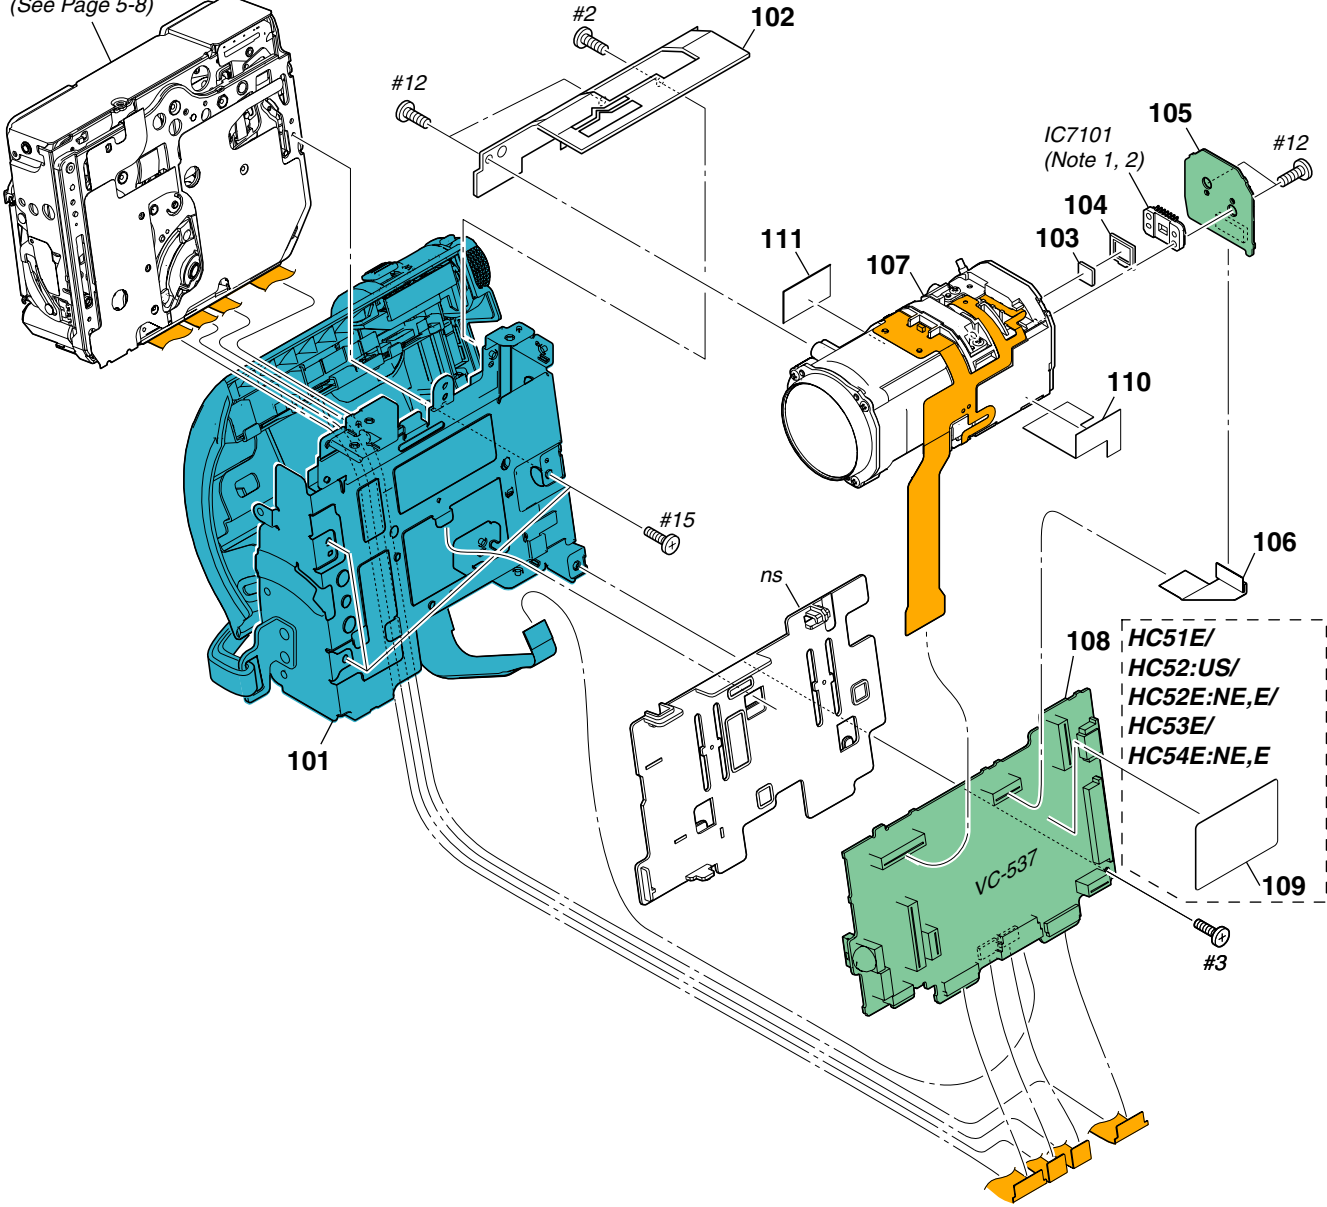


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-4. CABINET (R) SECTION

ns: not supplied

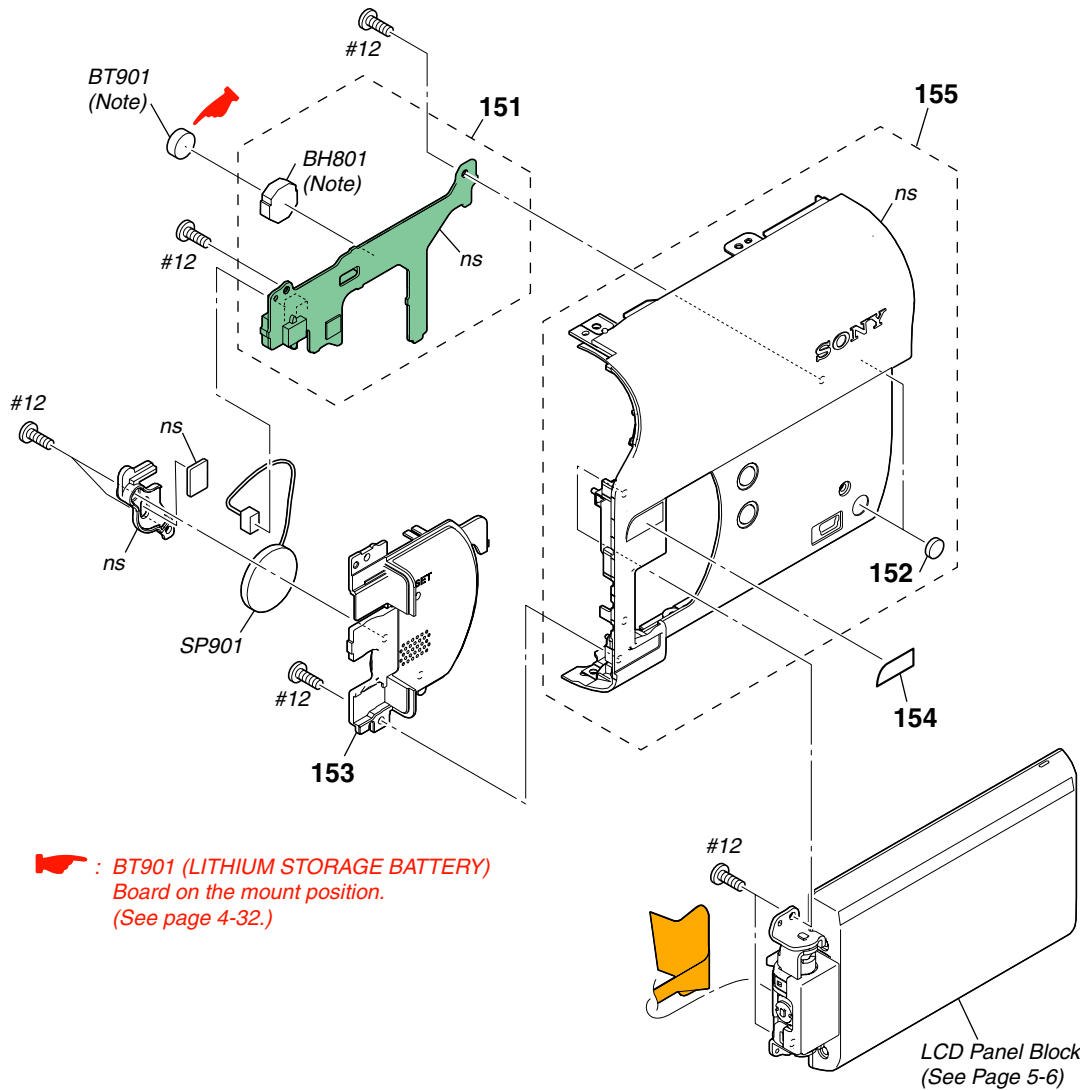


5. REPAIR PARTS LIST

HARDWARE LIST

5-1-5. LCD PANEL BLOCK


ns: not supplied

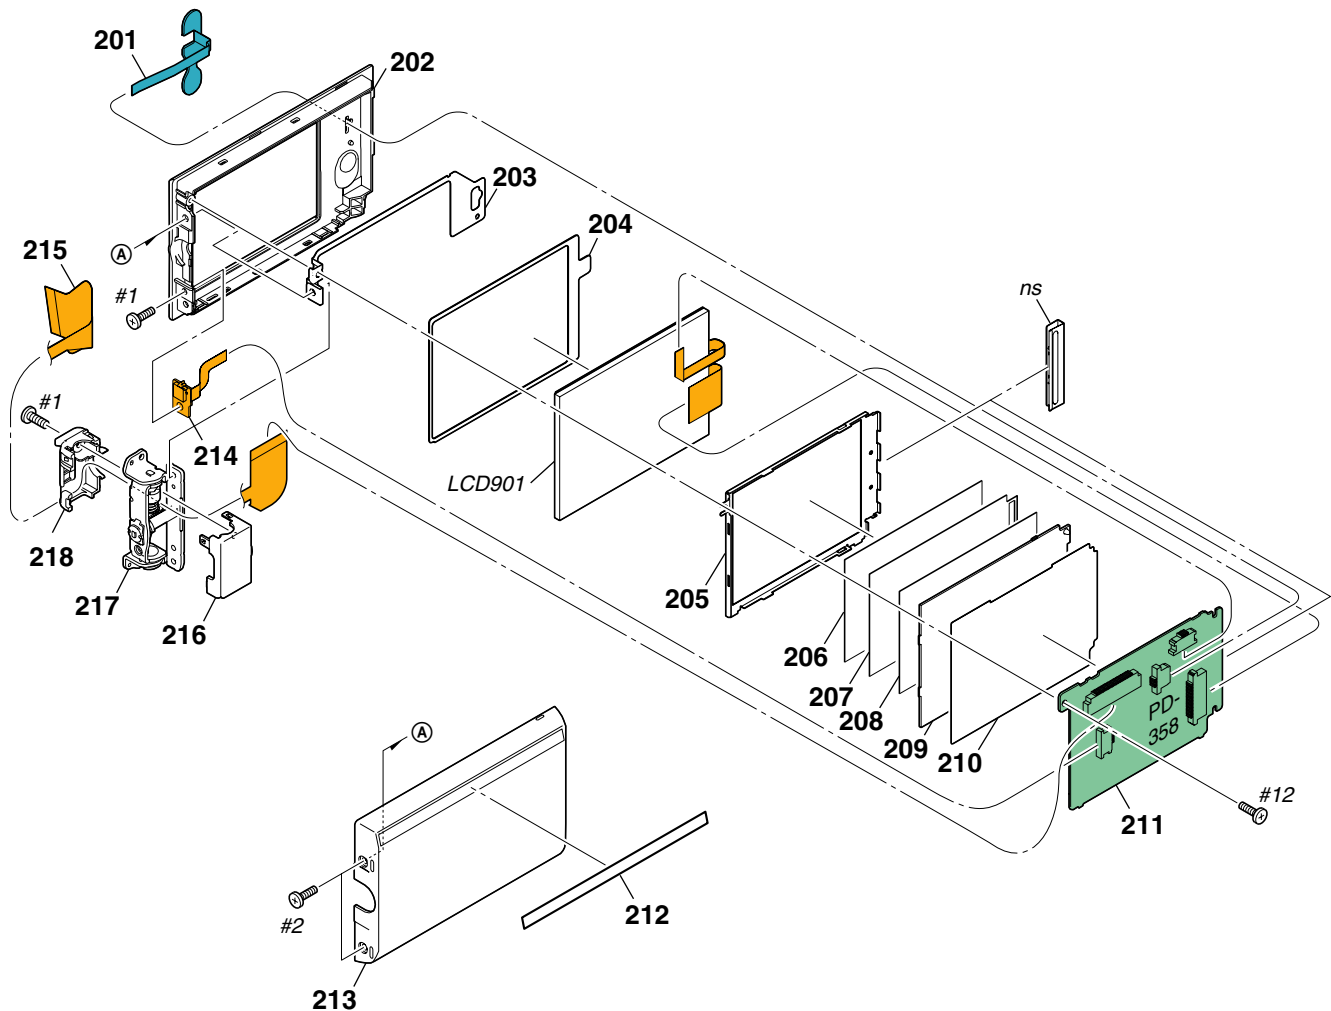

5. REPAIR PARTS LIST

HARDWARE LIST


5-1-6. BT-EVF SECTION

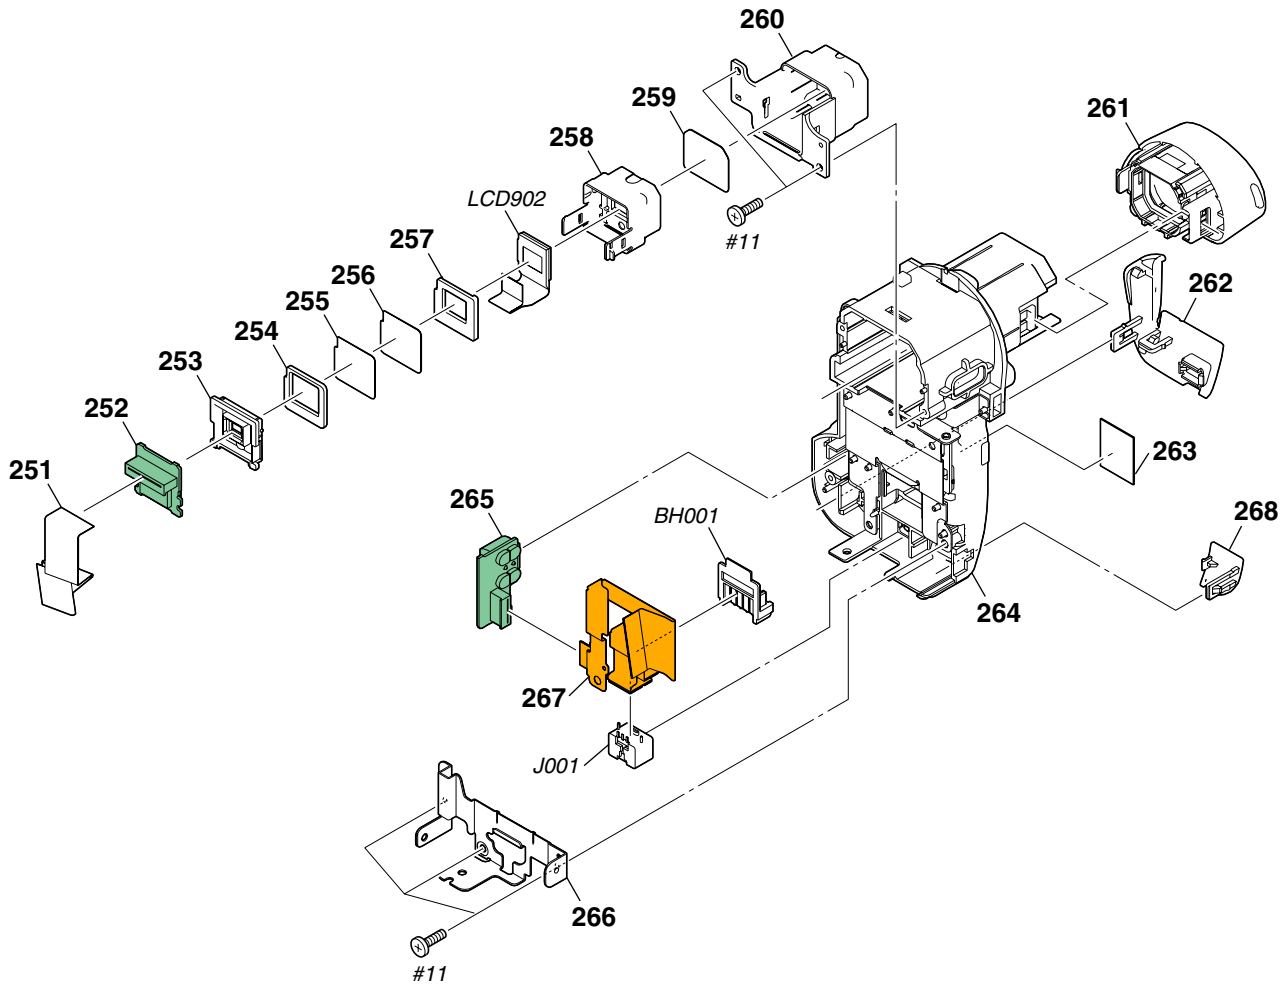

5. REPAIR PARTS LIST


5-1-8. LS/MECHANICAL CHASSIS BLOCK ASSEMBLY-1

ns: not supplied

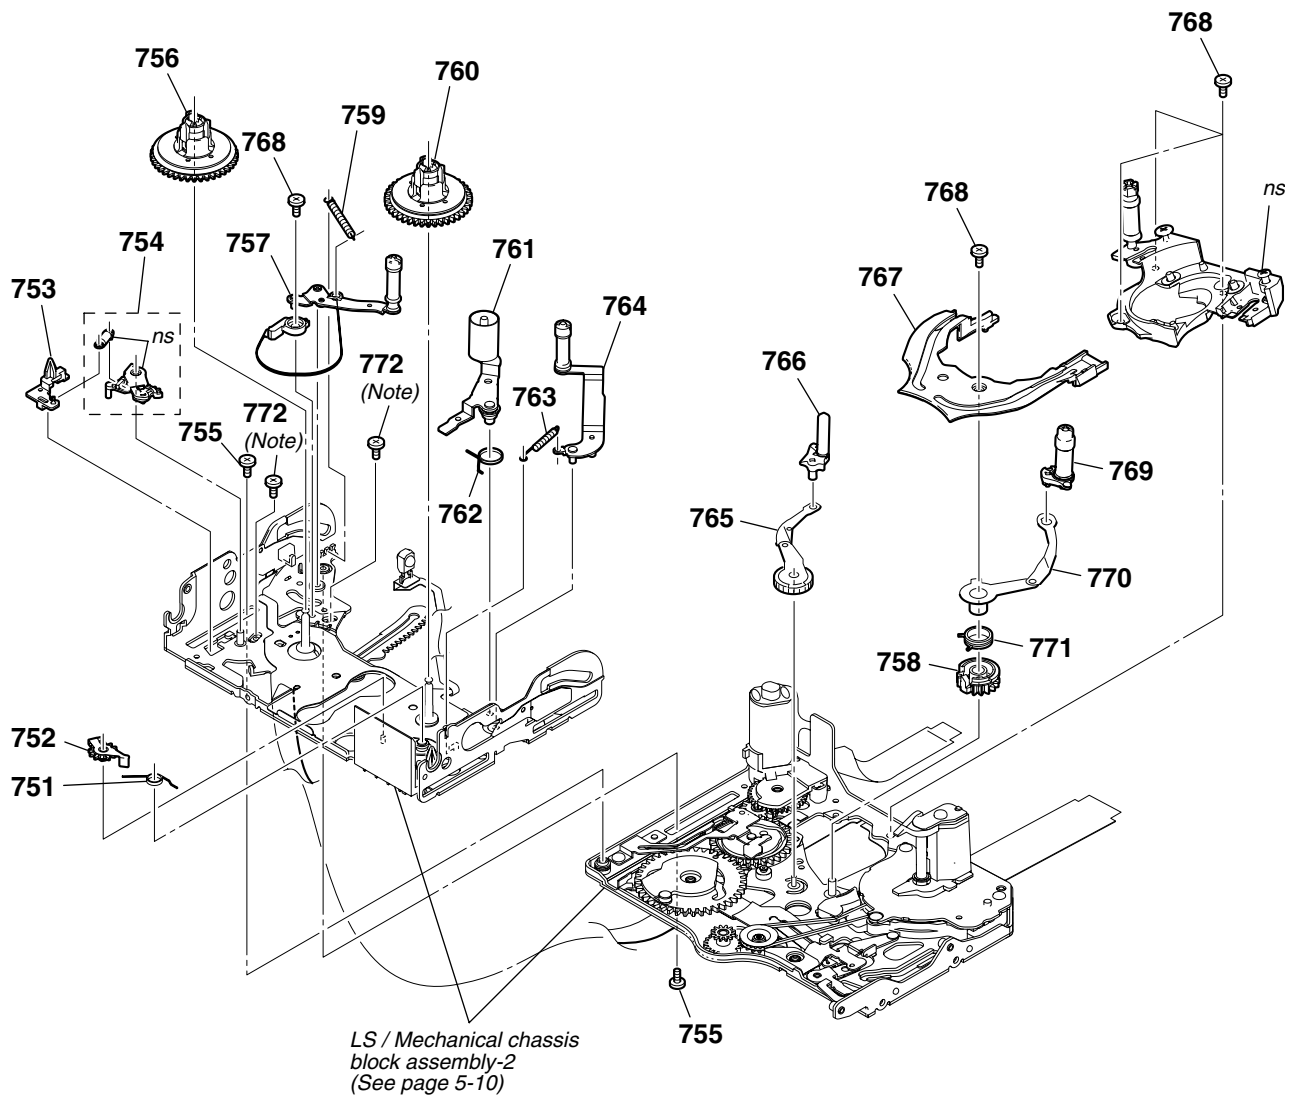


5. REPAIR PARTS LIST


5-1-9. LS/MECHANICAL CHASSIS BLOCK ASSEMBLY-2

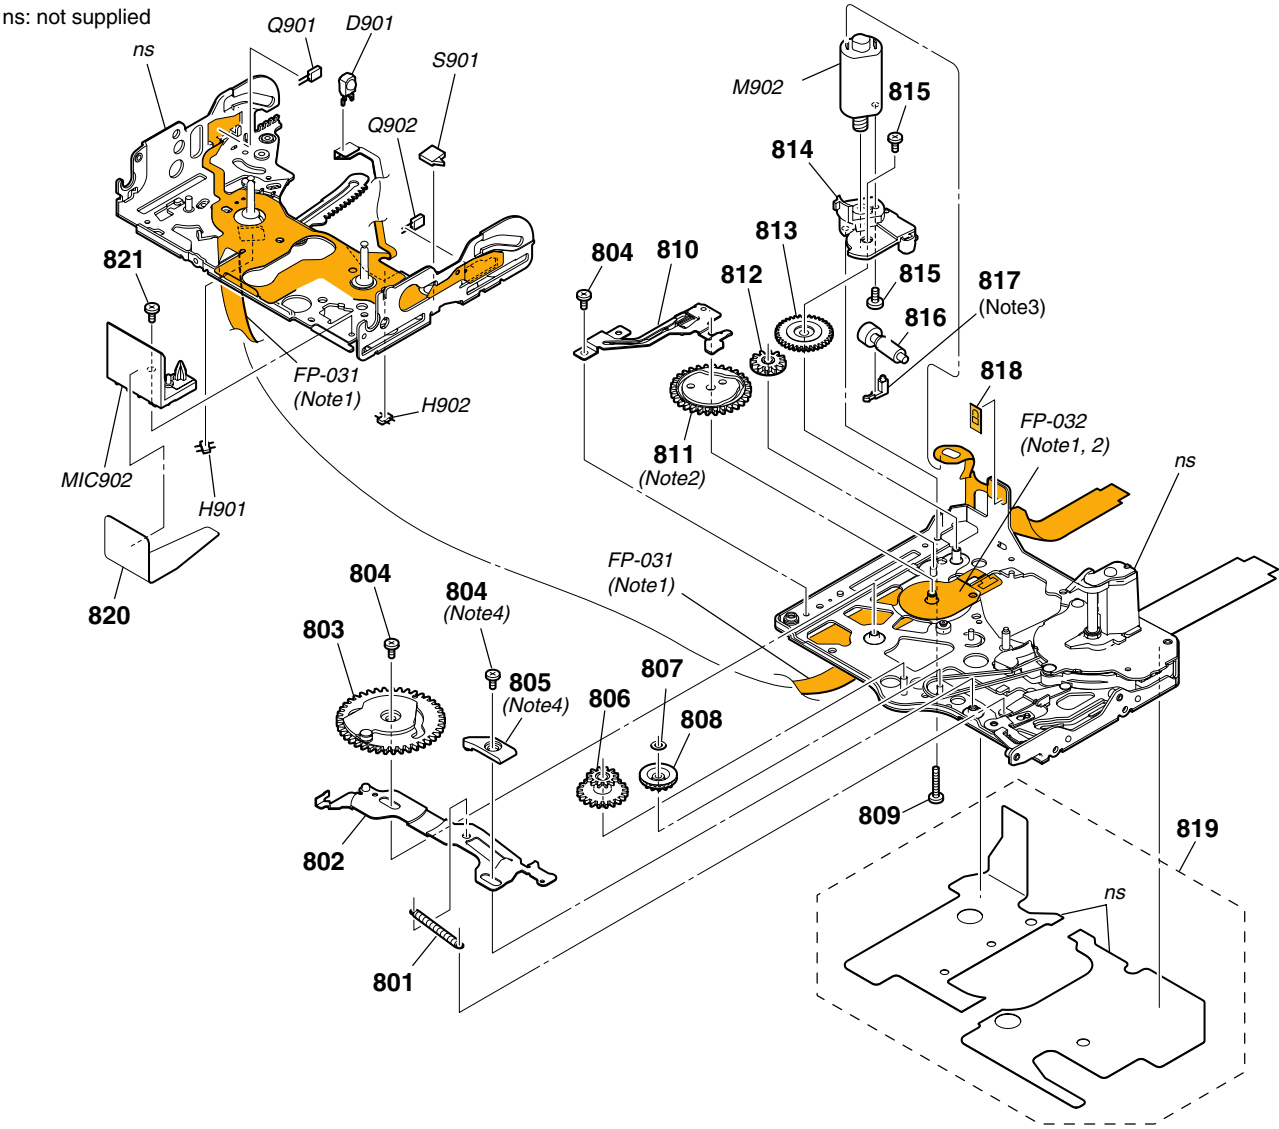


Checking supplied accessories.

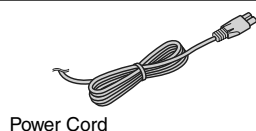

Power Cord

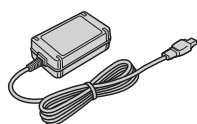

AC Adaptor

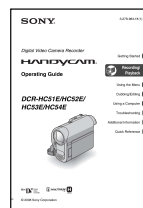

Operating Guide
(DCR-HC52/Hc54)

 
 


Conversion (2P) Adaptor




Conversion (2P) Adaptor

Operating Guide
(DCR-HC51E/Hc52E/Hc53E/Hc54E)




A/V Connecting Cable

 

USB Cable

 3-286-462-71 (THAI) (TH)



DVD-ROM
"ENJOY HANDYCAM"

• Refer to page 5-1 for mark .