


6-4. KDL-46CX520, KDL- 46CX523


6-4-1. Disassembly, Exploded View

- Remove screws before disassembly.
Details of screws Section 6-4-2.
- Unplug connectors before disassembly.
Please refer to Connectors information.

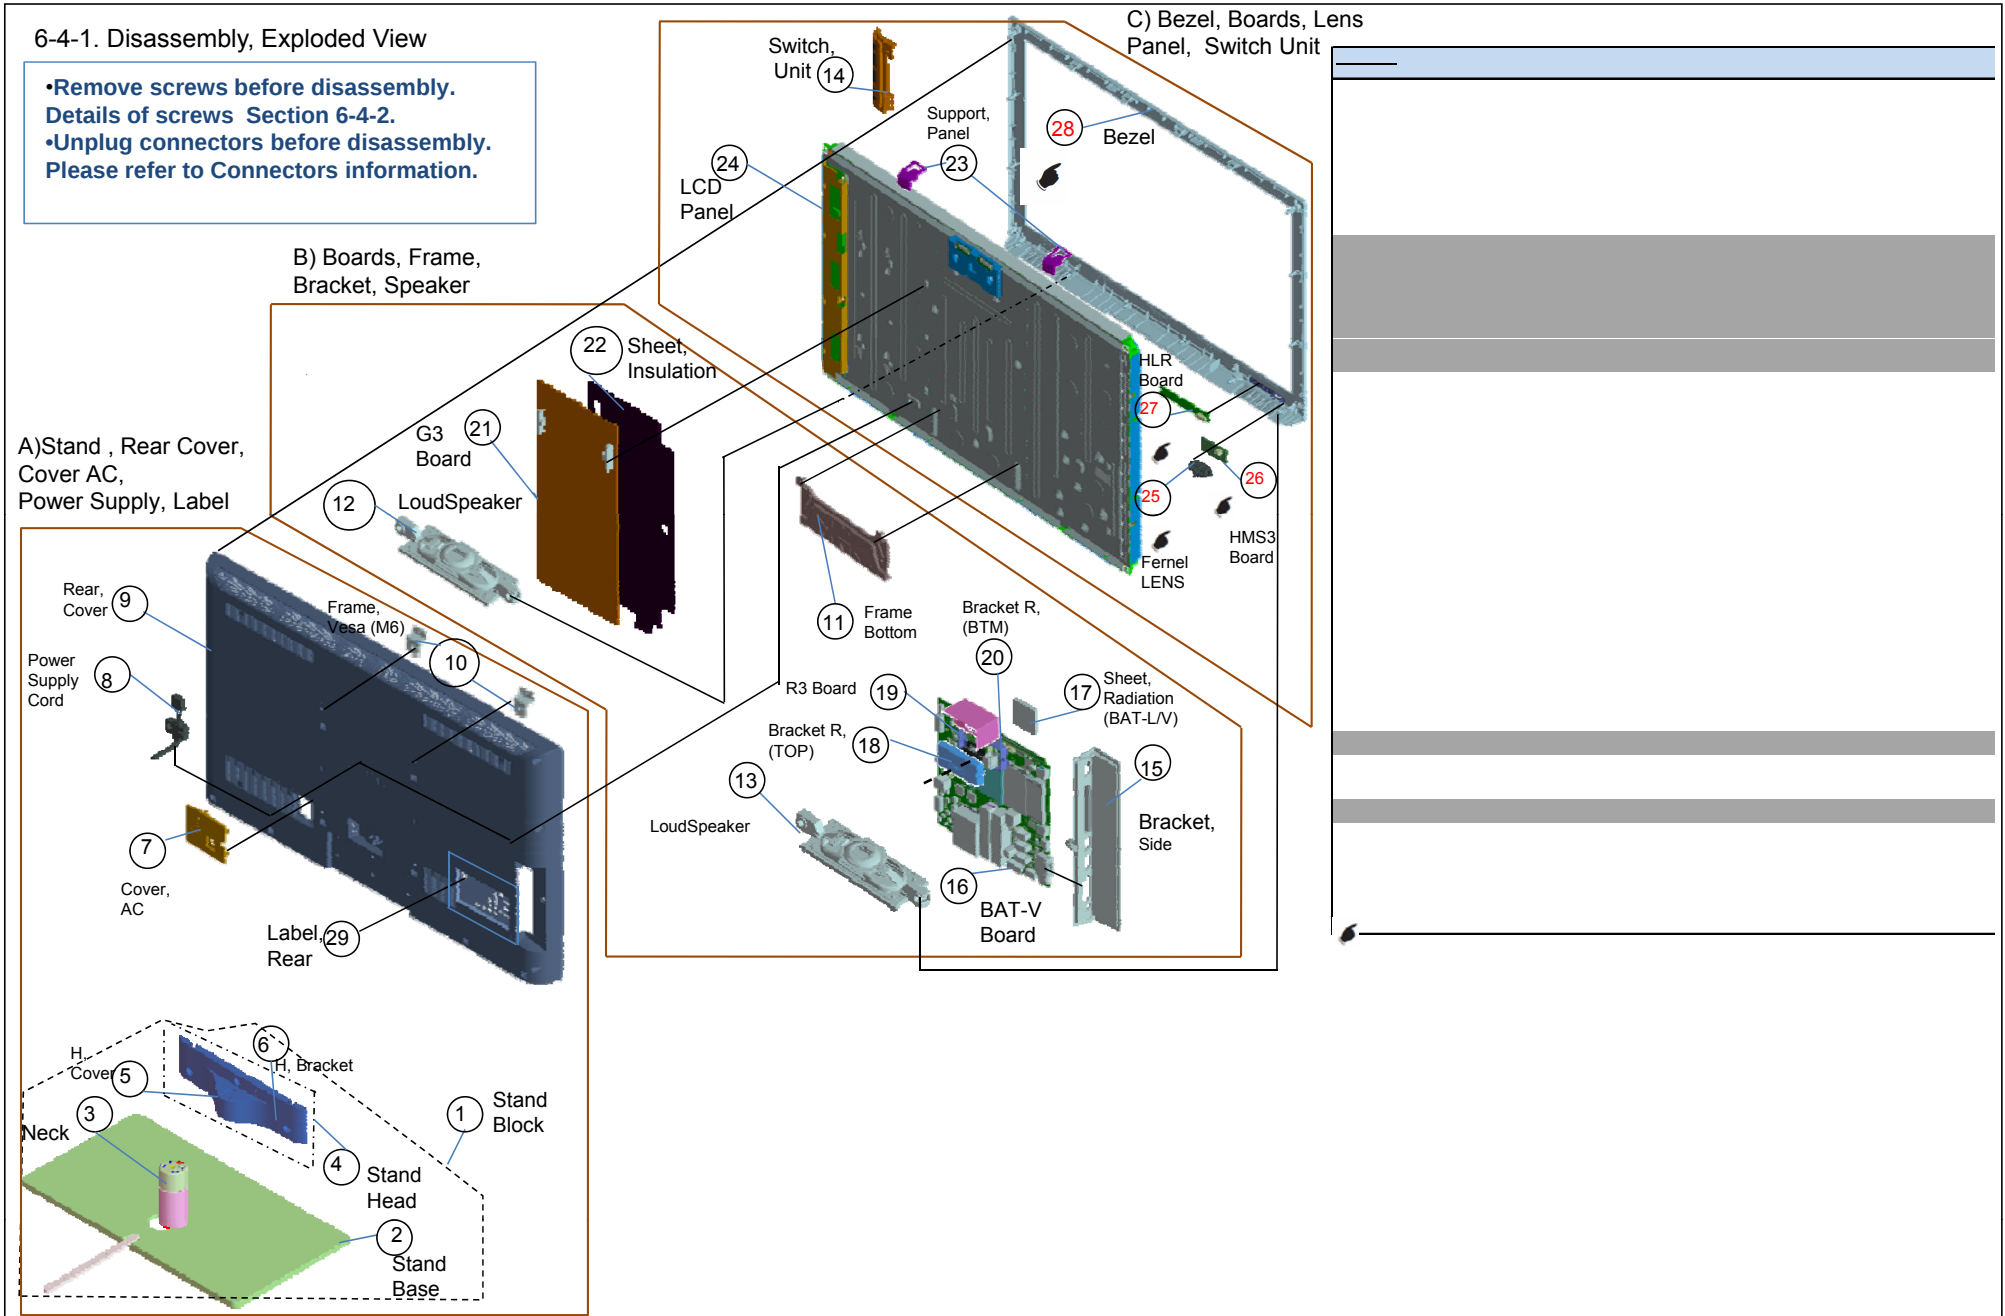

6-4. KDL-46CX520, KDL- 46CX523

6-4-2. Screws

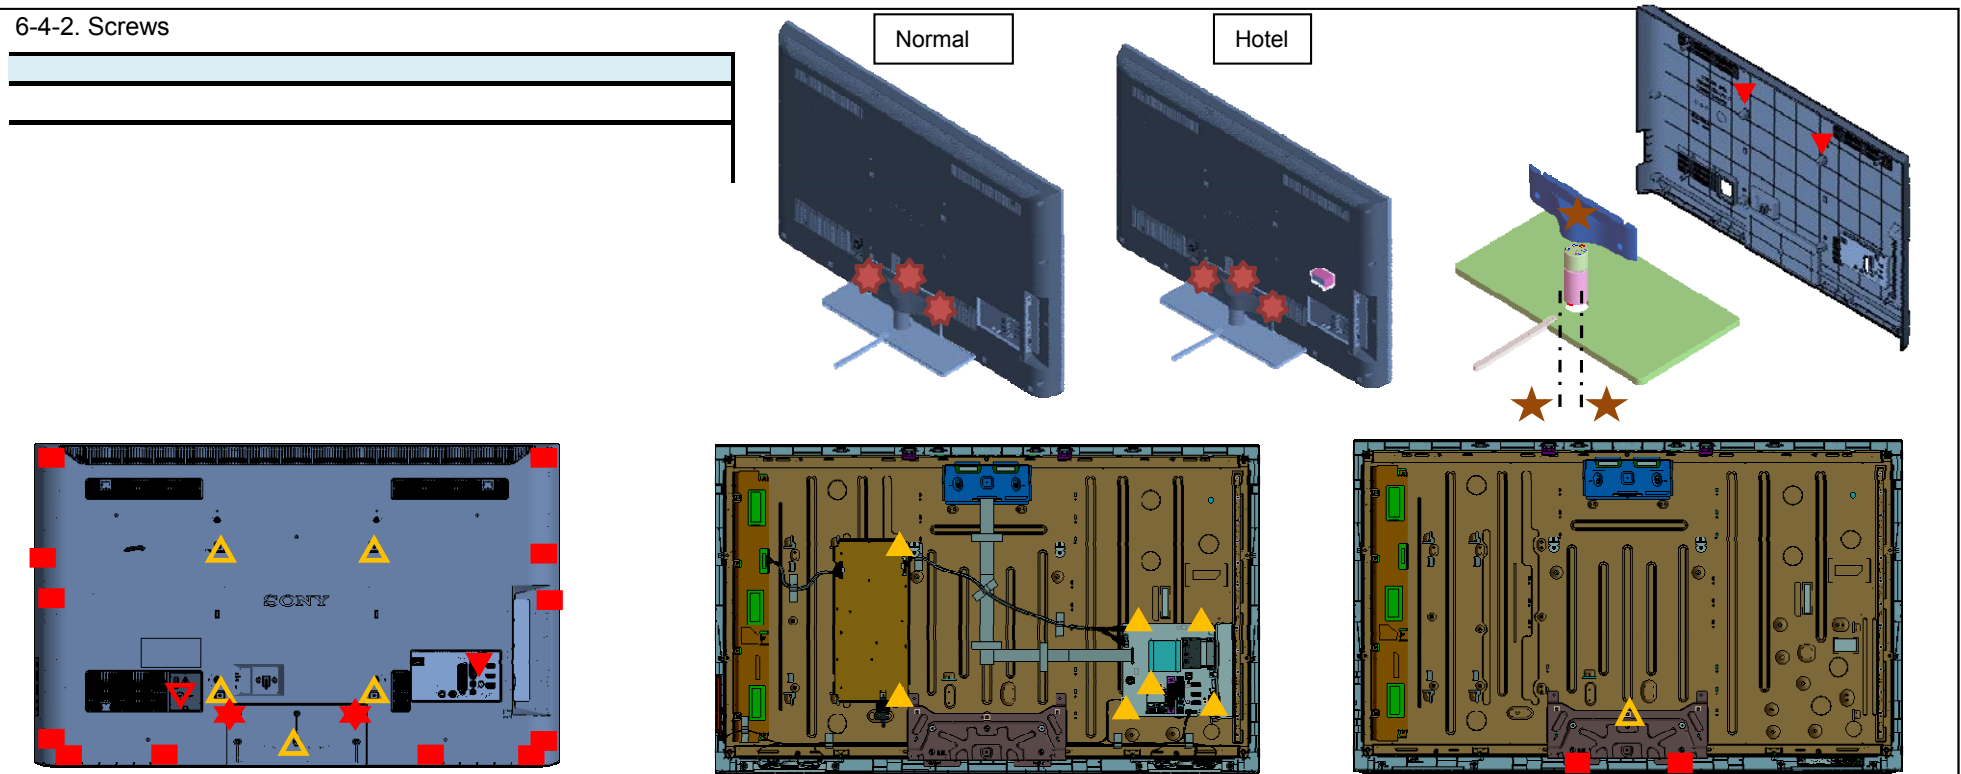

6-4-3. Connectors

