HAP-S1 Ver. 1.2

SECTION 6 EXPLODED VIEWS

Note:

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

Color Indication of Appearance Parts Example:

KNOB, BALANCE (WHITE) . . . (RED)

↑ ↑

Parts Color Cabinet's Color

Abbreviations

AUS : Australian model
CH : Chinese model
CND : Canadian model

Color variations

Black : US, Canadian, AEP, UK models

Silver : All models


The components identified by mark \triangle or dotted line with mark \triangle are critical for safety.

Replace only with part number specified.

Les composants identifiés par une marque \triangle sont critiques pour la sécurité.


Ne les remplacer que par une pièce portant le numéro spécifié.

6-1. SIDE PANEL SECTION

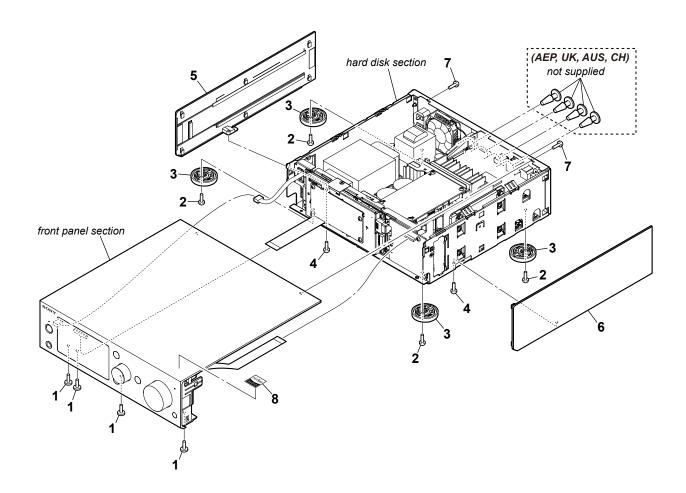


6-2. FRONT PANEL SECTION

· Rear bottom view

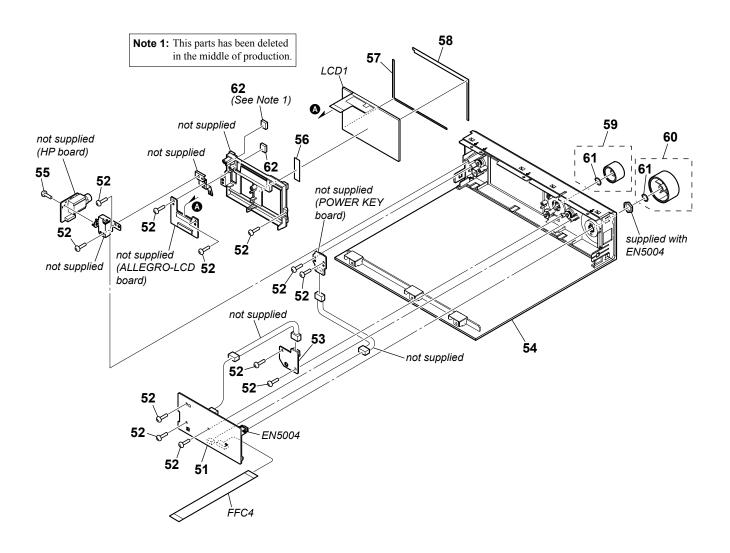

Note 2: Wires (flat type) for service is straight. When replacing wire (flat type), install it after bending it in the same form as that before replacement.


6-3. HARD DISK SECTION

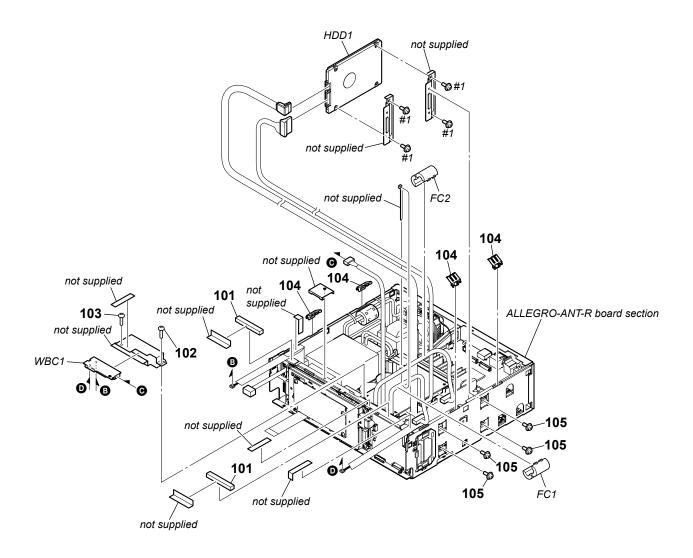

Note 1: When the WLAN/BT COMBO card (Ref. No. WBC1) is replaced, refer to "NOTE OF REPLACING THE WLAN/BT COMBO CARD AND CHECKING METHOD OF NETWORK CONNECTION" on page 5.


Note 2: When the hard disk drive (Ref. No. HDD1) is replaced, refer to "NOTE OF REPLACING THE HARD DISK DRIVE (Ref. No. HDD1)" on page 4.

6-4. ALLEGRO-ANT-R BOARD SECTION

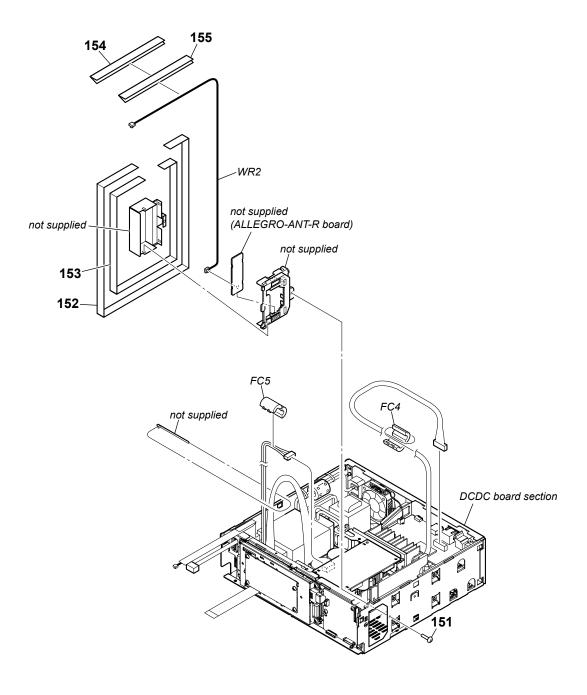


Note: When the coaxial (U.FL connector) cable (Ref. No. WR2) is replaced, refer to "NOTE OF REPLACING THE WLAN/BT COMBO CARD AND CHECKING METHOD OF NETWORK CONNECTION" on page 5.

6-5. DCDC BOARD SECTION

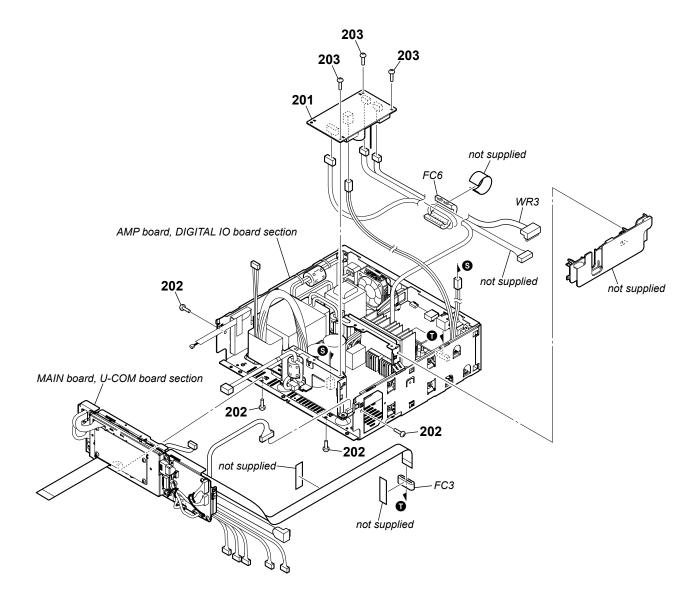

6-6. MAIN BOARD, U-COM BOARD SECTION

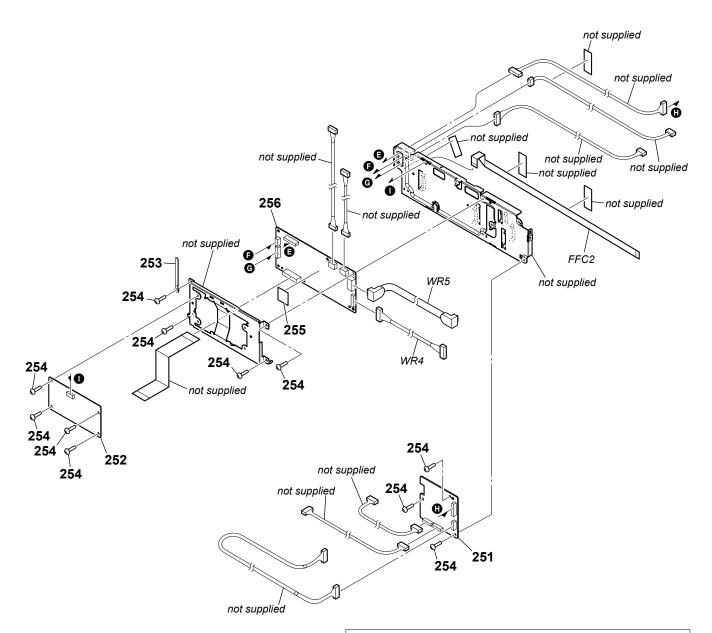


Note 1: When the complete MAIN board is replaced, refer to "NOTE OF REPLACING THE COMPLETE MAIN BOARD" and "NOTE OF REPLACING THE WLAN/BT COMBO CARD AND CHECKING METHOD OF NETWORK CONNECTION" on page 5.

Note 2: Wires (flat type) for service is straight.


When replacing wire (flat type), install it after bending it in the same form as that before replacement.

6-7. AMP BOARD, DIGITAL IO BOARD SECTION

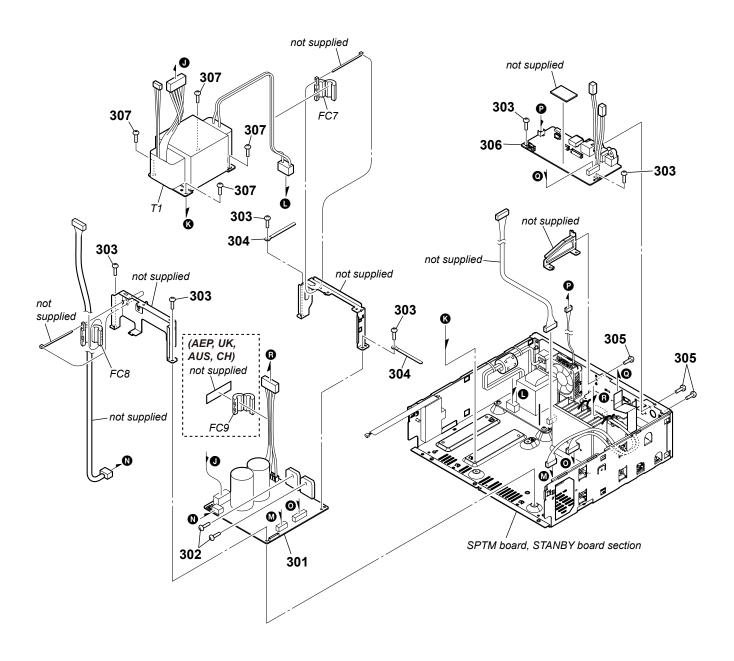

Note: When the complete AMP board is replaced, refer to "NOTE OF REPLACING THE IC350 AND IC351 ON THE AMP BOARD AND THE COMPLETE AMP BOARD" on page 4.

6-8. SPTM BOARD, STANBY BOARD SECTION

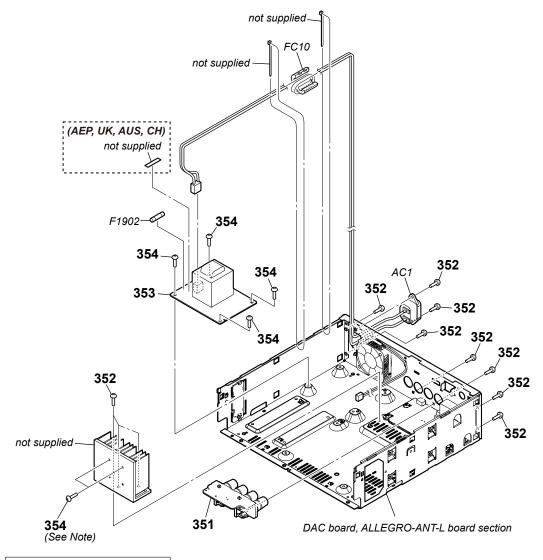

Note: Two screws have been added in the middle of production.

6-9. DAC BOARD, ALLEGRO-ANT-L BOARD SECTION

