


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	X-3369-299-1	CABINET (FRONT) ASSY		12	3-893-840-01	PLATE (ANTENNA), CONTACT	
2	3-881-938-00	STRAP, HAND		13	3-914-396-01	CABINET (REAR)	
3	3-914-390-01	BUTTON (JOG)		14	3-893-838-01	L.I.D. BATTERY CASE	
4	3-914-400-01	BUTTON (STANDBY)		15	9-911-844-XX	CUSHION (BATTERY CASE LID)	
5	3-914-391-01	BUTTON (BAND)		16	3-893-846-01	FOOT, RUBBER	
6	3-914-389-01	BUTTON (10 KEY)		17	4-924-242-11	SCREW (M3X6), FLAT HEAD	
7	3-893-825-02	BUTTON (SLEEP)		18	3-893-845-01	TERMINAL (PLUS MINUS), BATTERY	
8	3-893-829-01	BUTTON (POWER)		19	3-893-839-11	STAND	
9	3-893-862-01	SPRING, COMPRESSION		20	7-624-104-04	STOP RING 2.0 TYPE -E	
10	3-893-835-01	KNOB (LOCK)		21	7-685-152-19	SCREW +BTP 3X25 TYPE2 N-S	
11	3-893-836-01	RETAINER		ANT1	1-501-712-11	ANTENNA, TELESCOPIC	

5-2. CHASSIS SECTION

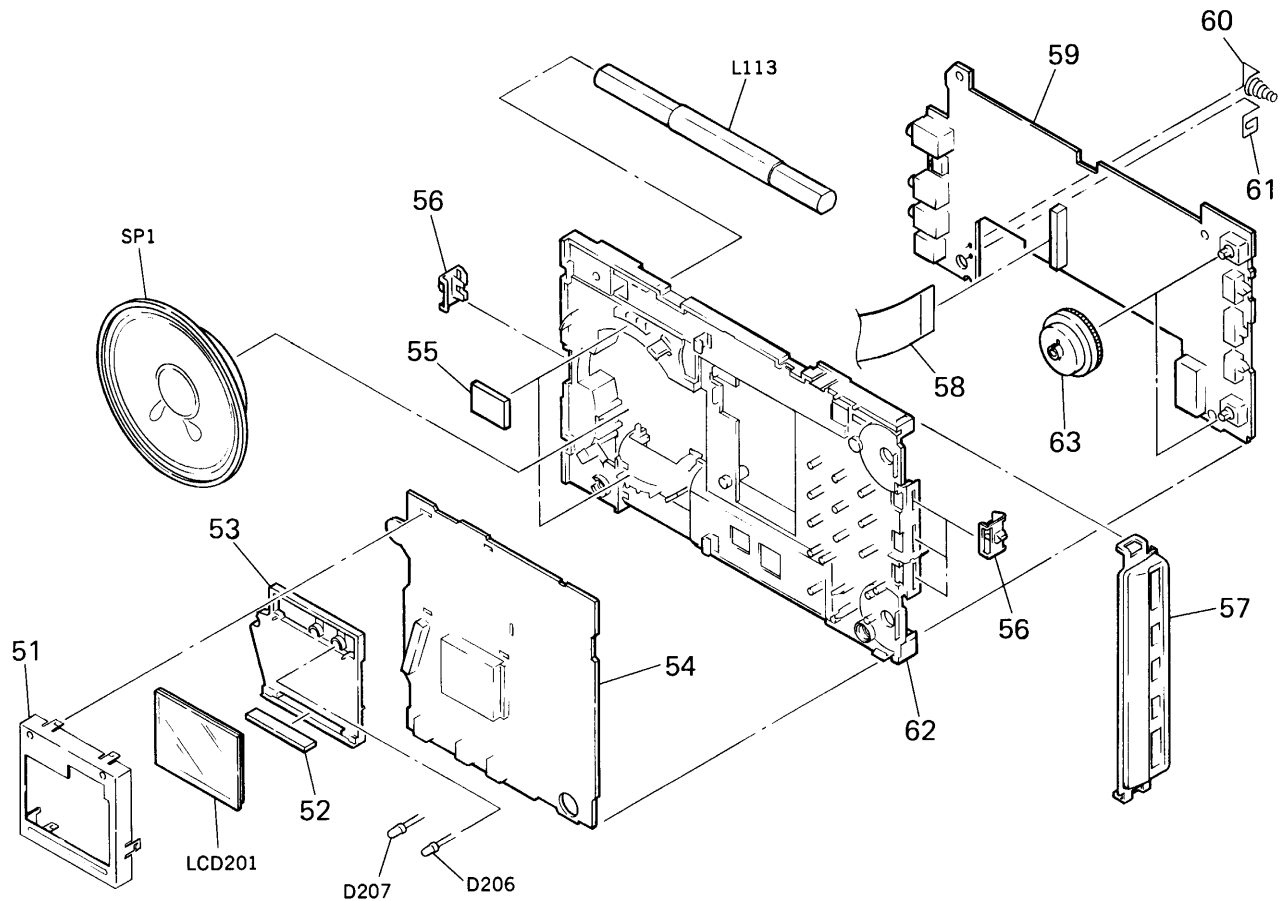

Ref. No.	Part No.	Description	Remark
51	3-914-393-01	HOLDER, LCD	
52	1-537-729-11	CONDUCTIVE BOARD, CONNECTION	
53	3-914-392-01	PLATE, LIGHT GUIDE	
* 54	A-3679-582-A	KEY BOARD, COMPLETE	
55	9-911-841-XX	CUSHION, ANTENNA	
56	3-914-388-01	KNOB (AM MODE)	
57	3-914-399-01	COVER (EXCEPT EA)	
57	3-914-399-11	COVER (EA)	
58	1-765-428-11	WIRE, PARALLEL (FFC) (16 CORE)	
* 59	A-3661-990-A	MAIN BOARD, COMPLETE (EXCEPT EA)	
* 59	A-3661-999-A	MAIN BOARD, COMPLETE (EA)	

Ref. No.	Part No.	Description	Remark
60	3-917-410-01	TERMINAL (-), BATTERY	
61	3-917-414-01	TERMINAL (+), BATTERY	
* 62	3-914-397-01	CHASSIS	
63	3-914-401-01	KNOB (VOL)	
D206	8-719-812-43	LED TLG124A (SYNC LOCK)	
D207	8-719-812-41	LED TLR124 (TUNE)	
L113	1-402-479-21	ANTENNA, FERRITE-ROD (LW/MW)	
LCD201	1-810-543-11	DISPLAY PANEL, LIQUID CRYSTAL	
SP1	1-544-577-11	SPEAKER (7.7CM)	