


18 Exploded View and Replacement Parts List

18.1. Indoor Unit

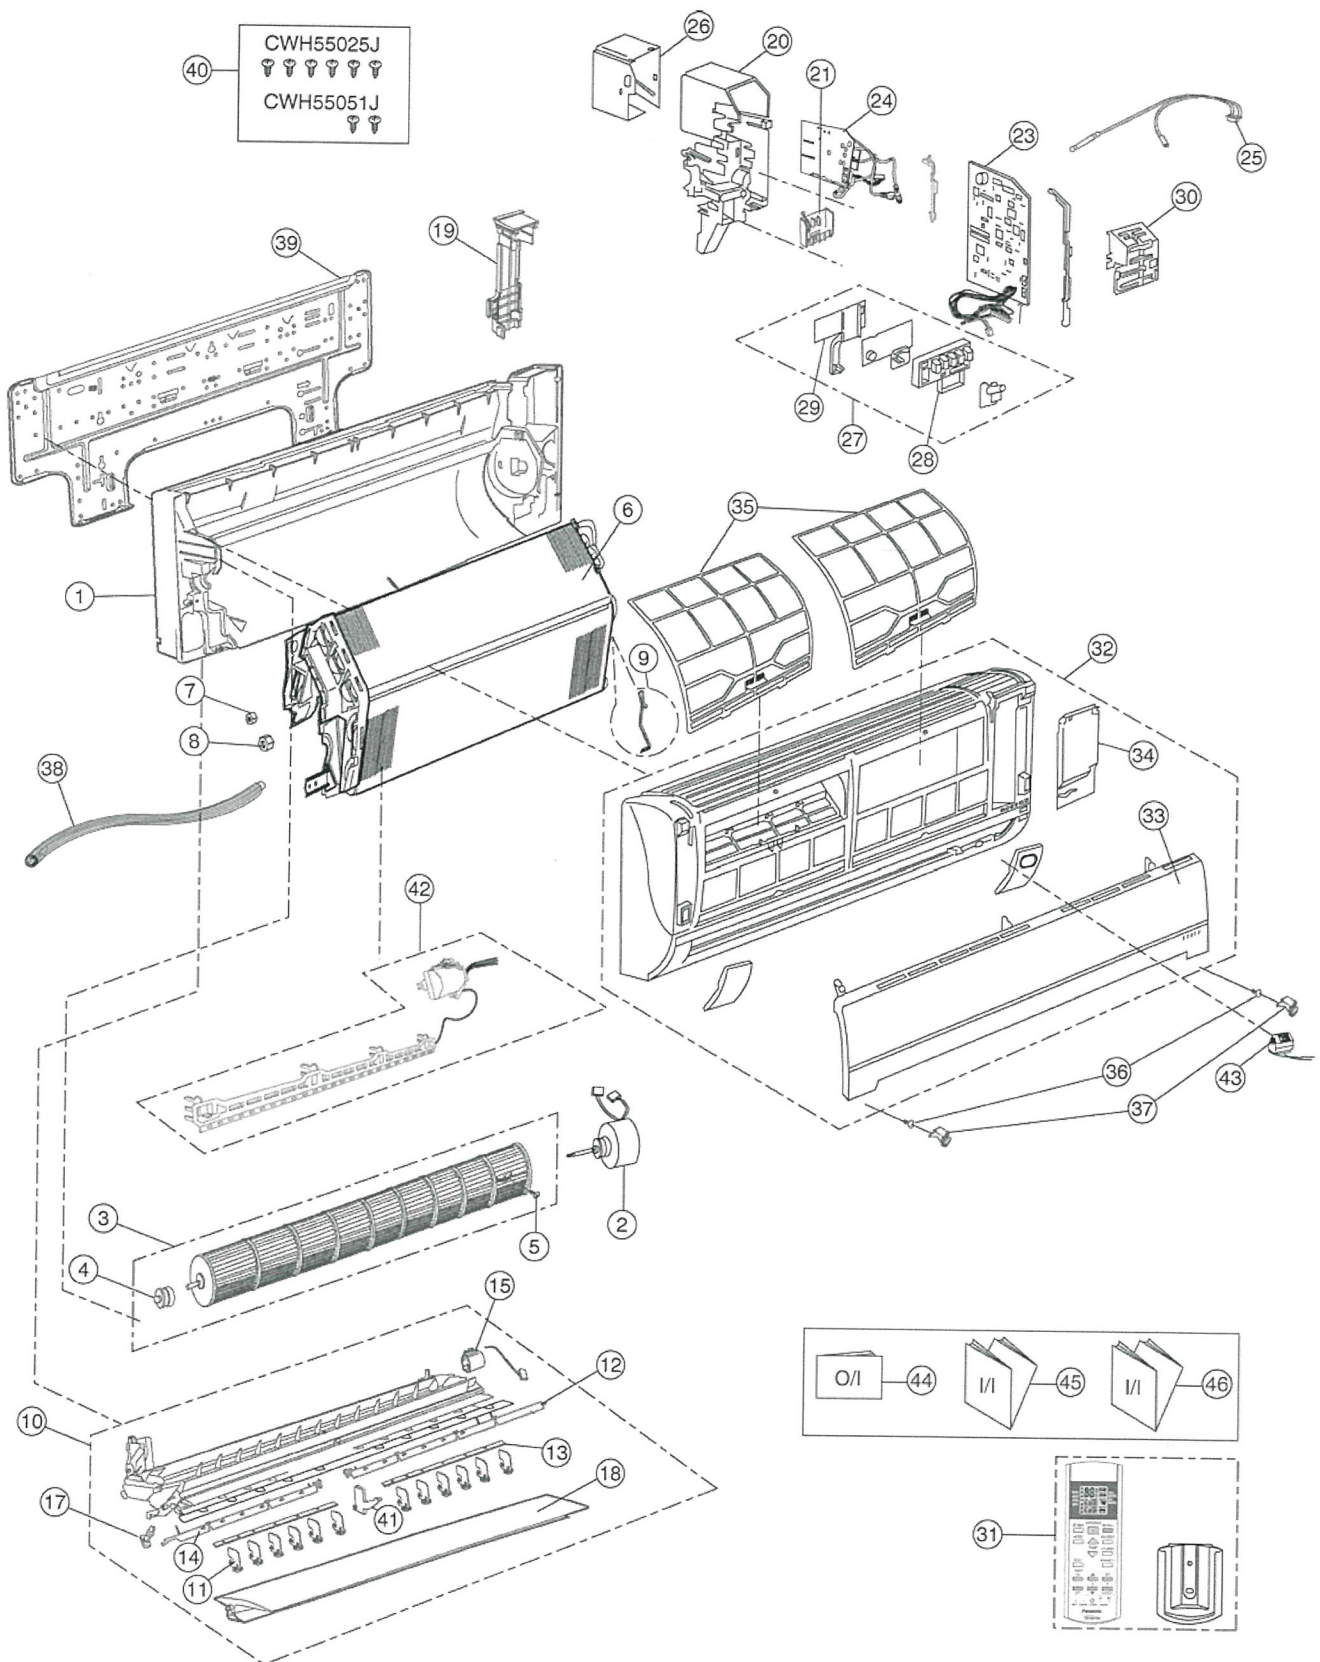


Note

The above exploded view is for the purpose of parts disassembly and replacement.
The non-numbered parts are not kept as standard service parts.

18.2. Outdoor Unit

18.2.1. CU-E7HKE CU-E9HKE CU-E12HKE

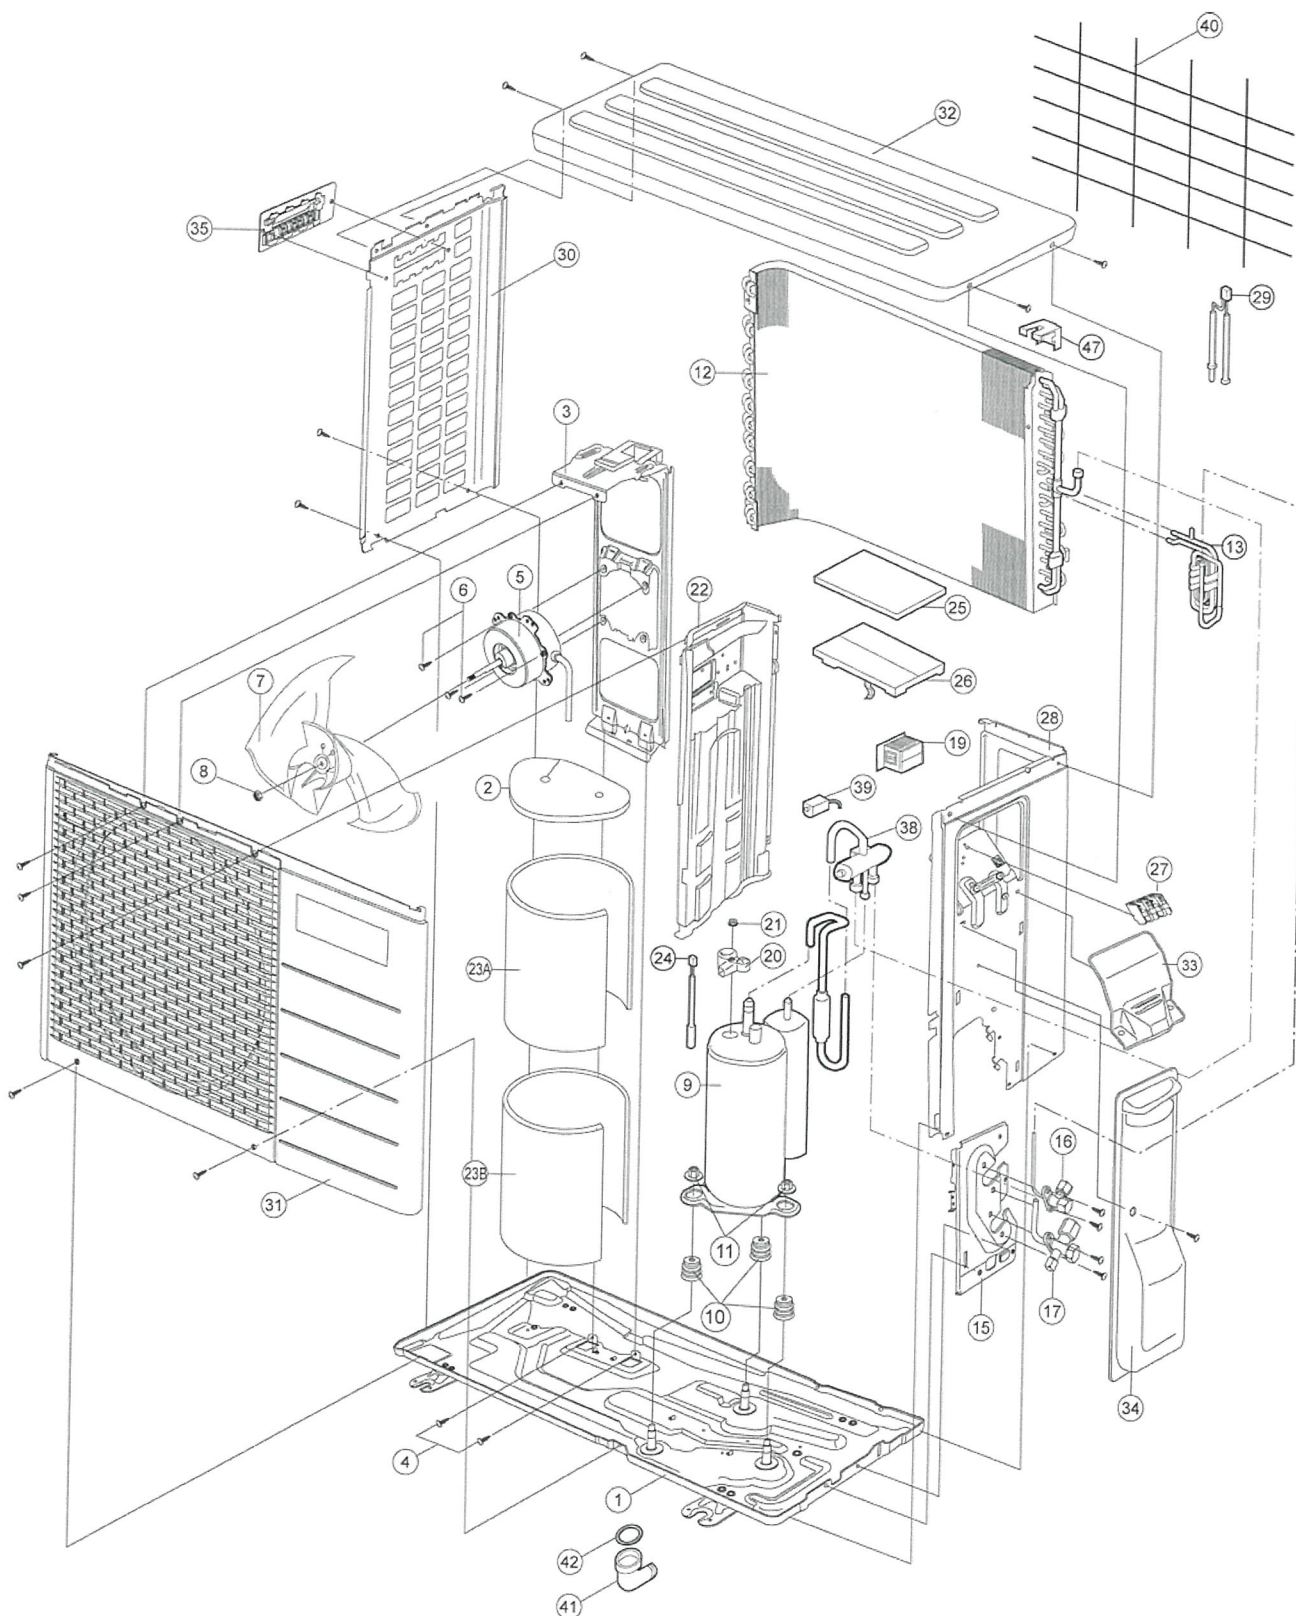

Note

The above exploded view is for the purpose of parts disassembly and replacement.
The non-numbered parts are not kept as standard service parts.