

2-1. DISASSEMBLY


EXPLODED VIEW

HARDWARE LIST

2-1-1. OVERALL ASSEMBLY-1

Follow the disassembly in the numerical order given.

- ① Lens ring (①-1 to ①-2)
- ② HDD (②-1 to ②-4)
- ③ Cabinet (R) block (③-1 to ③-6)

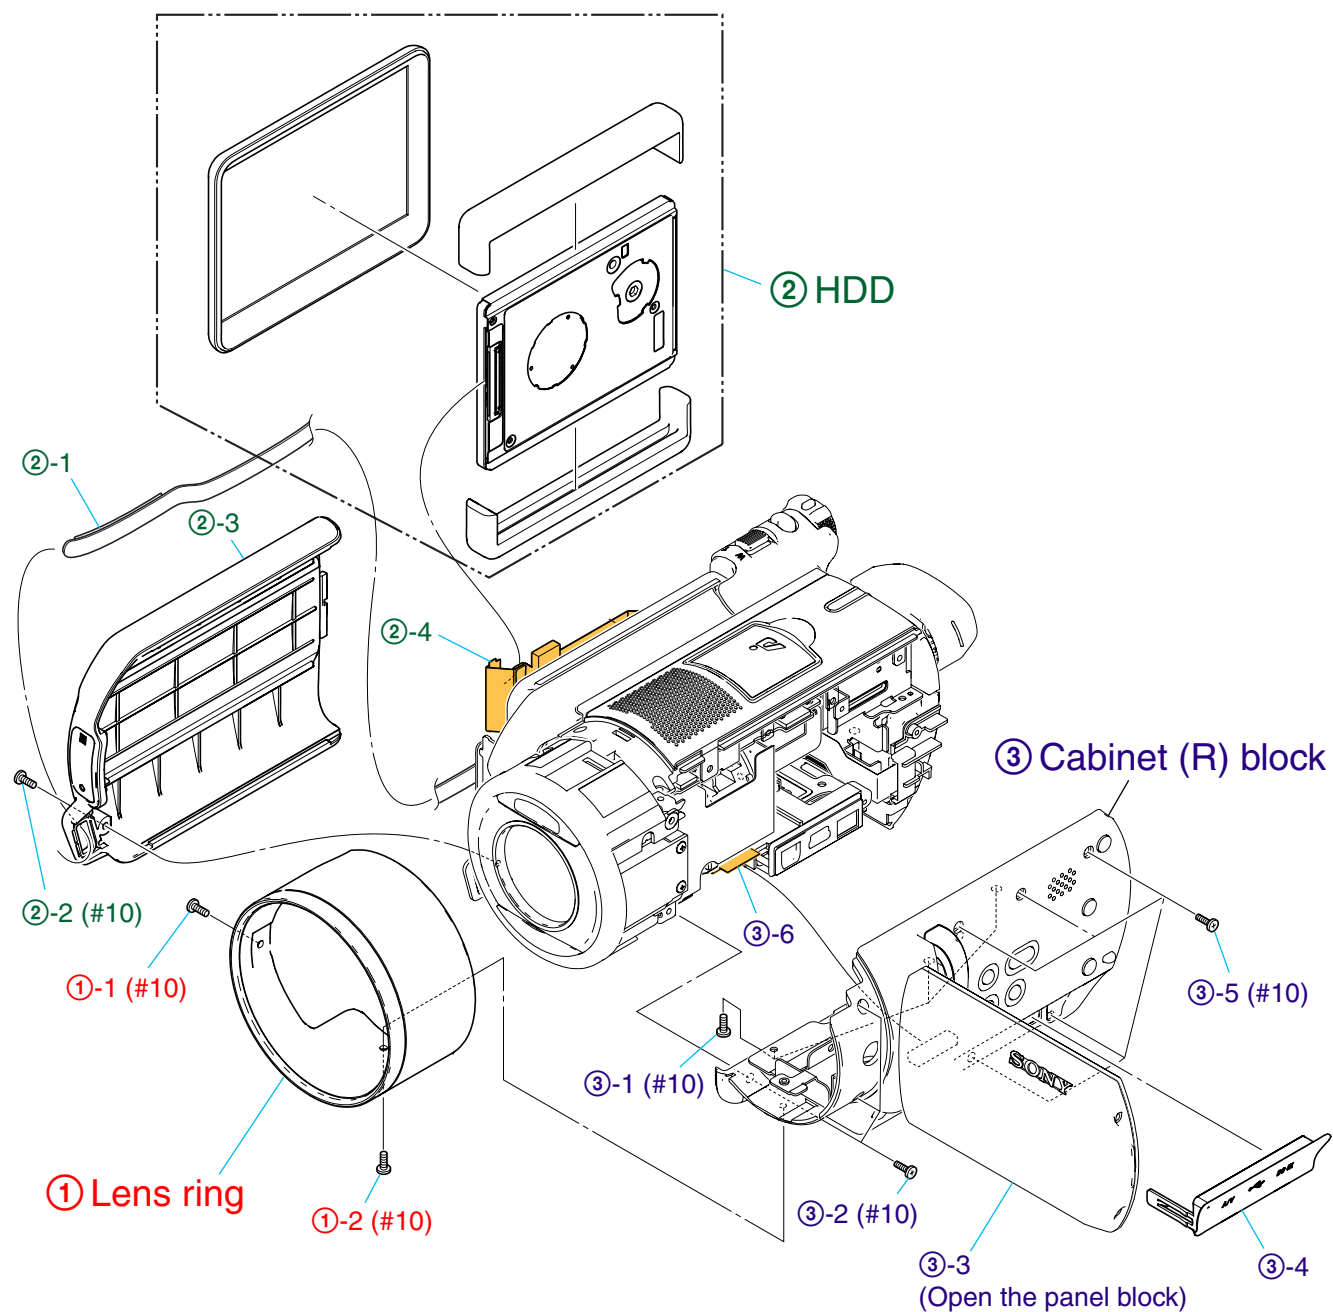


2-1-2. OVERALL ASSEMBLY-2

Follow the disassembly in the numerical order given.

- ① Panel (top) block (①-1 to ①-7)
- ② EVF/BT panel block (②-1 to ②-7)
- ③ Lens block (③-1 to ③-7)

EXPLODED VIEW


HARDWARE LIST

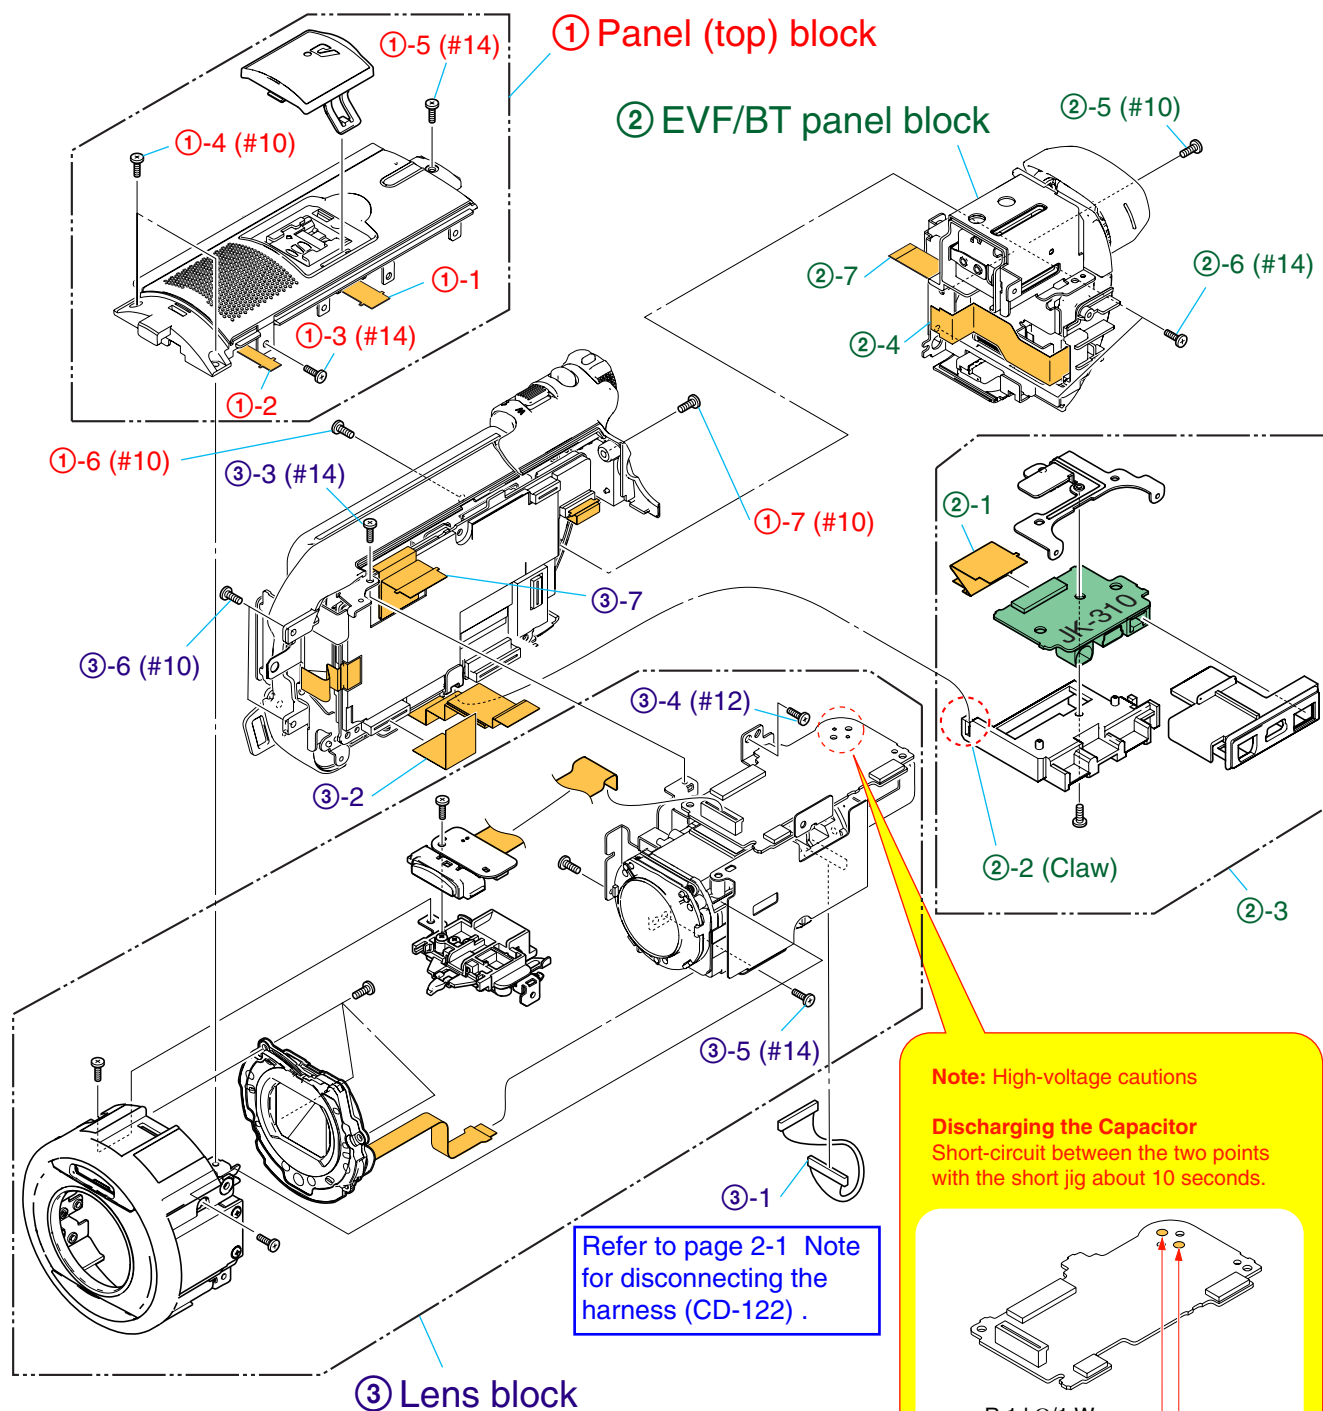

Note: High-voltage cautions

Discharging the Capacitor

Short-circuit between the two points with the short jig about 10 seconds.

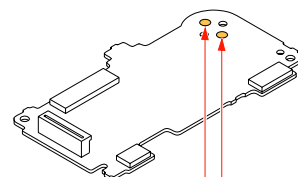

R:1 k Ω /1 W
(Part code:
1-215-869-11)


2-1-3. CABINET (L) BLOCK

Follow the disassembly in the numerical order given.

- ① VC-449 board (①-1 to ①-8)
- ② Main flame block (②-1 to ②-7)
- ③ Switch block (③-1 to ③-2)

EXPLODED VIEW

HARDWARE LIST

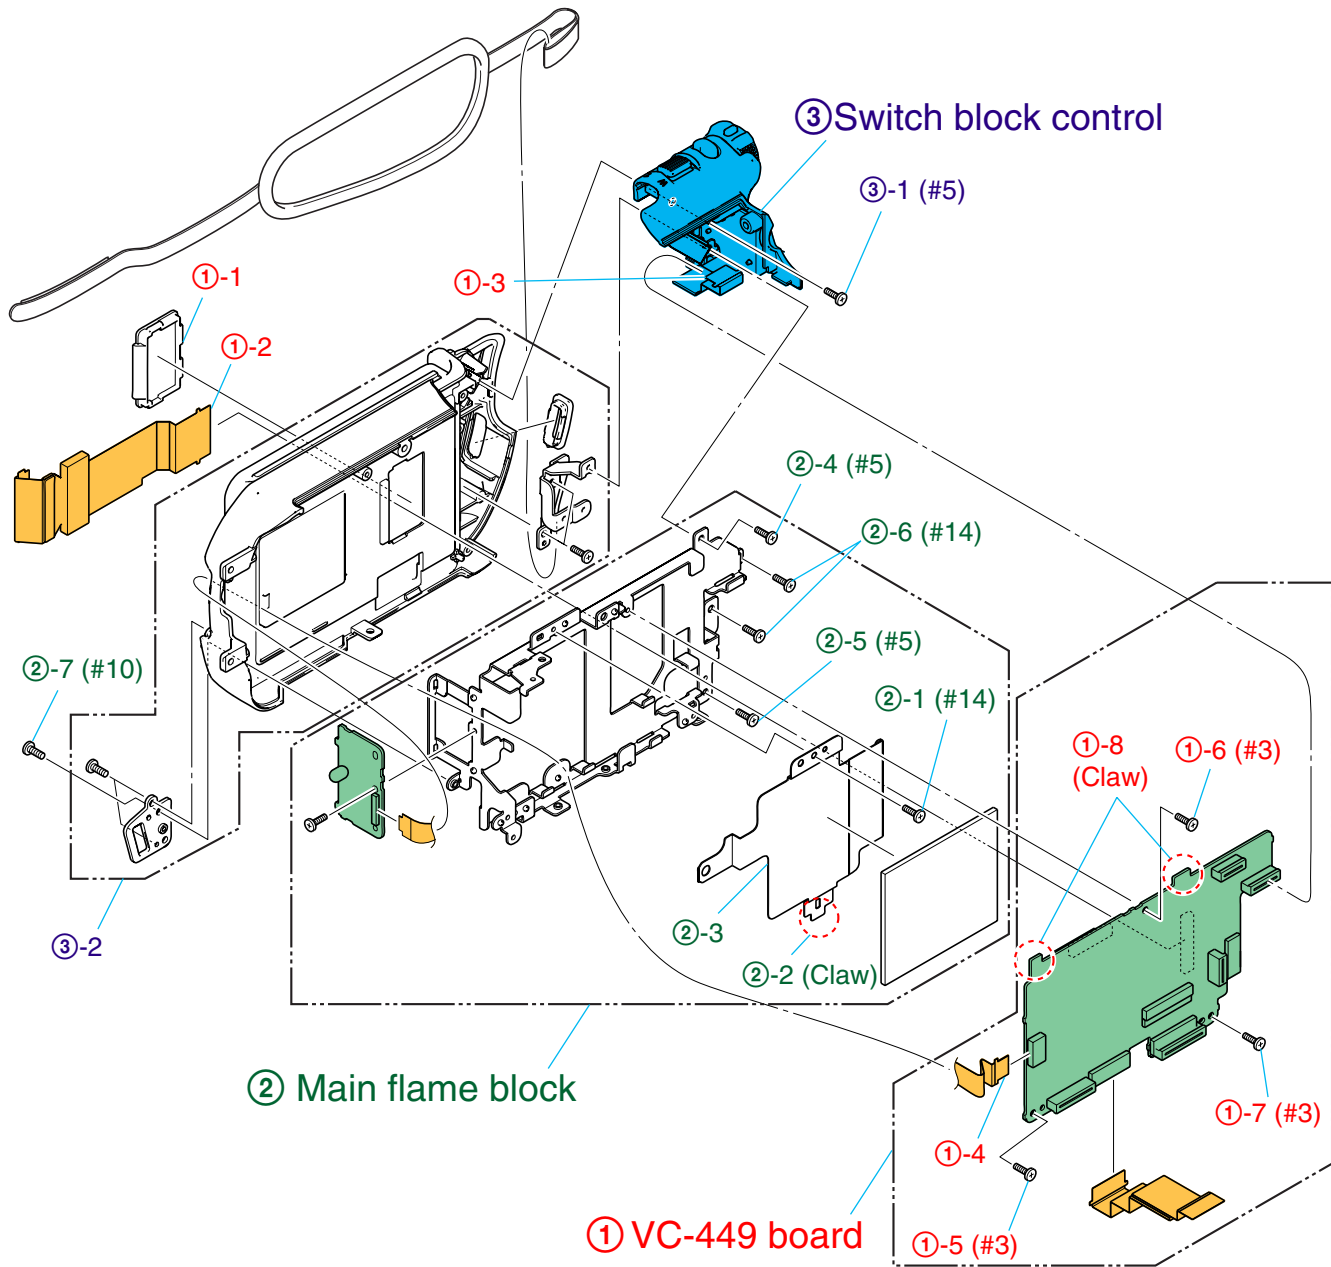


2-1-4. CABINET (R) BLOCK

Follow the disassembly in the numerical order given.

- ① CK-162 board (①-1 to ①-5)
- ② R flame block (②-1 to ②-4)
- ③ LCD panel block (③-1 to ③-3)

EXPLODED VIEW

HARDWARE LIST

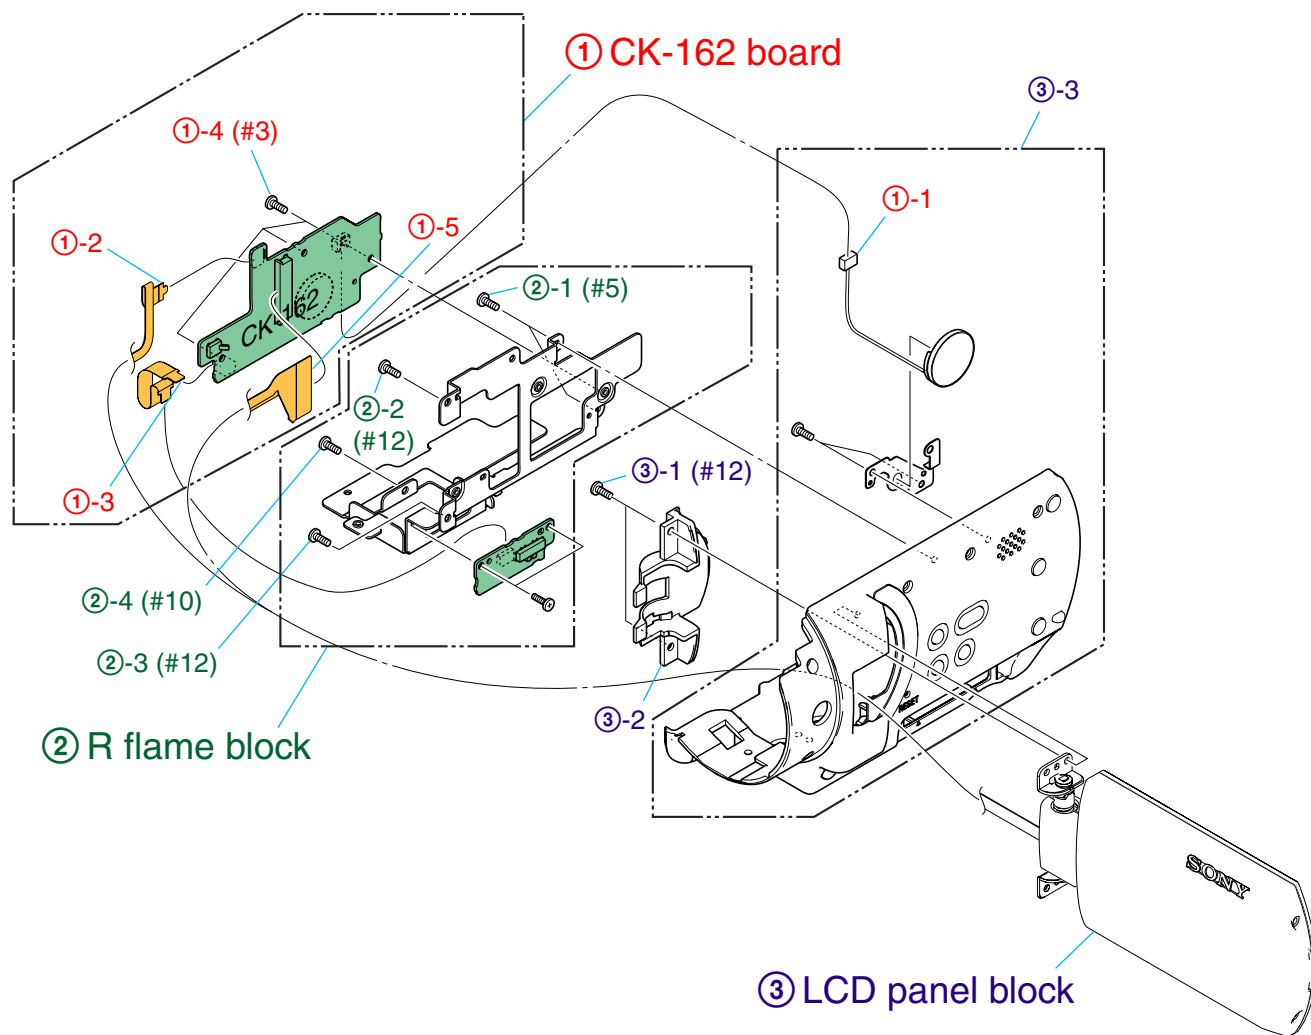


2-1-5. LCD BLOCK

Follow the disassembly in the numerical order given.

- ① Hinge block (①-1 to ①-6)
- ② PD-250 board (②-1 to ②-7)
- ③ LCD (③-1 to ③-5)

EXPLODED VIEW


HARDWARE LIST

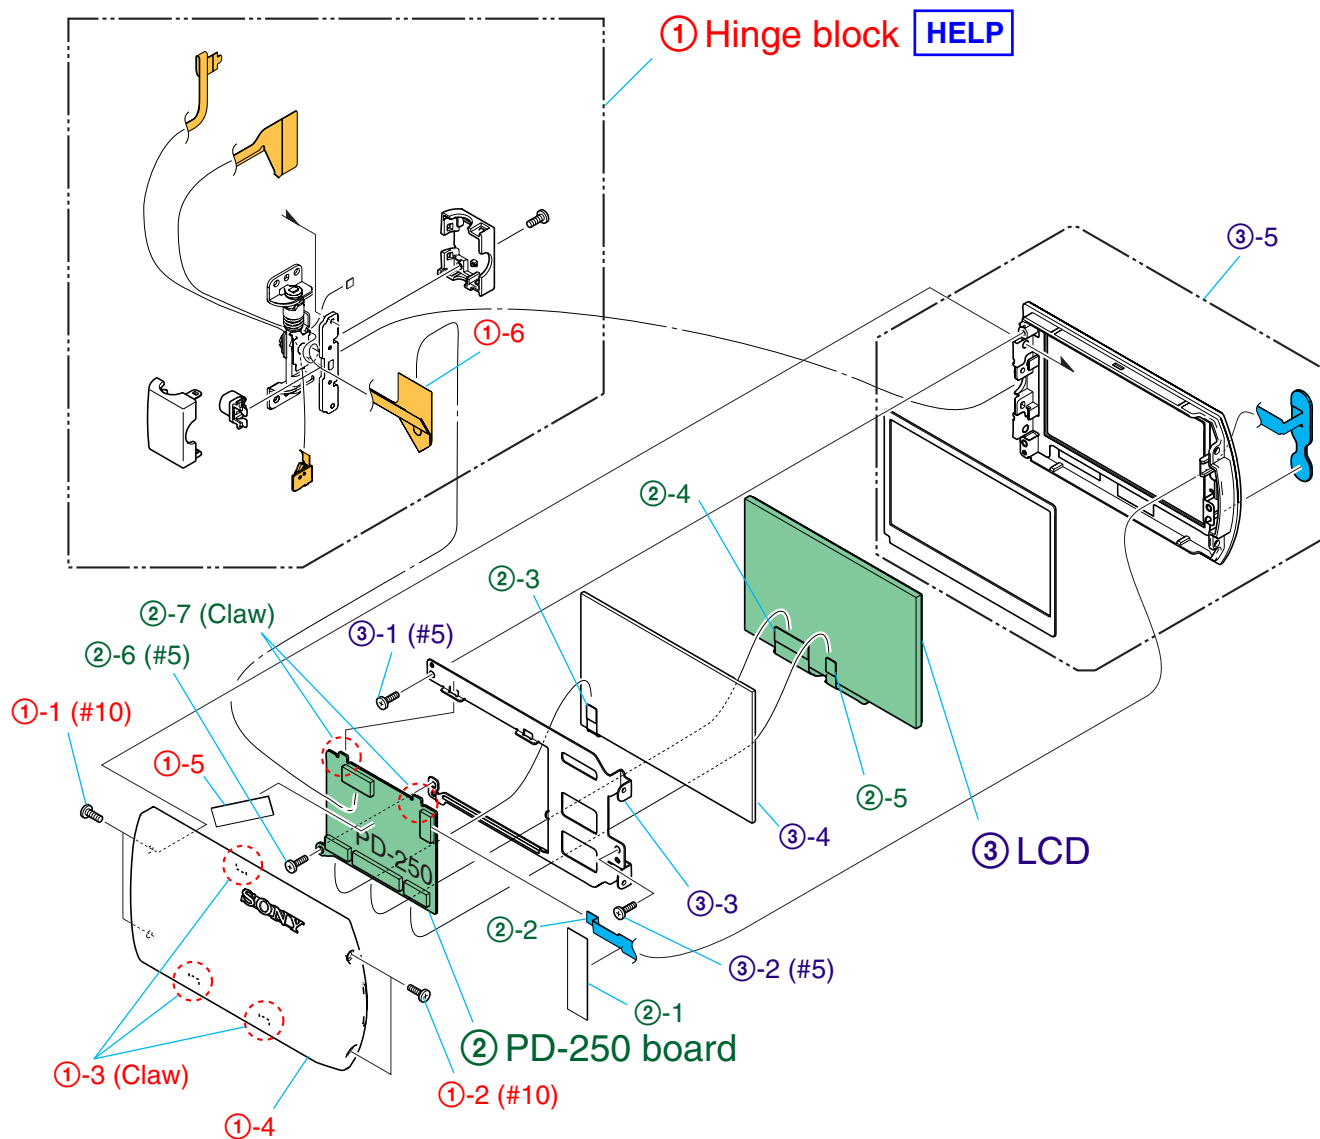


• EXCEPT J MODEL

Checking supplied accessories.

to J MODEL

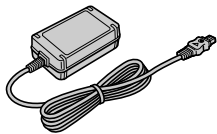

AC Adaptor

 


Power Cord



Conversion (2P) Adaptor



 
Conversion (2P) Adaptor




USB Cable



 
A/V Connection Cable




Rechargeable Battery Pack
NP-FP60

 

CD-ROM
"ImageMixer for HDD Camcorder"

 

Wireless Remote Commander
RMT-835

• Refer to page 5-1 for mark .