


2-1. EXPLODED VIEWS

2-1-1. OVERALL SECTION


ns: not supplied

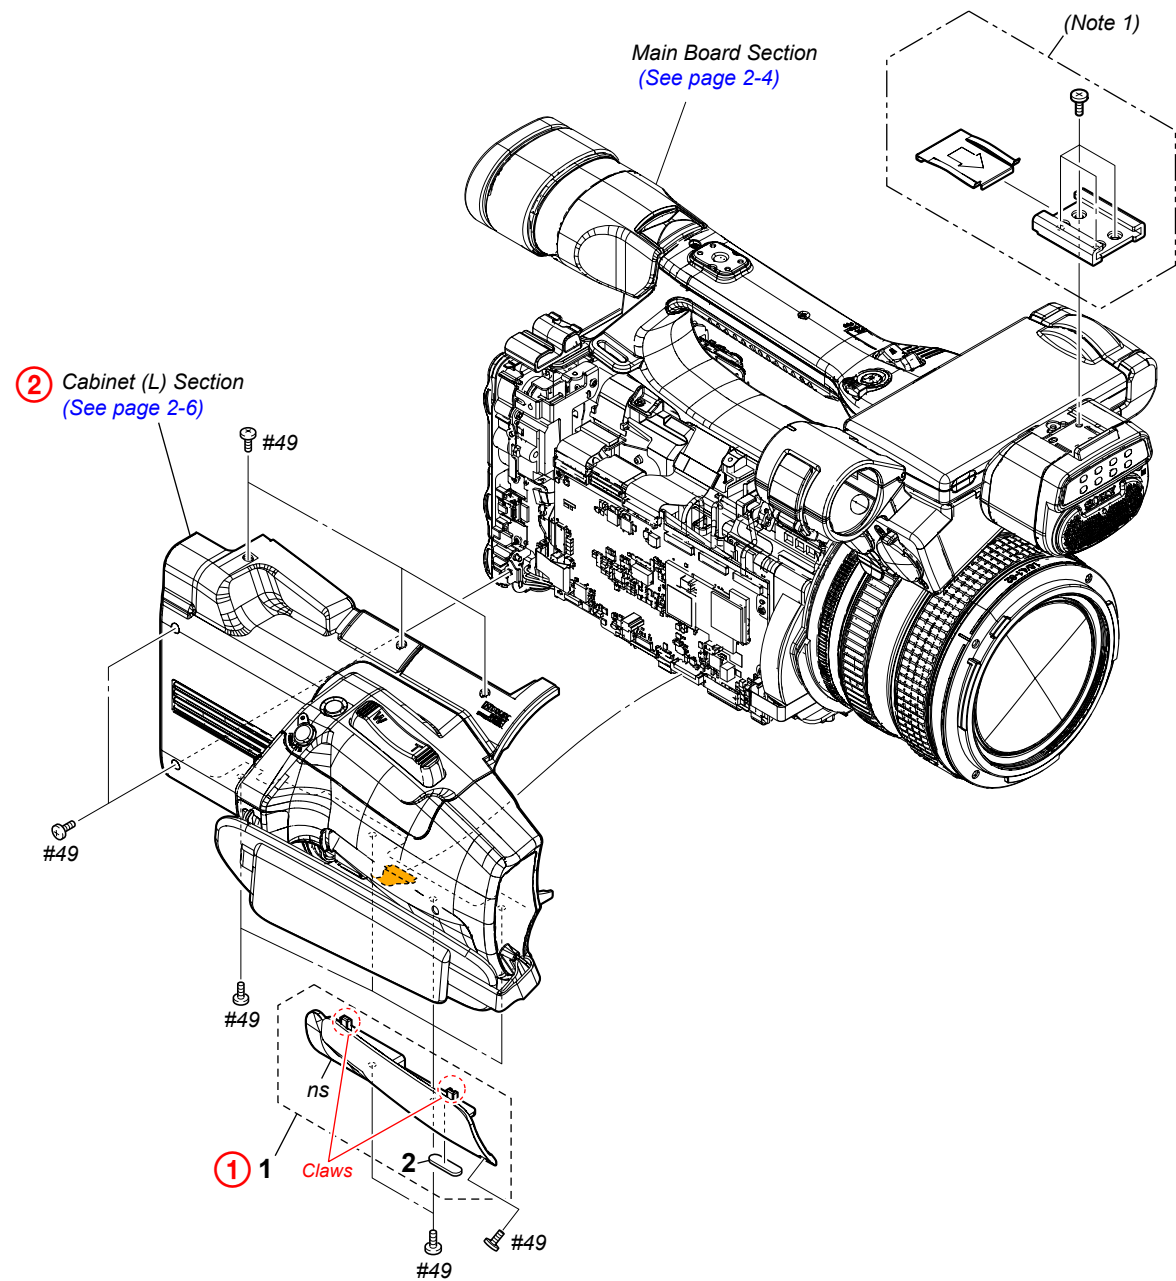


DISASSEMBLY

1. Remove in numerical order (① to ②) in the left figure.


① #49 X 3 → Grip Cover Assy → Disconnect the Flexible Board ①

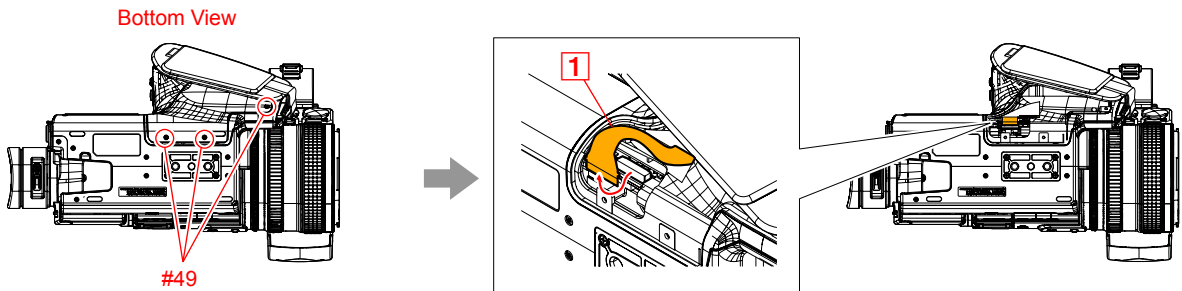

② #49 X 8

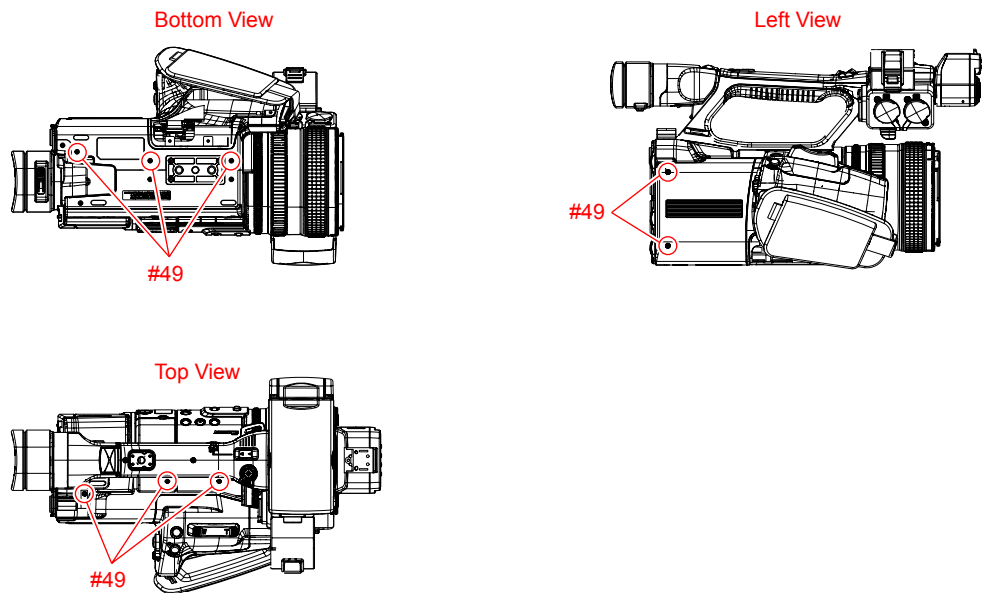

Screw

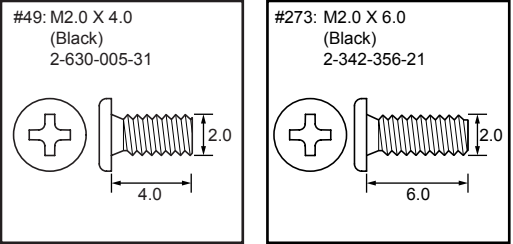


Note

Note 1: Refer to ACCESSORIES on page 2-17.


Note 1: 2-17ページ ACCESSORIES を参照してください。

2-1-2. MAIN BOARD SECTION

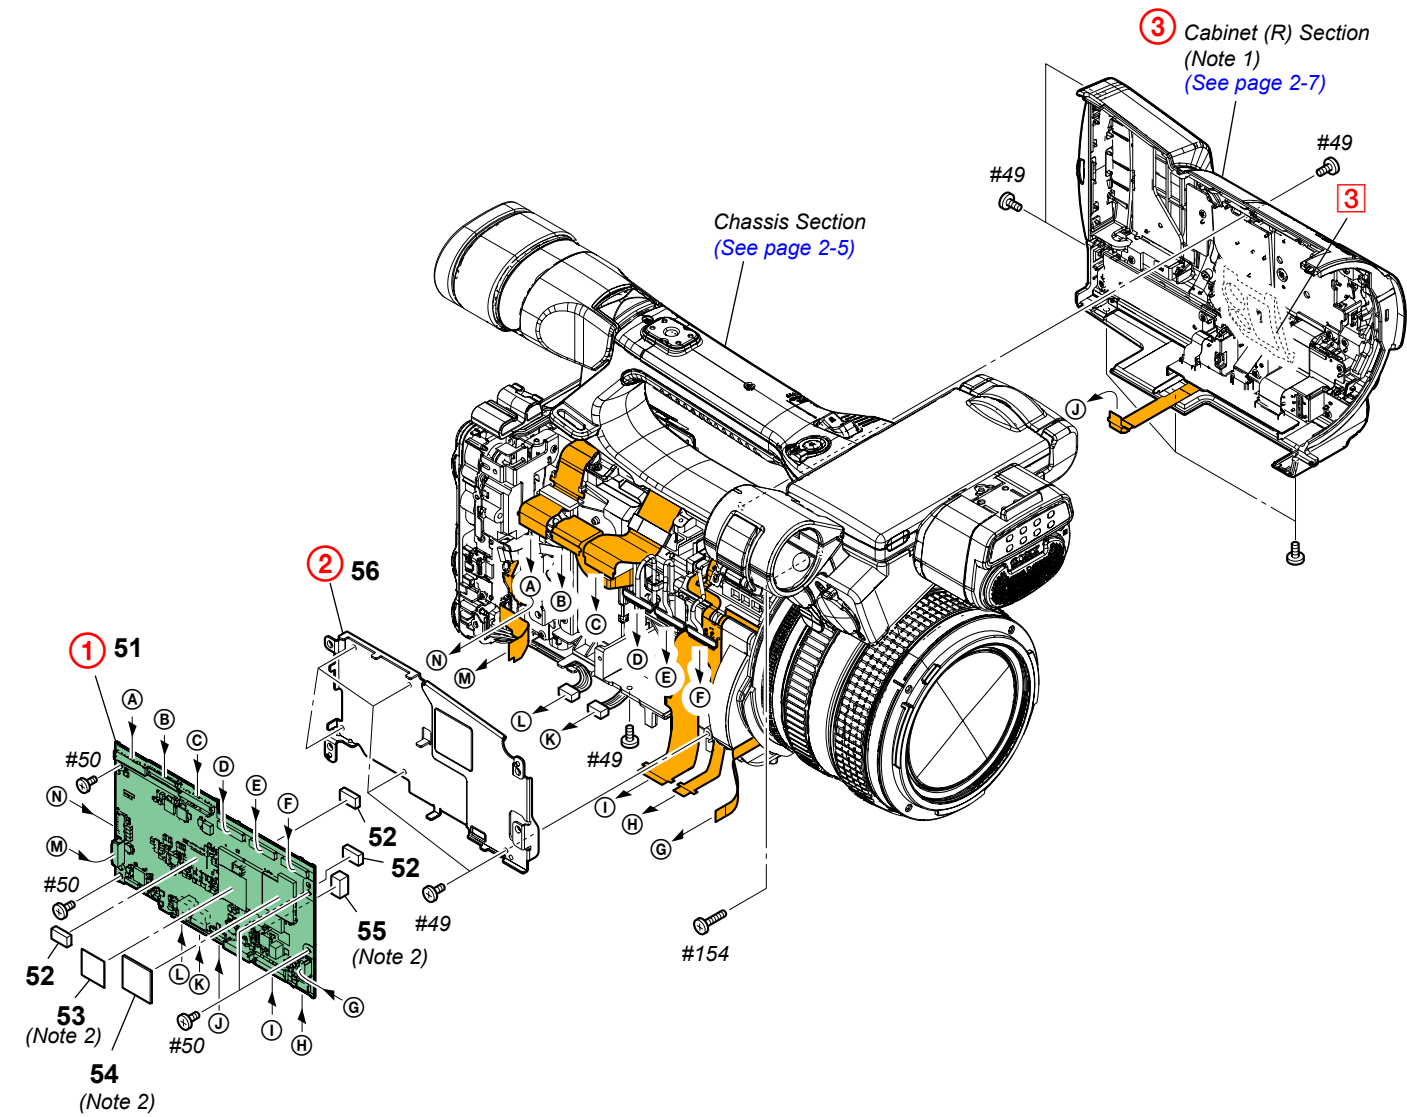

DISASSEMBLY

1. Remove in numerical order (① to ③) in the left figure.

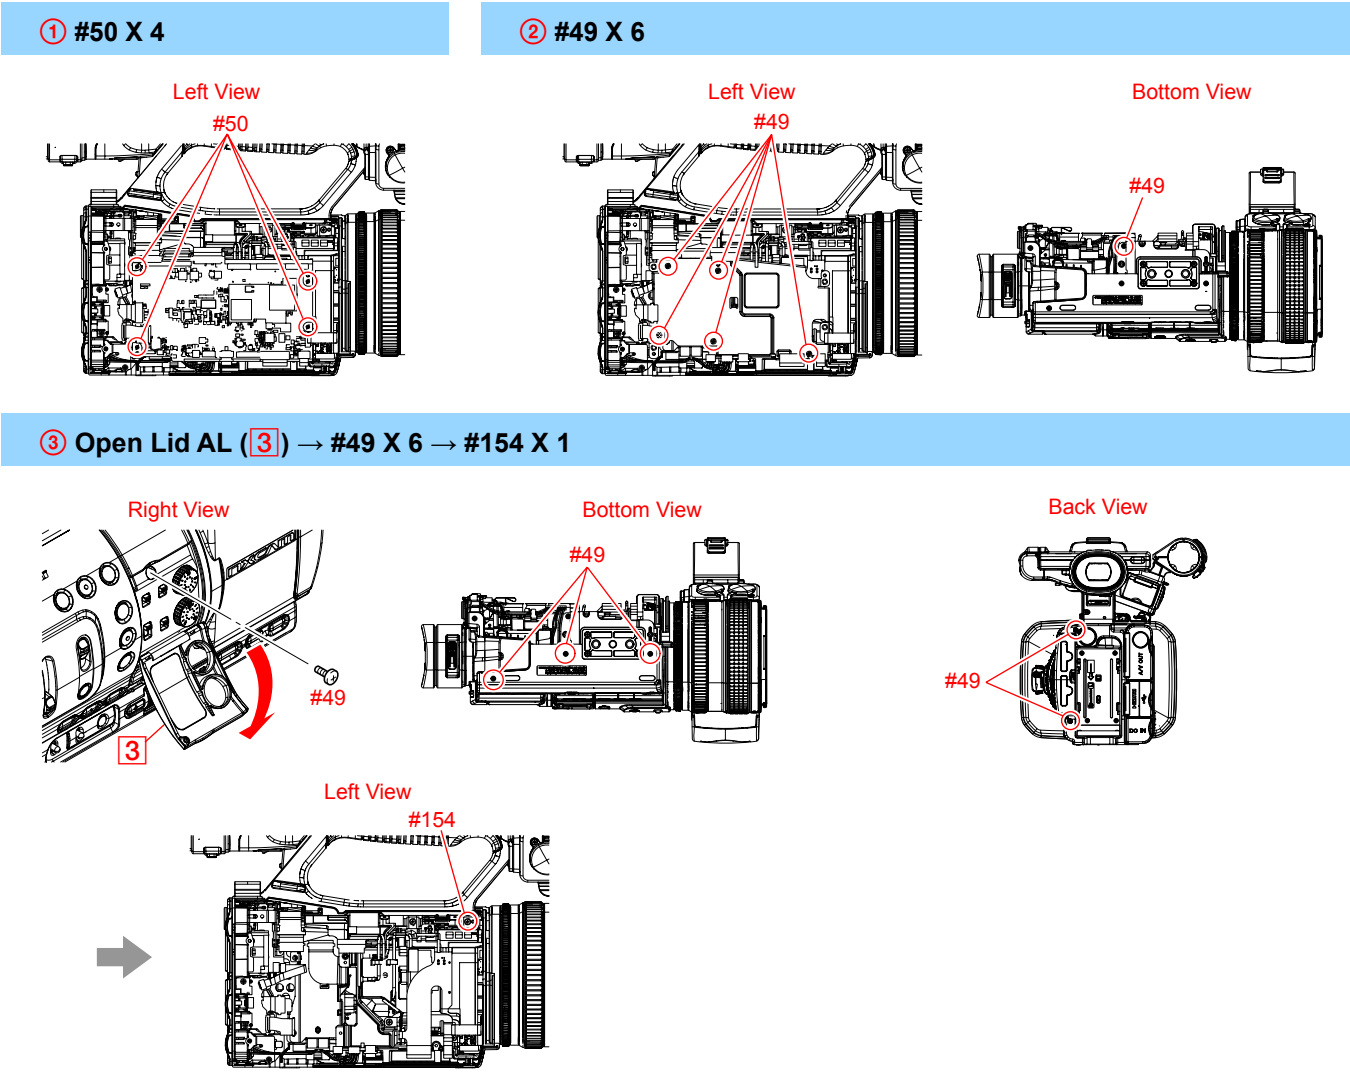


Screw

#49: M2.0 X 4.0 (Black) 2-630-005-31	#50: M2.0 X 3.0 (Red) 2-891-494-11	#154: M2.6 X 8.0 (Silver) 7-627-556-97
--	--	--

Note

- Note 1:** Refer to "Assembly-6: On installation of the Cabinet (R) section, adjust the position of the ND filter switch" when installing.
- Note 1:** 組立時は"Assembly-6: On installation of the Cabinet (R) section, adjust the position of the ND filter switch"を参照してください。
- Note 2:** Do not reuse these Parts because their adhesive force decreases when they are removed once.
- Note 2:** これらの部品は一度剥がすと粘着力が弱くなるため、再利用はしないでください。

2-1-3. CHASSIS SECTION

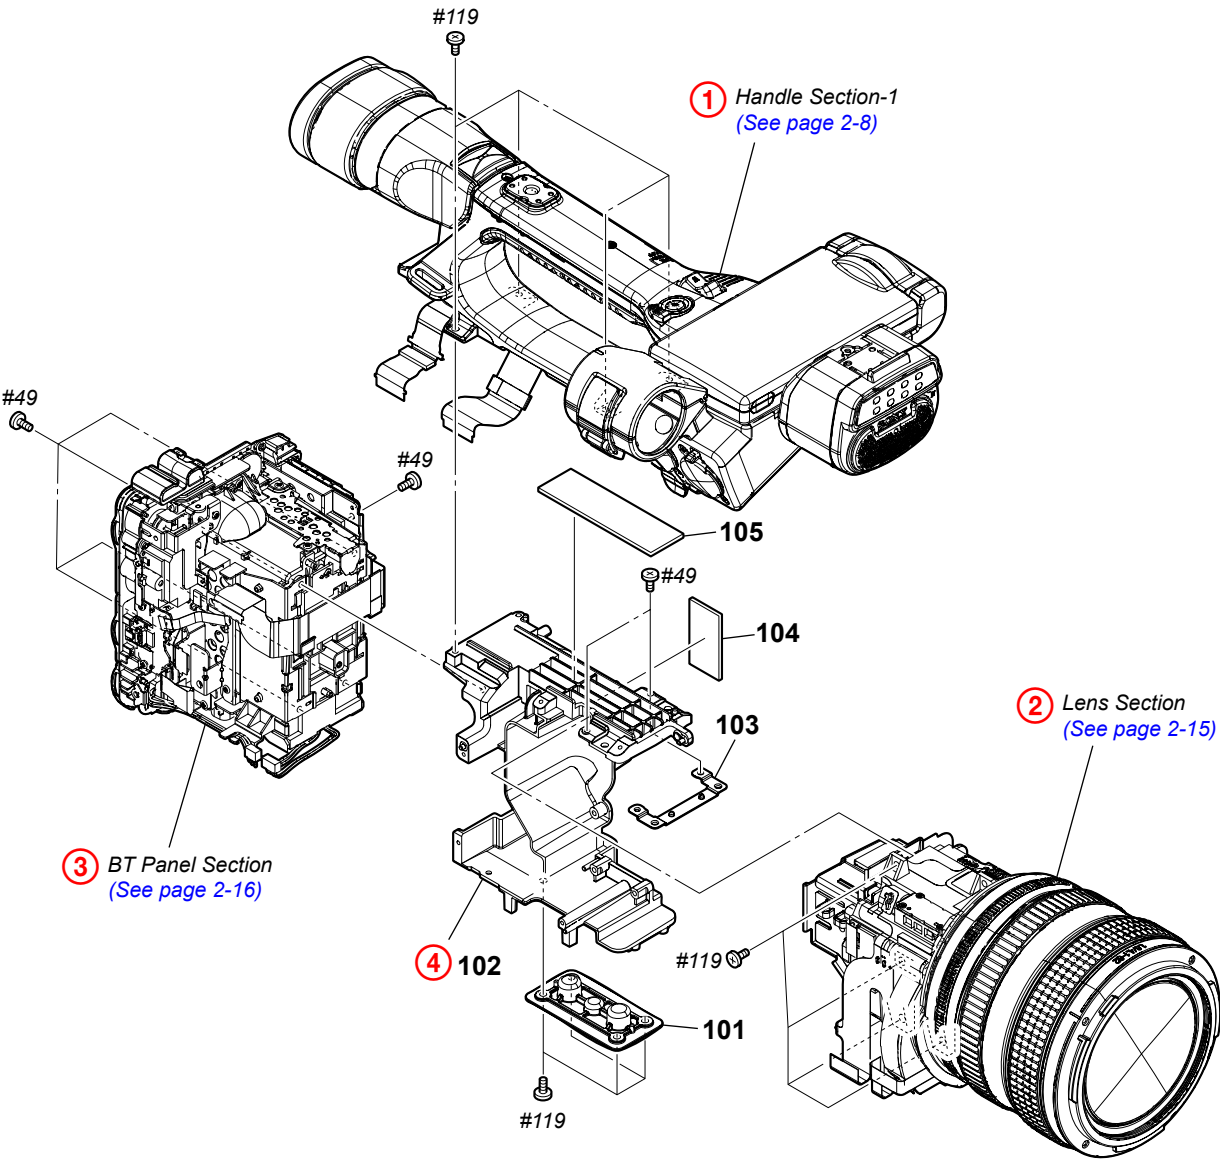


DISASSEMBLY

1. Remove in numerical order (1 to 4) in the left figure.


1 #119 X 4

Top View

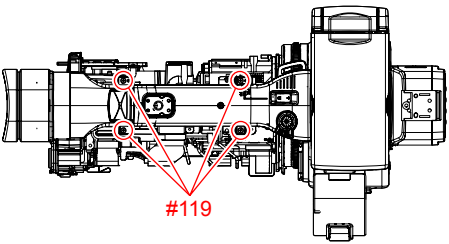


2 #119 X 4

Left View

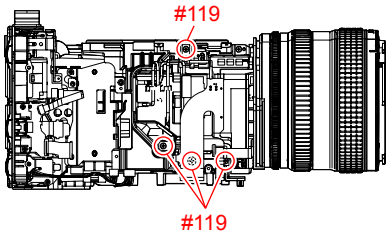


3 #49 X 5

Back View

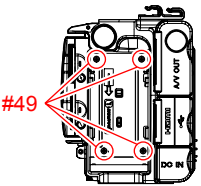


Right View

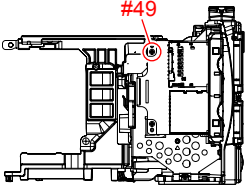


Screw


#49: M2.0 X 4.0
(Black)
2-630-005-31

 

#119: M2.6 X 5.0
(Black)
7-627-556-58

 

2-1-4. CABINET (L) SECTION

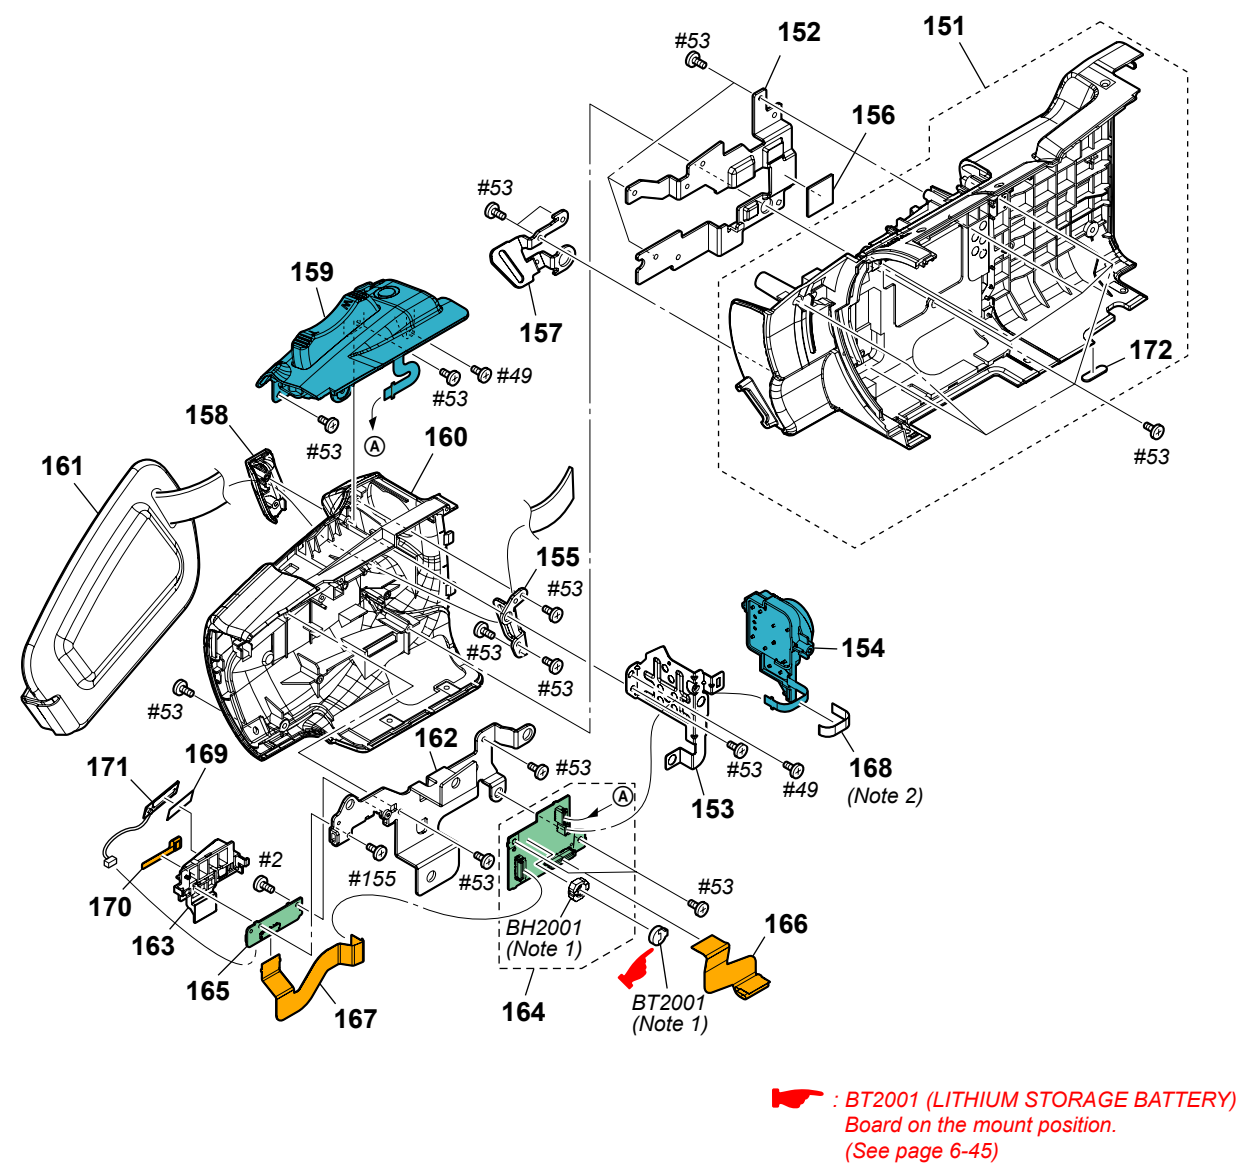

Screw

#2: M1.7 X 4.0 (Black) 2-635-562-31	#49: M2.0 X 4.0 (Black) 2-630-005-31	#53: M2.0 X 5.0 (Tapping) (Black) 3-080-206-21	#155: M1.7 X 6.0 (Tapping) (Black) 3-080-204-31

Note

Note 1: Replace the battery holder (BH2001) together when replacing the lithium storage battery (BT2001) on the GC-1003 board. (The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium storage battery next.


Note 2: Do not reuse these Parts because their adhesive force decreases when they are removed once.

Note 1: GC-1003基板のリチウム蓄電池(BT2001)を交換する場合はバッテリーホルダ(BH2001)も同時に新品に交換して下さい。(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム蓄電池を装着して下さい。



Note 2: これらの部品は一度剥がすと粘着力が弱くなるため、再利用はしないでください。

2-1-5. CABINET (R) SECTION

ns: not supplied

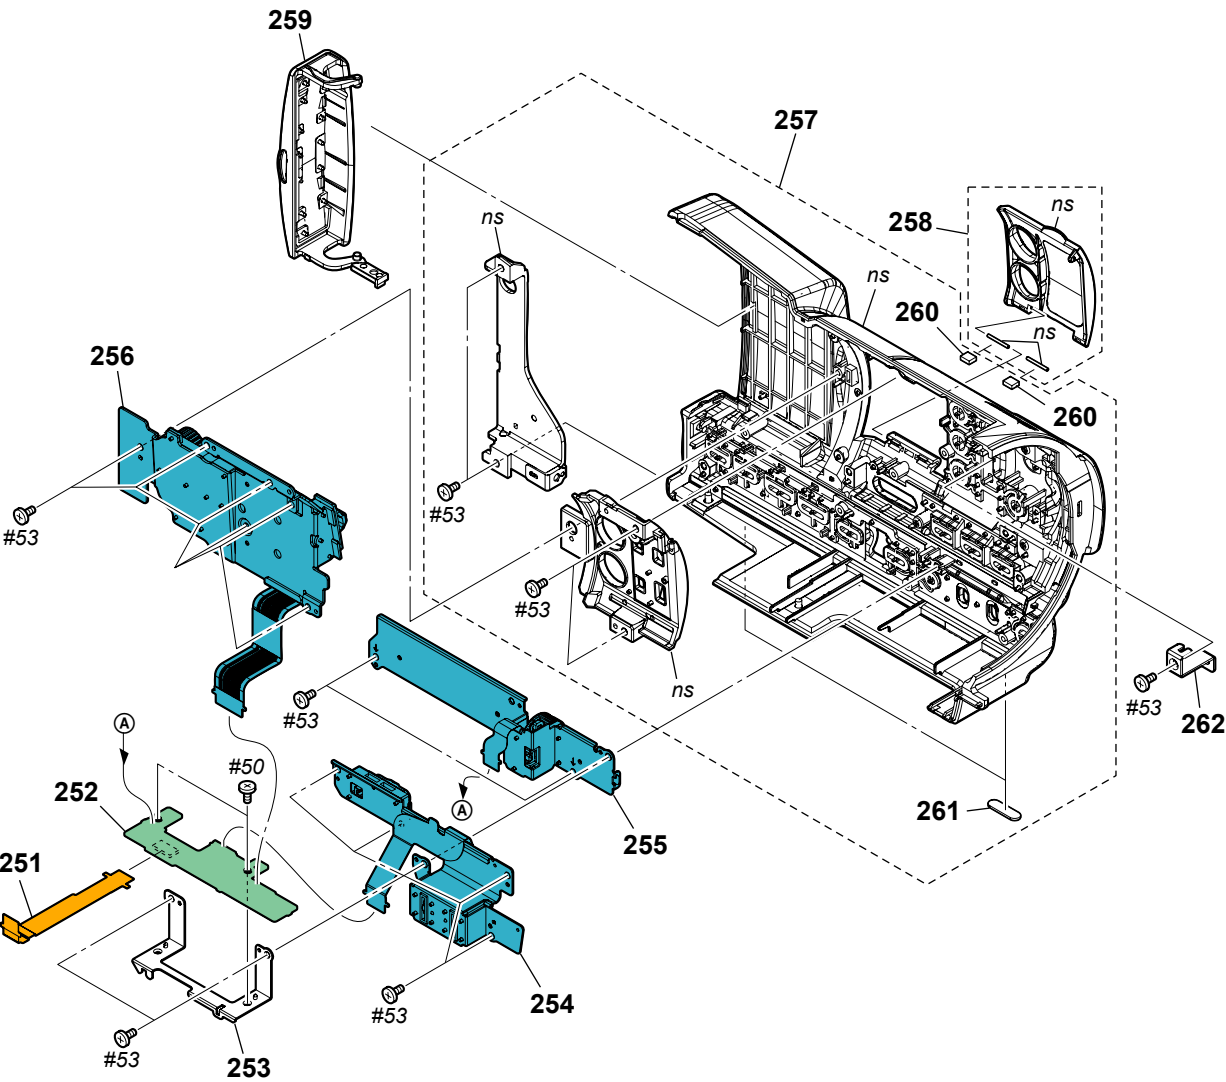


Screw

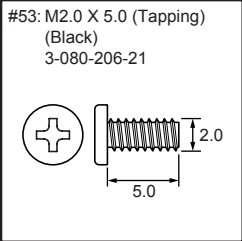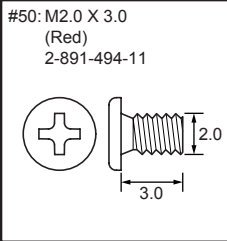


2-1-6. HANDLE SECTION-1

ns: not supplied

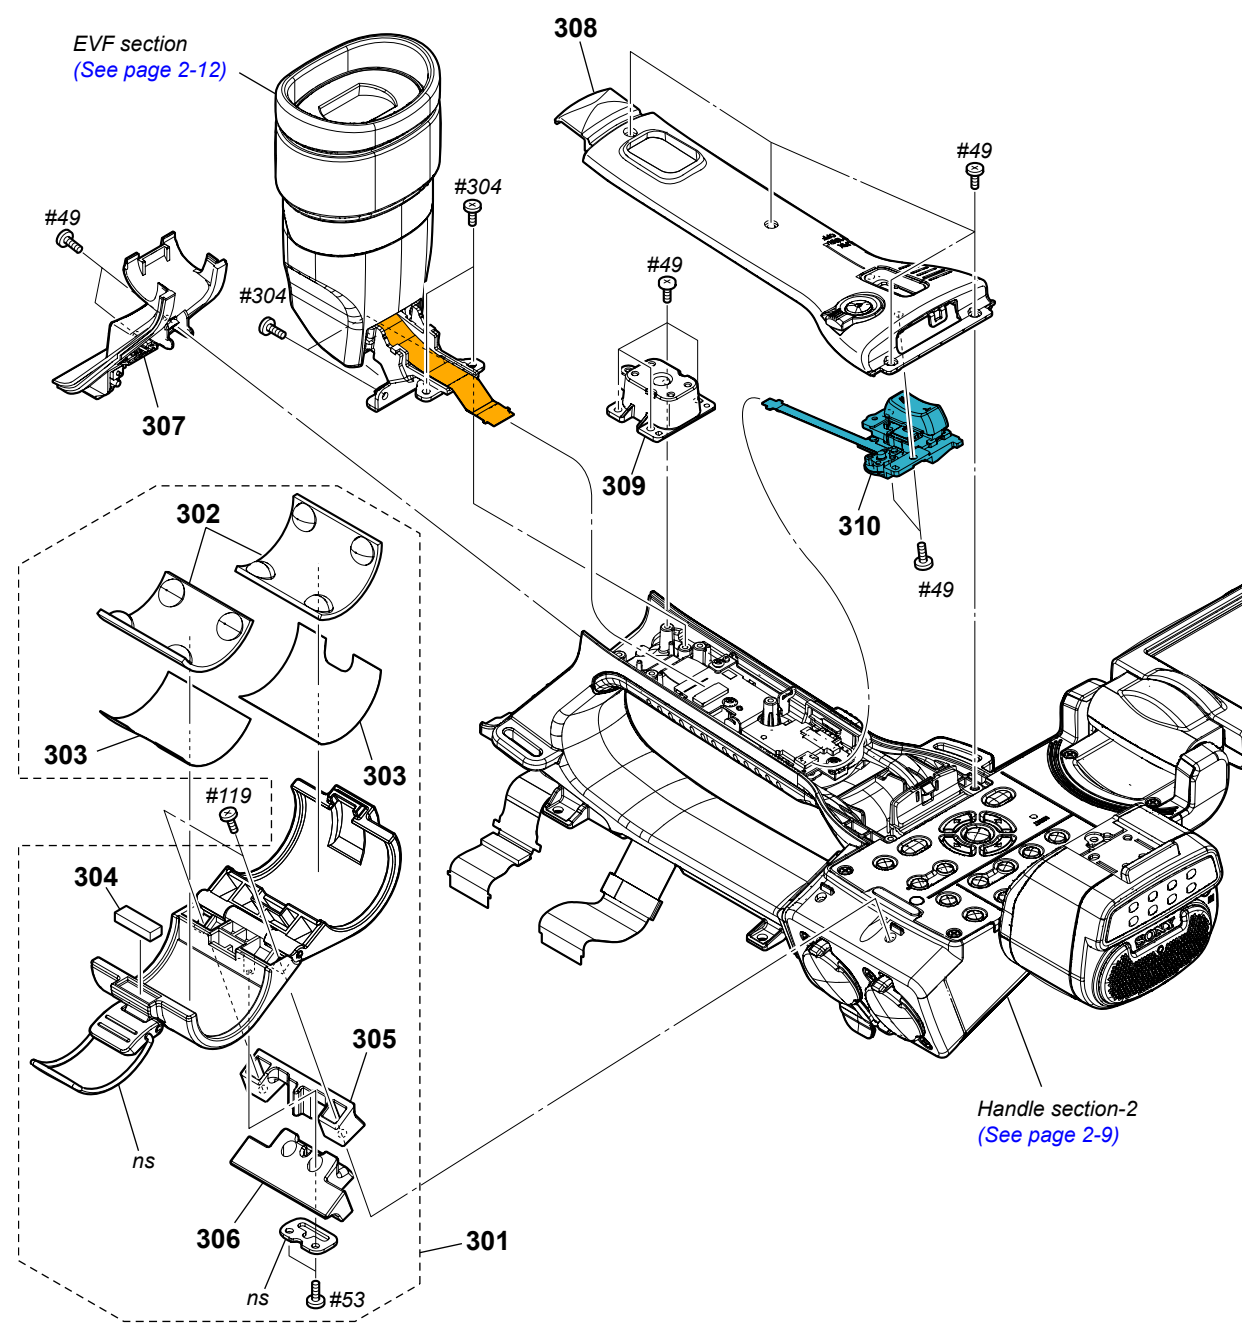


Screw


#49: M2.0 X 4.0
(Black)
2-630-005-31

 


#53: M2.0 X 5.0 (Tapping)
(Black)
3-080-206-21

 


#119: M2.6 X 5.0
(Black)
7-627-556-58

 

#304: M2.0 X 4.0
(Black)
2-342-356-01

 


2-1-7. HANDLE SECTION-2

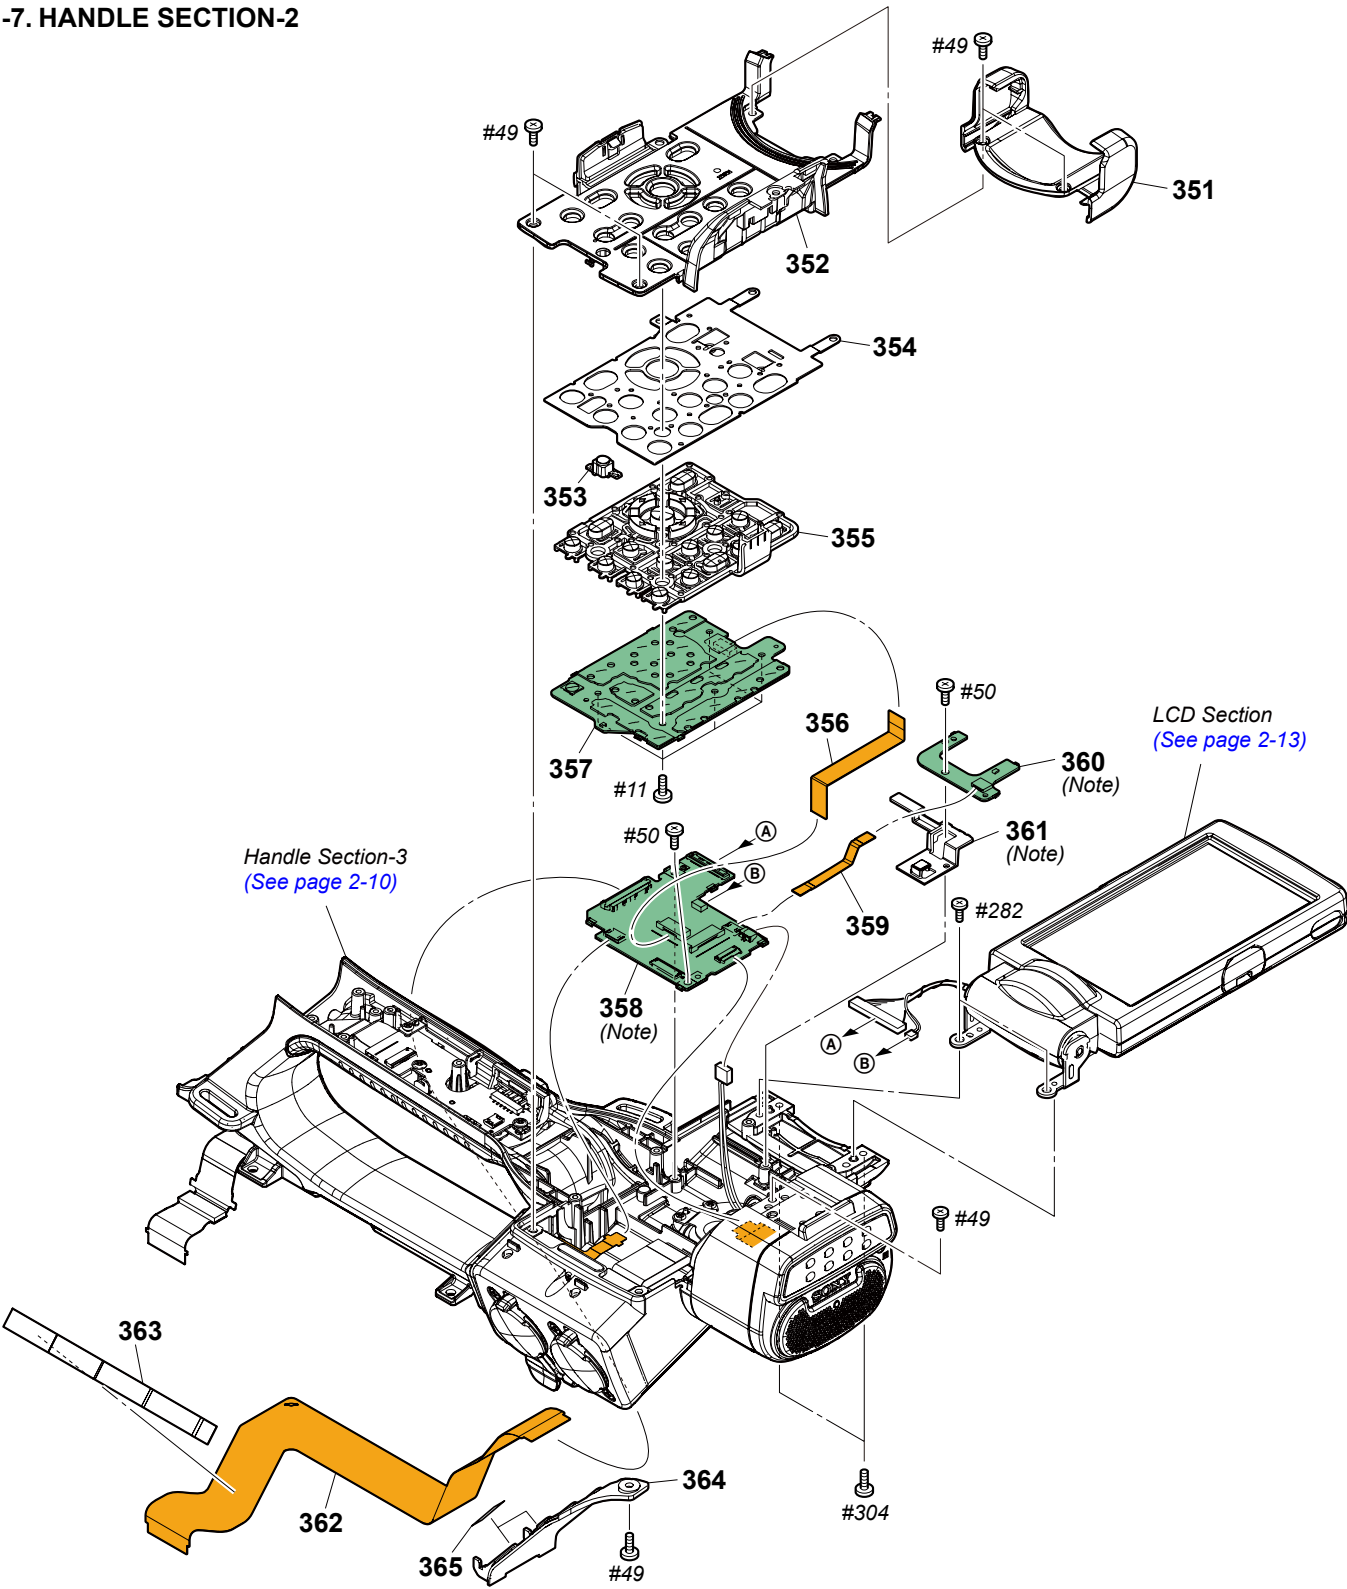


Screw


#11: M1.7 X 4.0 (Tapping)
(Silver)
3-078-890-11

 


#49: M2.0 X 4.0
(Black)
2-630-005-31

 


#50: M2.0 X 3.0
(Red)
2-891-494-11

 

#282: M2.6 X 5.0
(Black)
3-694-181-02

 

#304: M2.0 X 4.0
(Black)
2-342-356-01

 


Note

Note: Refer to "Assembly-4: How to arrange Harnesses and Flexible Board" when installing.


Note: 組立時は"Assembly-4: How to arrange Harnesses and Flexible Board"を参照してください。

2-1-8. HANDLE SECTION-3

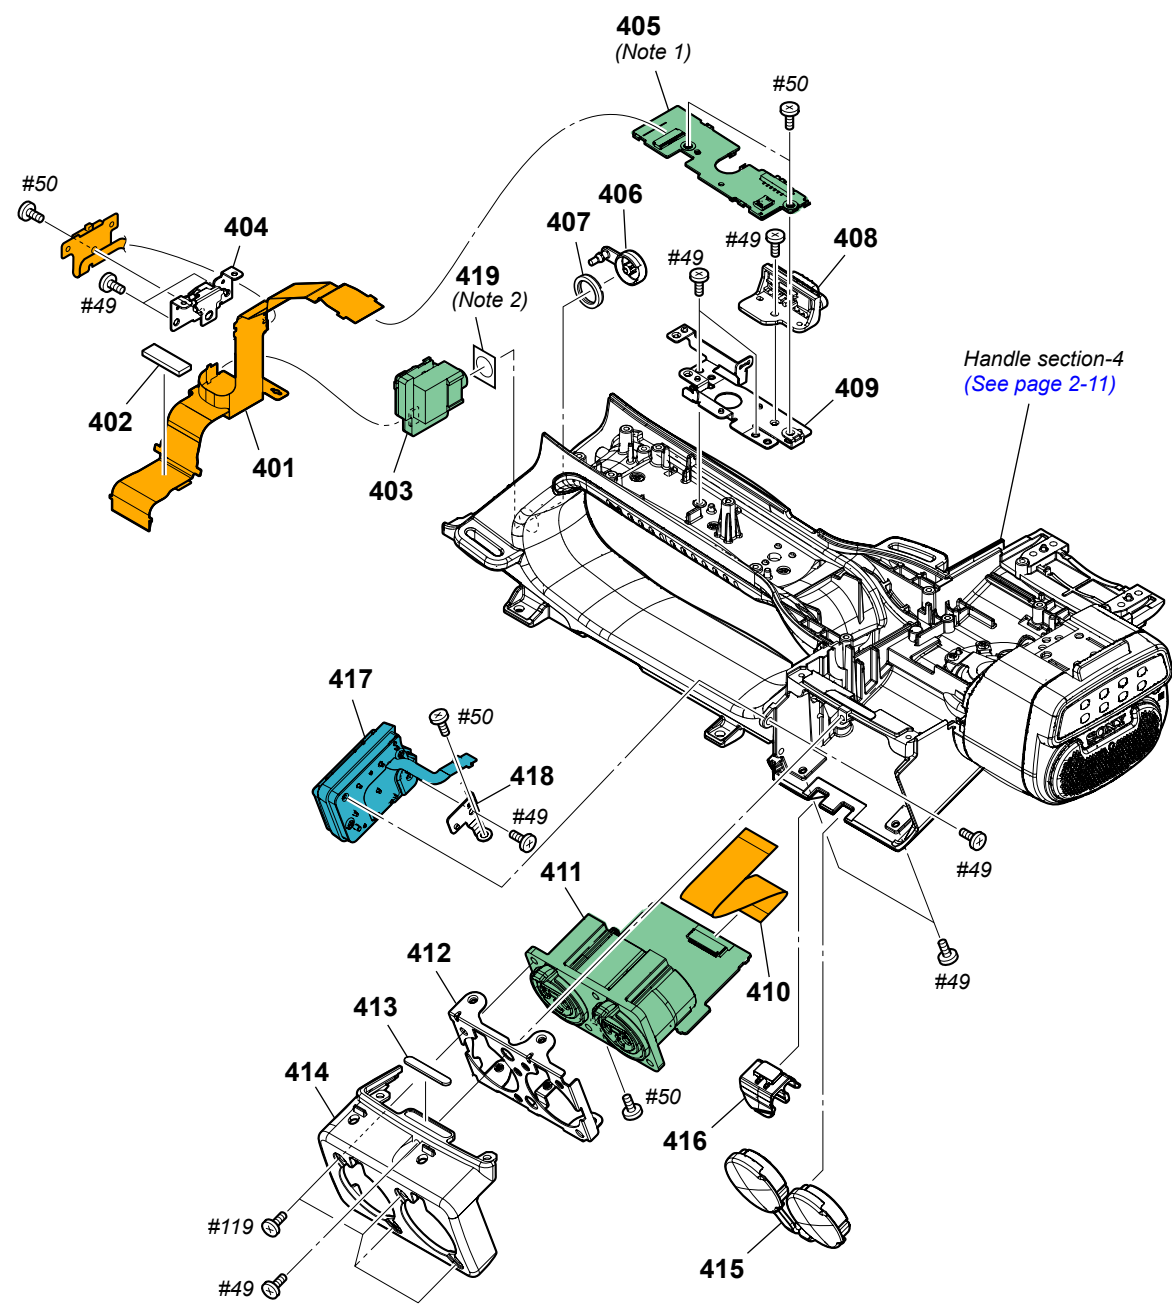


Screw


#49: M2.0 X 4.0
(Black)
2-630-005-31

 

#50: M2.0 X 3.0
(Red)
2-891-494-11

 

#119: M2.6 X 5.0
(Black)
7-627-556-58

 

Note


Note 1: Refer to "Assembly-5: On installation of the HG-1002 Board, adjust the position of the switch".

Note 2: Do not reuse these Parts because their adhesive force decreases when they are removed once.

Note 1: 組立時は"Assembly-5: On installation of the HG-1002 Board, adjust the position of the switch"を参照してください。


Note 2: これらの部品は一度剥がすと粘着力が弱くなるため、再利用はしないでください。

2-1-9. HANDLE SECTION-4

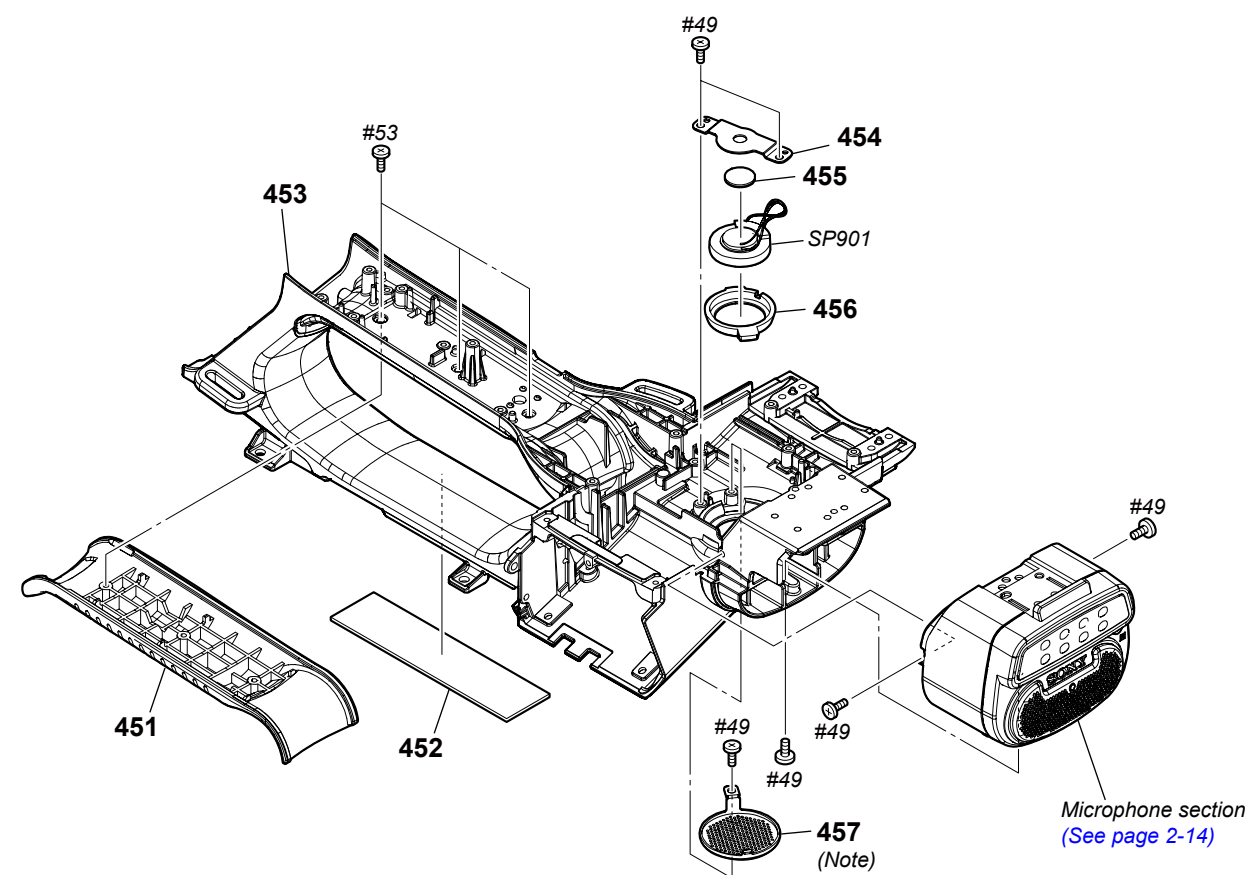


Screw

#49: M2.0 X 4.0
(Black)
2-630-005-31

 

#53: M2.0 X 5.0 (Tapping)
(Black)
3-080-206-21

 


Note

Note: Refer to “Assembly-3: How to bent the Speaker Grille” when installing.


Note: 組立時は“Assembly-3: How to bent the Speaker Grille”を参照してください。

2-1-10. EVF SECTION

ns: not supplied

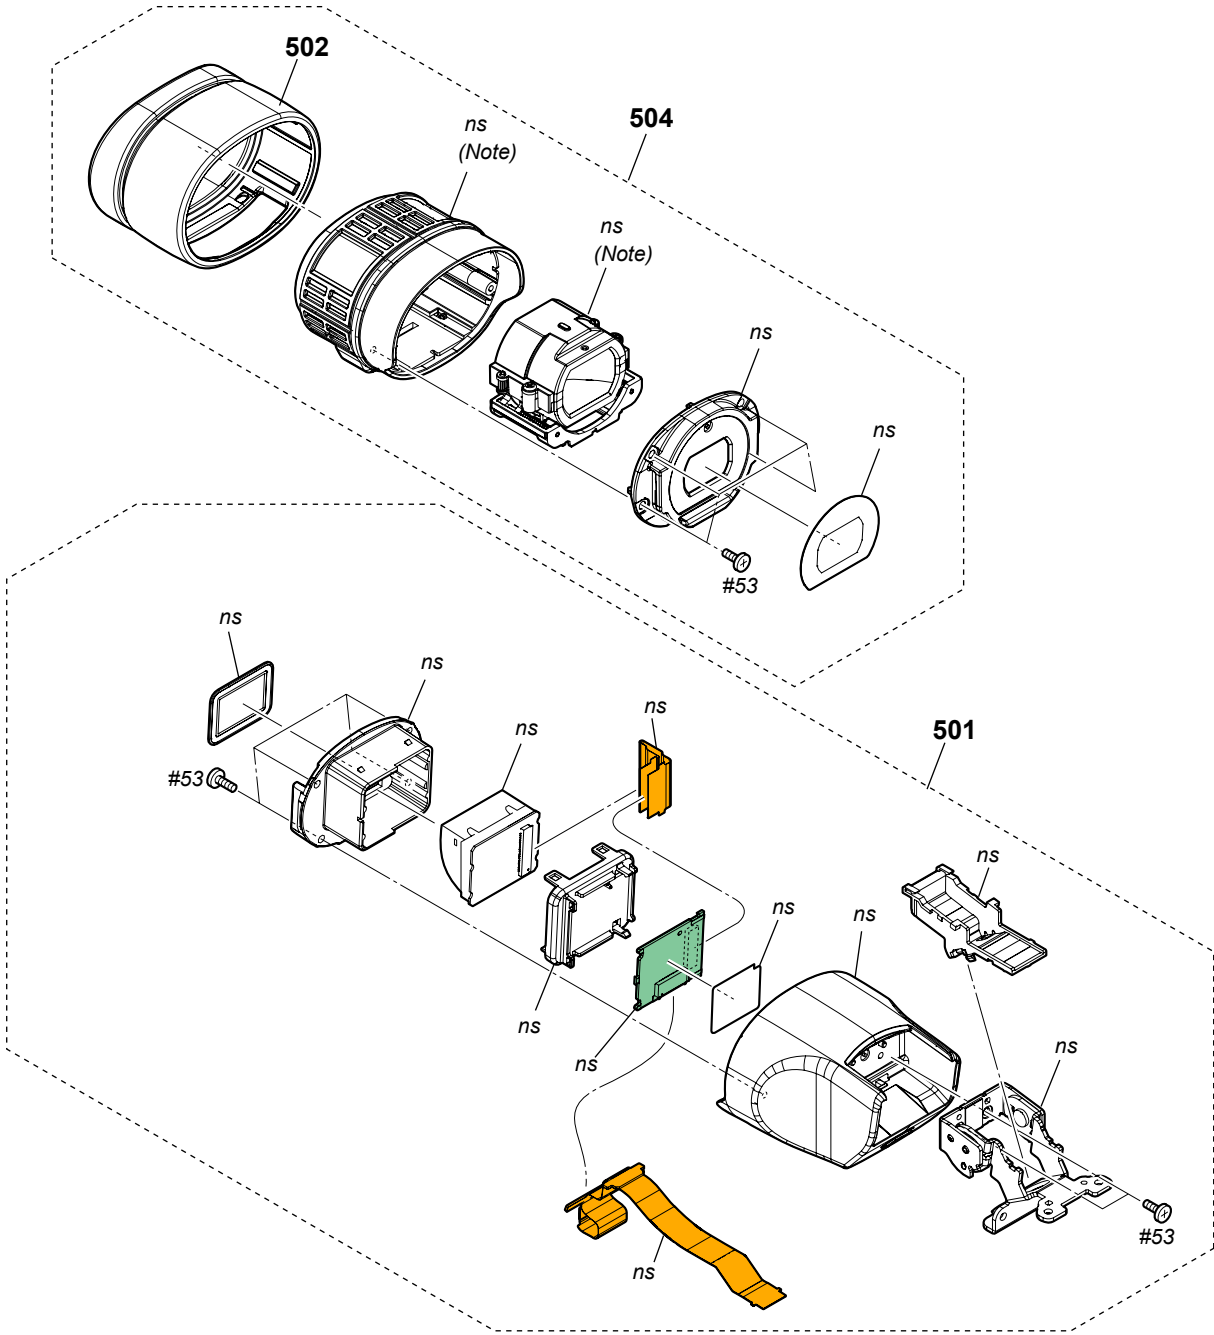

Screw

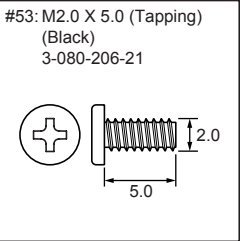


Note

- Note:** Refer to “Assembly-1: Confirm the Diopter Adjustment Lever is on the left side when installing the VF Lens Assy” when installing.
- Note:** 組立時は“Assembly-1: Confirm the Diopter Adjustment Lever is on the left side when installing the VF Lens Assy”を参照してください。


2-1-11. LCD SECTION

ns: not supplied

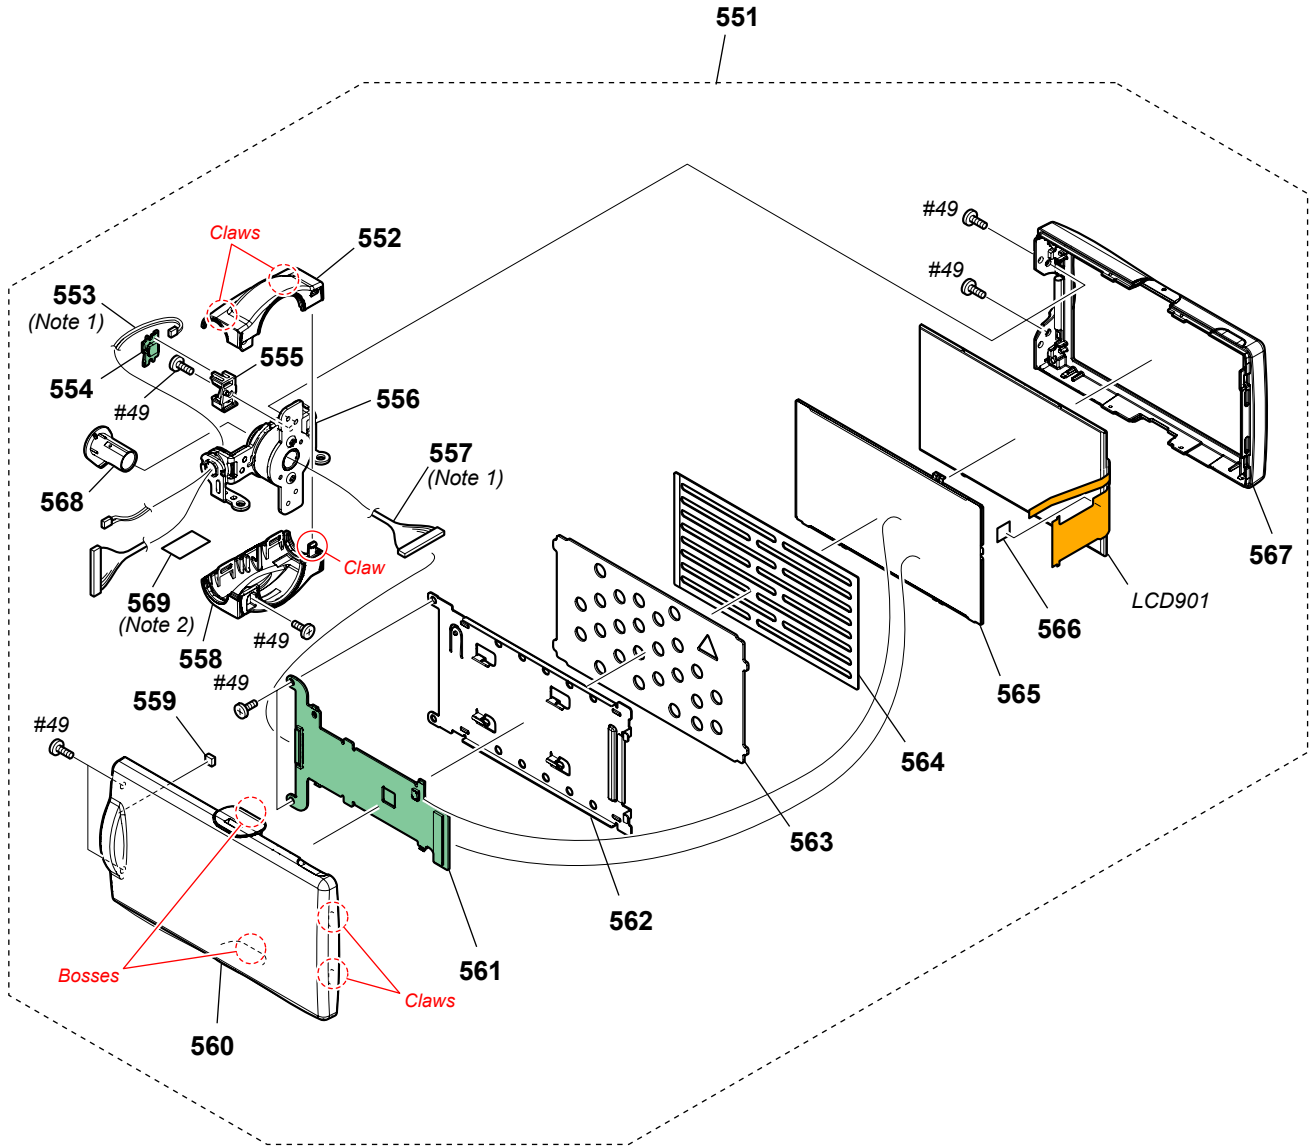

Screw

#49: M2.0 X 4.0
(Black)
2-630-005-31

 

Note

Note 1: Refer to "Assembly-2: How to arrange Harnesses (SW-116)" when installing.


Note 2: Do not reuse these Parts because their adhesive force decreases when they are removed once.

Note 1: 組立時は"Assembly-2: How to arrange Harnesses (SW-116)"を参照してください。


Note 2: これらの部品は一度剥がすと粘着力が弱くなるため、再利用はしないでください。

2-1-12. MICROPHONE SECTION

ns: not supplied

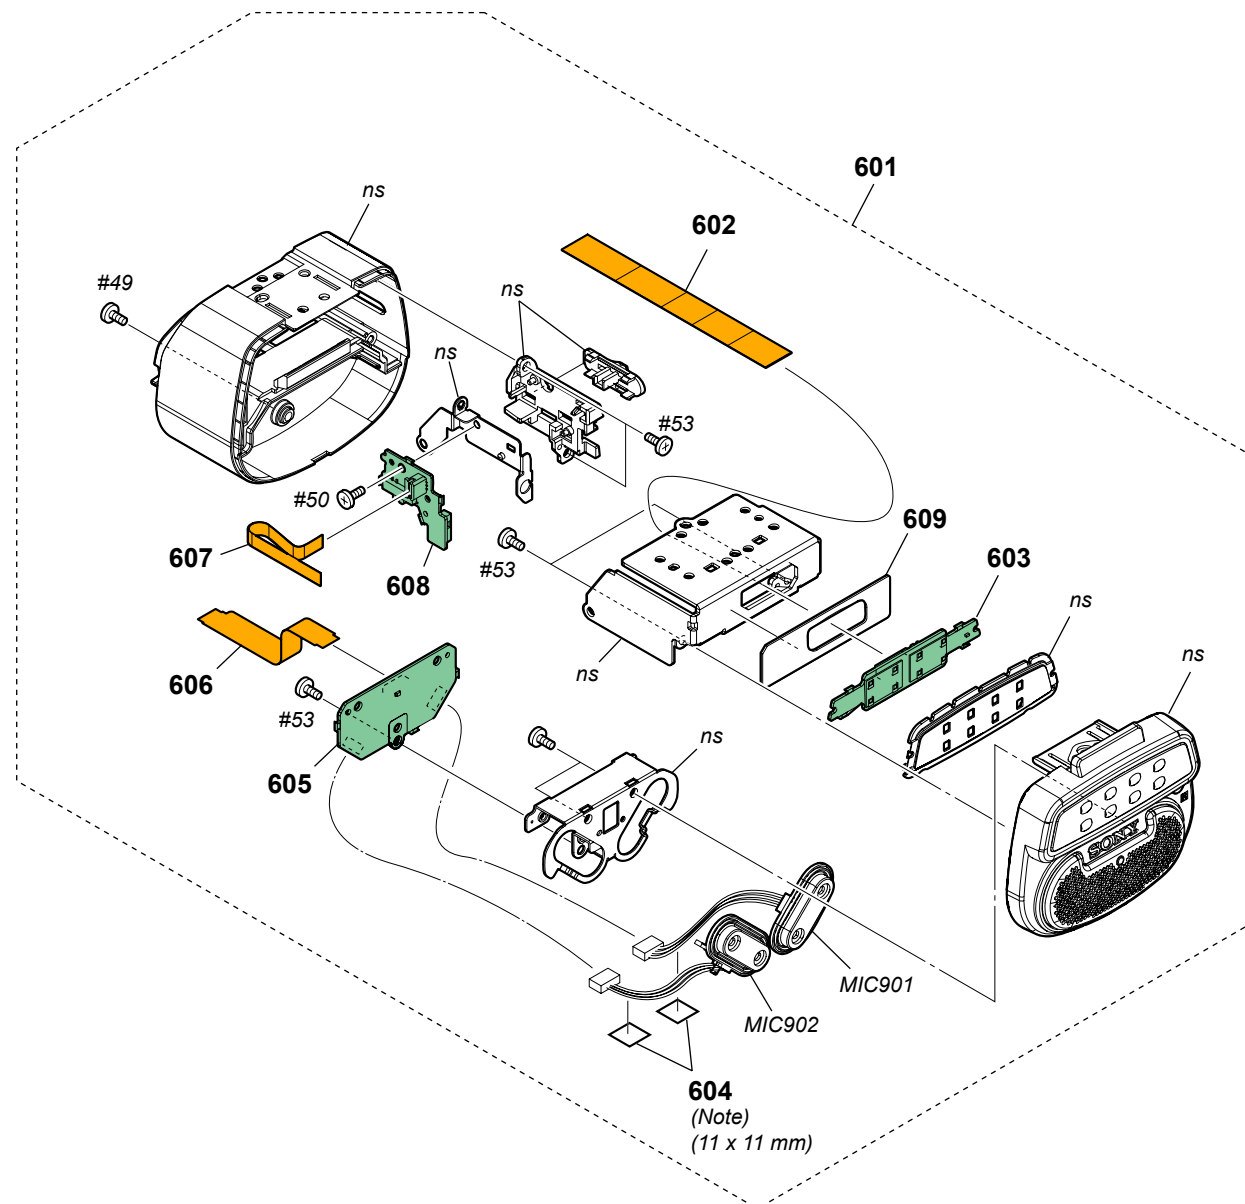

Screw

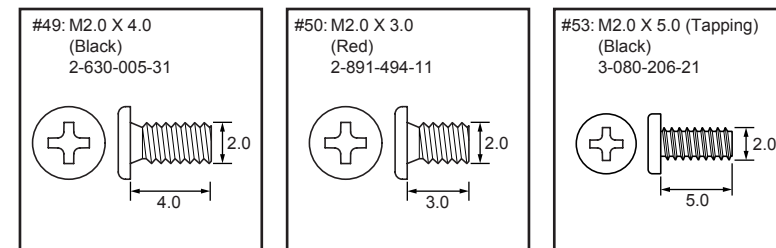


Note

Note: Cut the NON WOVEN (T0.25) (Ref.No.604) for specified size and use it.

Note: NON WOVEN (T0.25) (図面番号604) は、指定の寸法にカットして使用してください。


2-1-13. LENS SECTION

ns: not supplied

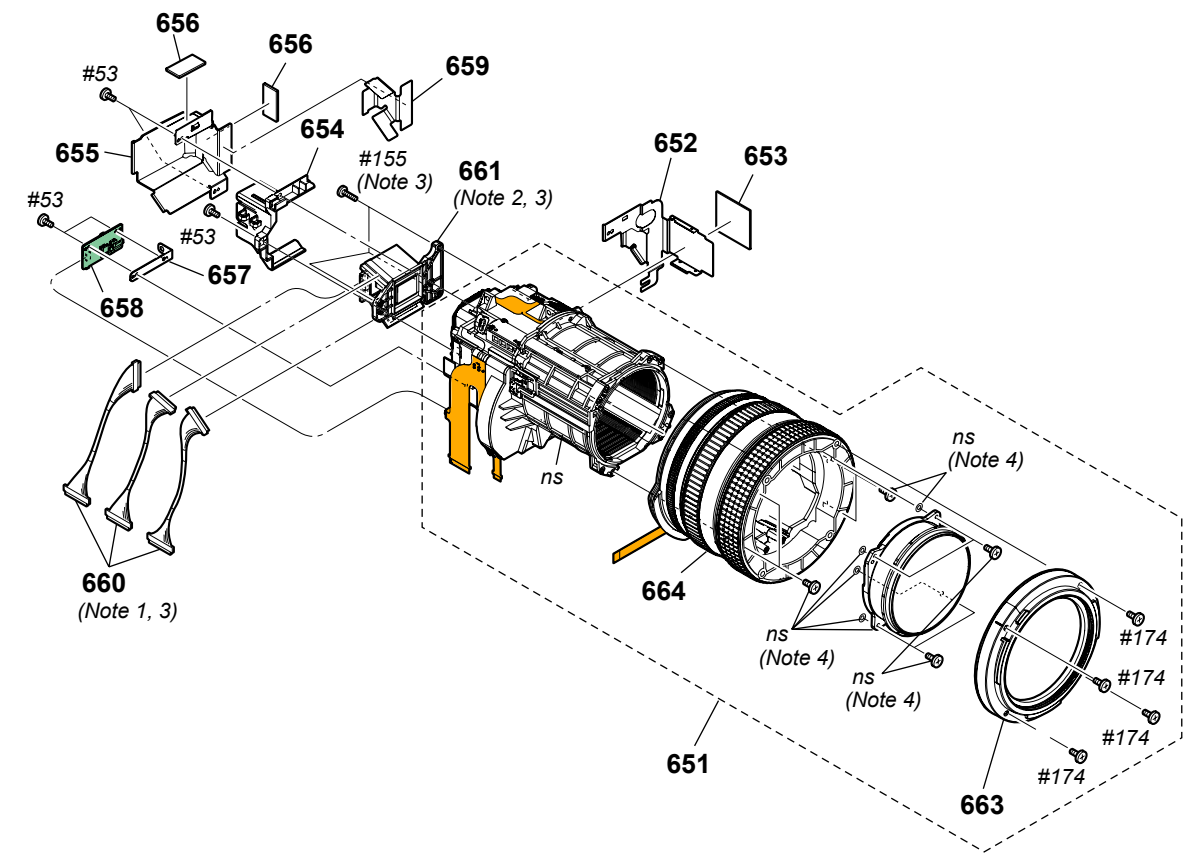


Screw


#53: M2.0 X 5.0 (Tapping)
(Black)
3-080-206-21

 

#155: M1.7 X 6.0 (Tapping)
(Black)
3-080-204-31

 

#174: M1.7 X 5.0 (Tapping)
(Black)
3-713-791-35

 


Note

Note 1:

Disconnecting the Harness (Coaxial Cable)

When disconnecting the harness (COAXIAL CABLE), do not pull the harness part but pull off the connector body with tweezers etc.

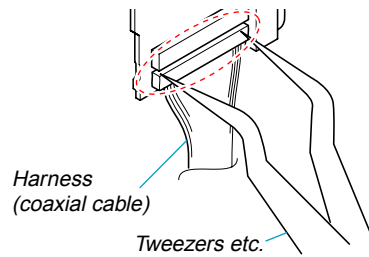


Note 2: Be sure to read "Precautions for Replacement of Imager" on page 6-1 when changing the imager.

Note 1:

ハーネス (同軸ケーブル) の交換について


ハーネス (同軸ケーブル) を引き抜く際は、ハーネス部を引かず、ピンセット等でコネクタ部を引いてください。

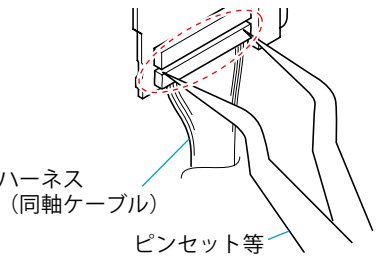


Note 2: イメージャの交換時は6-1ページの"イメージャ交換時の注意"を必ずお読みください。

Note 3: Prism Device cautions

Tighten screws in the following order.

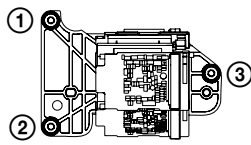


Be sure not to insert the harnesses forcefully.

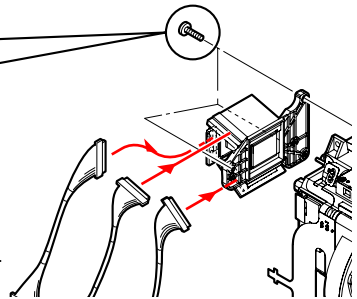


Note 3: プリズムデバイス組立時の注意

下記の順番でねじを締め付けてください。

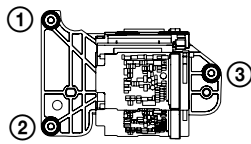


ハーネスを強く差し込まないでください。

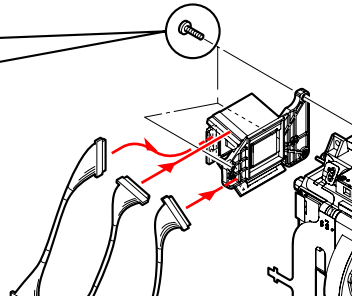


2-1-14. BT PANEL SECTION

ns: not supplied

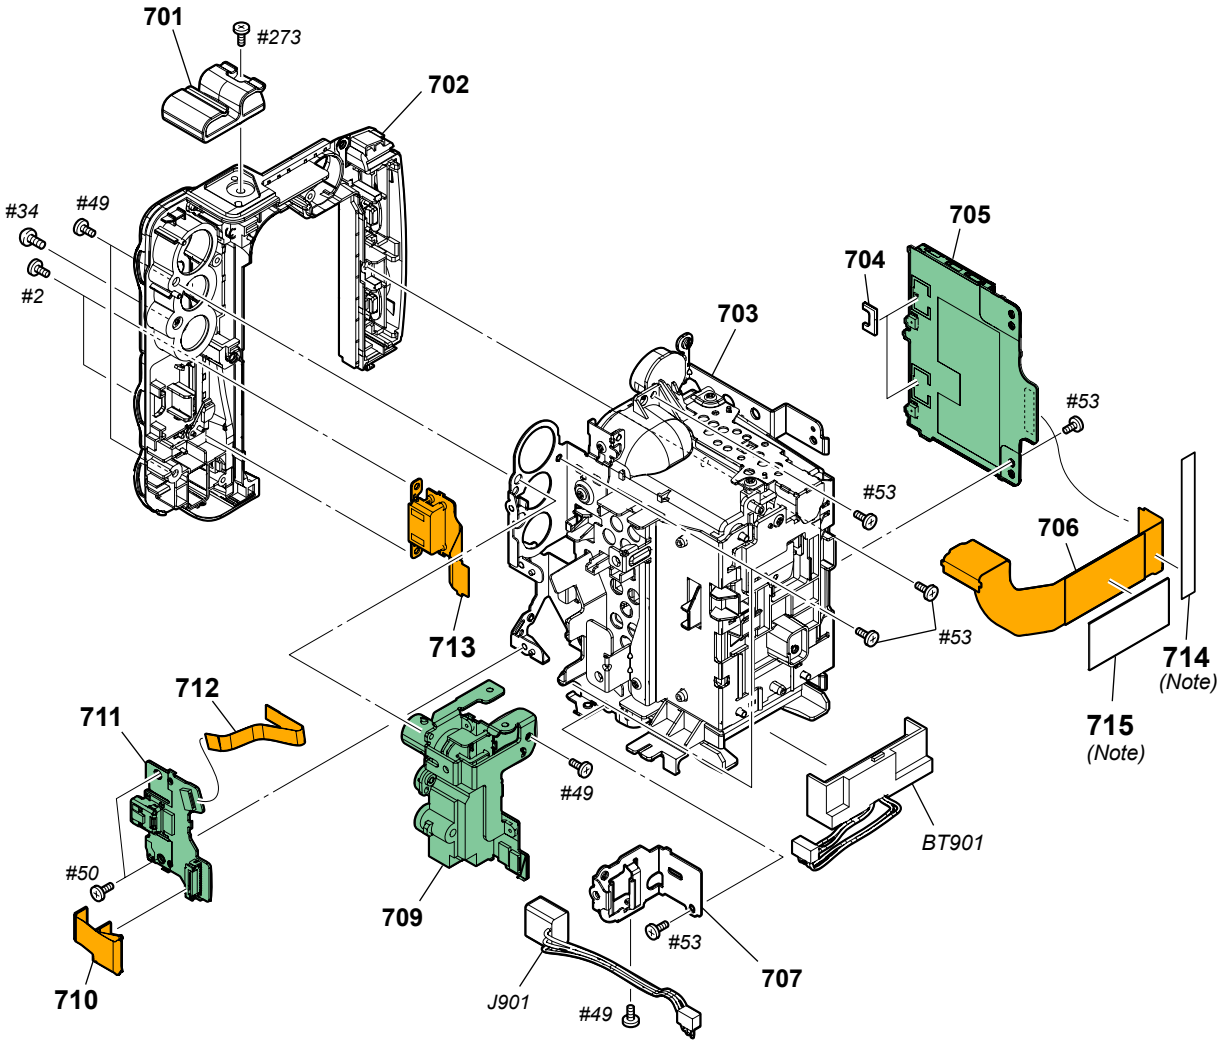


Screw


#2: M1.7 X 4.0
(Black)
2-635-562-31

 


#34: M3.0 X 8.0
(Black)
3-077-331-41

 


#49: M2.0 X 4.0
(Black)
2-630-005-31

 


#50: M2.0 X 3.0
(Red)
2-891-494-11

 

#53: M2.0 X 5.0 (Tapping)
(Black)
3-080-206-21

 

#273: M2.0 X 6.0
(Black)
2-342-356-21

 


Note

Note: Do not reuse these Parts because their adhesive force decreases when they are removed once.

Note: これらの部品は一度剥がすと粘着力が弱くなるため、再利用はしないでください。

• EXCEPT J MODEL
ACCESSORIES

– ENGLISH –

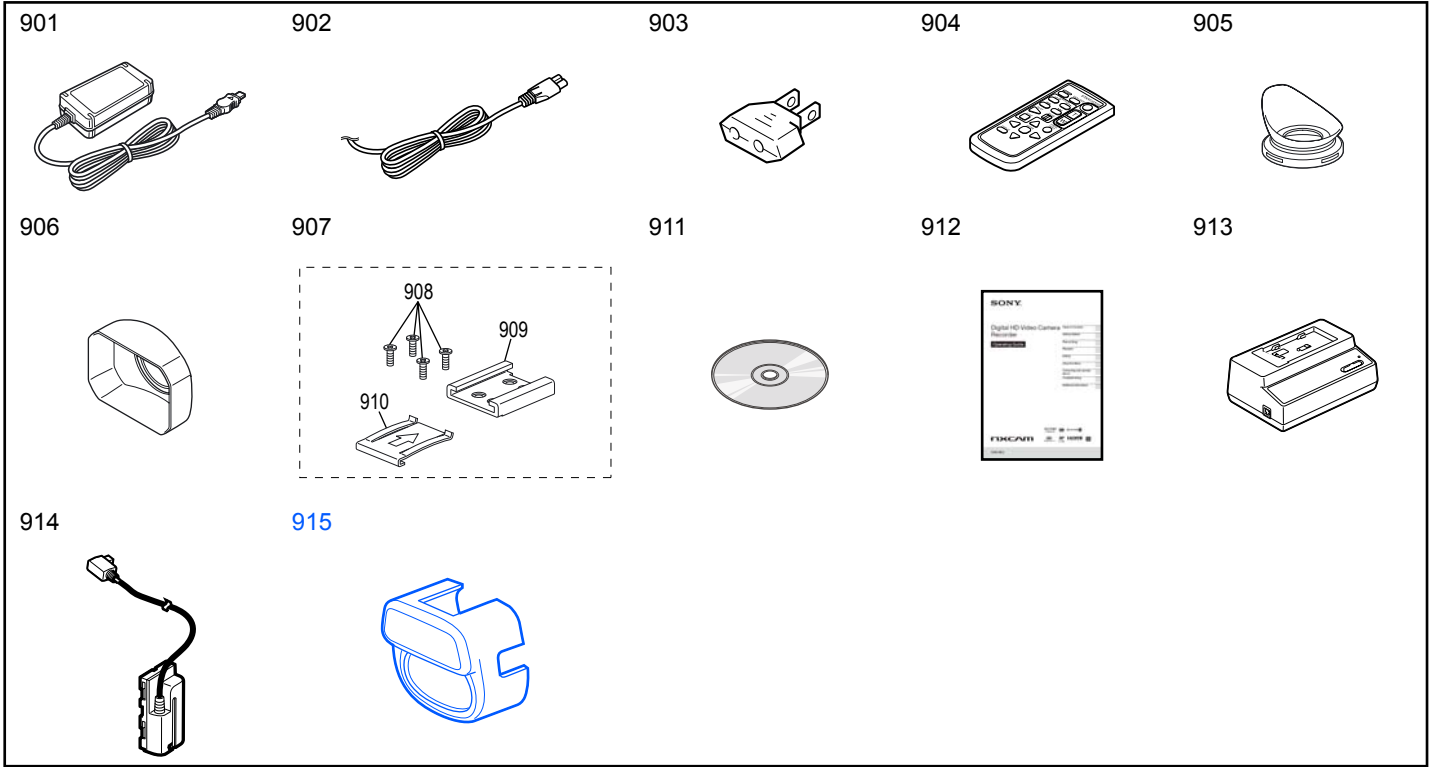

• J MODEL
付属品

– JAPANESE –

