


6-4. KDL-60NX720, KDL- 60NX723

6-4-1. Disassembly, Exploded View






- Remove screws before disassembly.
- Details of screws Section 6-4-2.
- Unplug connectors before disassembly.
- Please refer to Connectors information.

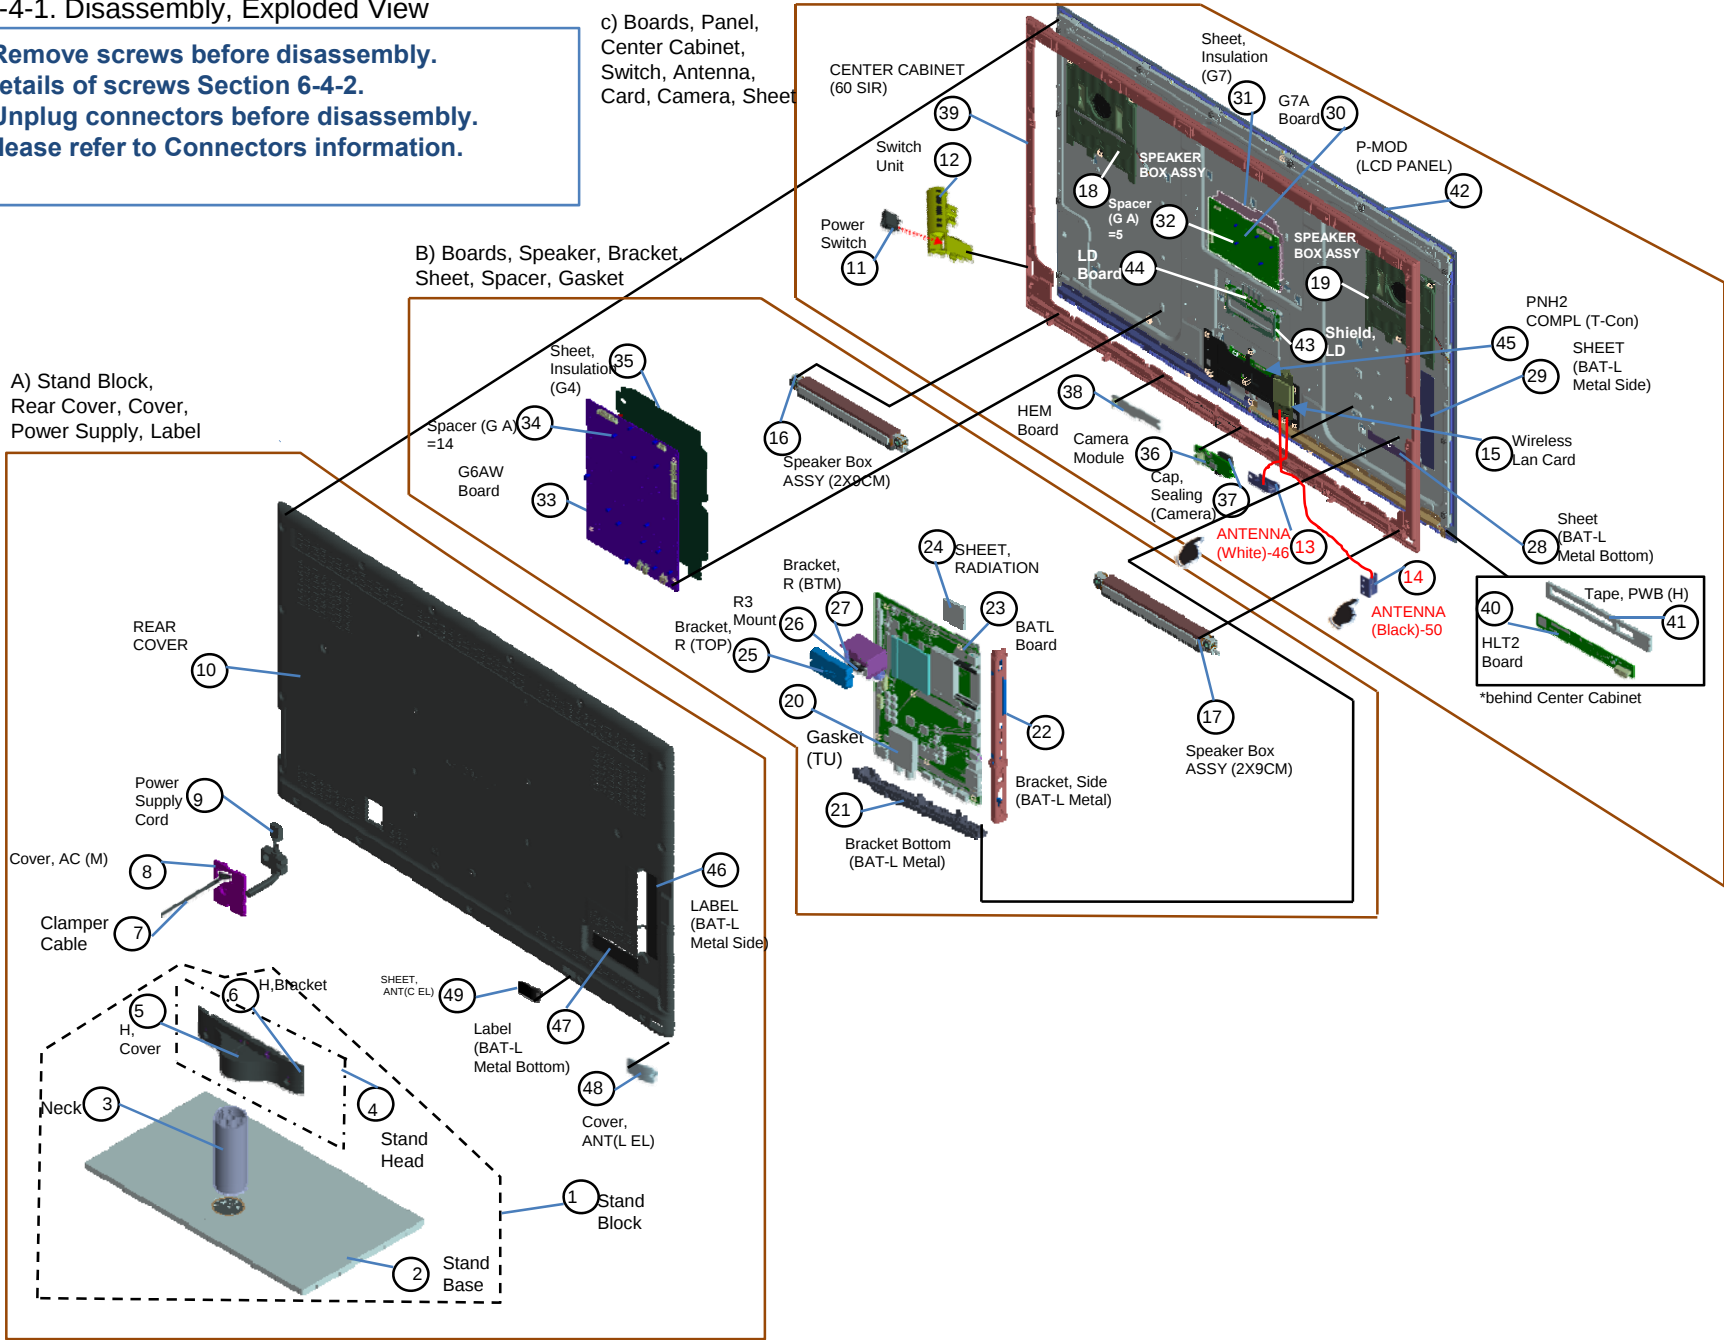

6-4. KDL-60NX720, 60NX723

6-4-2. Screws

Ref Part	Description
	SCREW (+PSW) (M3X6)
	SCREW +BVTP 3X12 TYPE2 IT-3
	SCREW +BVTP 3X8 TYPE2 IT-3
	SCREW, +BVTP 4X12 TYPE2 IT-3
	SCREW, +PSW M3X6 W12
	SCREW, +PSW M5X16
	SCREW, +PWH M3X8
	SCREW, ORNAMENTAL M6X12
	JOINT STAND
	USER SCREW ST

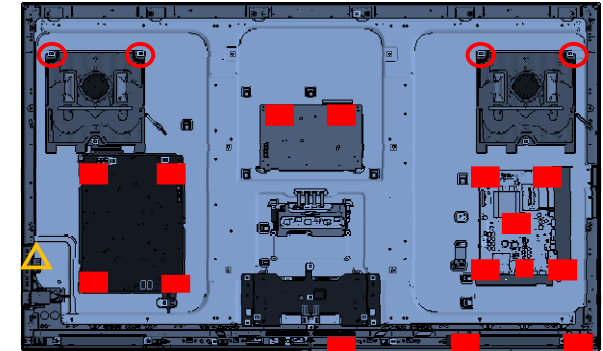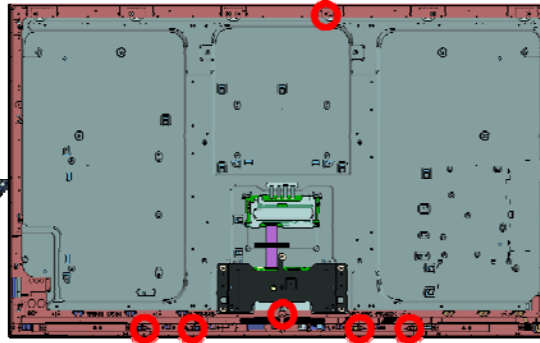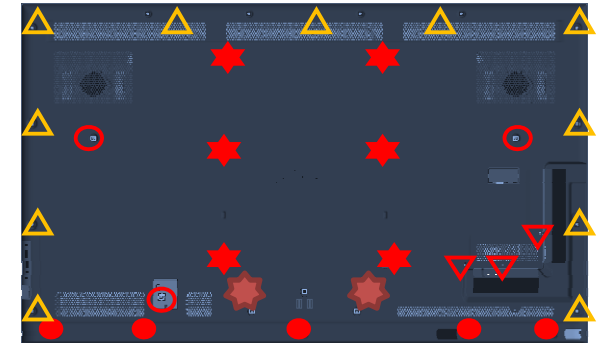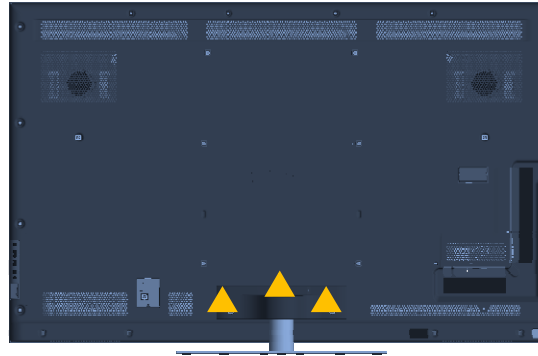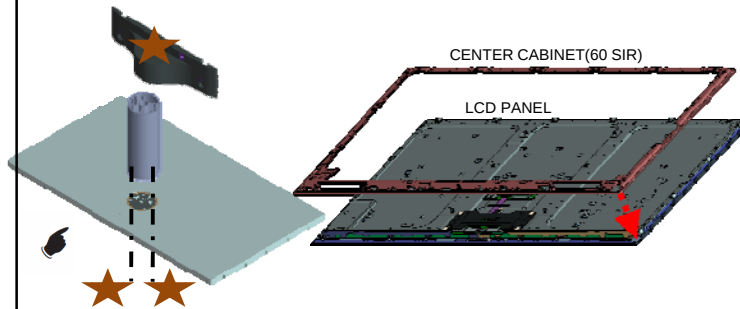

6-4-3. Connectors

Ref P	Description	Remark
51	CONNECTOR ASSY	CN6003 (G6) - CN6002 (G6) - ECOSW (1)
52	CONNECTOR ASSY 14P	CN6700 (G7) - CN2001 (LD) (1)
53	CONNECTOR ASSY 28P	CN6001 (BAT-L) - CN6002 (BAT-L) - CN6101 (G6) - TCON (1)
54	CONNECTOR ASSY 2P	CN6502 (G6) - CN6501 (G6) - CN6601 (G7/G8) - CN6600 (G7/G8)(1)
55	CONNECTOR ASSY 6P	CN9005 (BAT-V/L) - CN001 (R3) (1)
56	CONNECTOR ASSY 7P	CN6102 (G6) - CN6701 (G7/G8) (1)
57	FFC T-LD H120 (60)	
58	FLEXIBLE FLAT CABLE N1 60S	CN2001 (BAT-L) - PANEL (1)
59	HARNESS ASSY	CN9006 (BAT-L) - CN001 (HLT2) - HEM2 - LOGO - WIFI - CAMERA - SW / CN4601 (BAT-L) - SP (1)

