



EXPLODED VIEWS
1. MAIN UNIT SECTION

LOCA. NO.	REMARKS
ASSEMBLY PARTS	
A41	Top case assy
A42	Bottom case
A46	Main board
A50	LED board
A51	Wifi Bluetooth module
A53	board assy
A54	Wireless board
A55	Touch PCB
A80C	Chamber Center
A80L	Chamber Left
A80R	Chamber Right

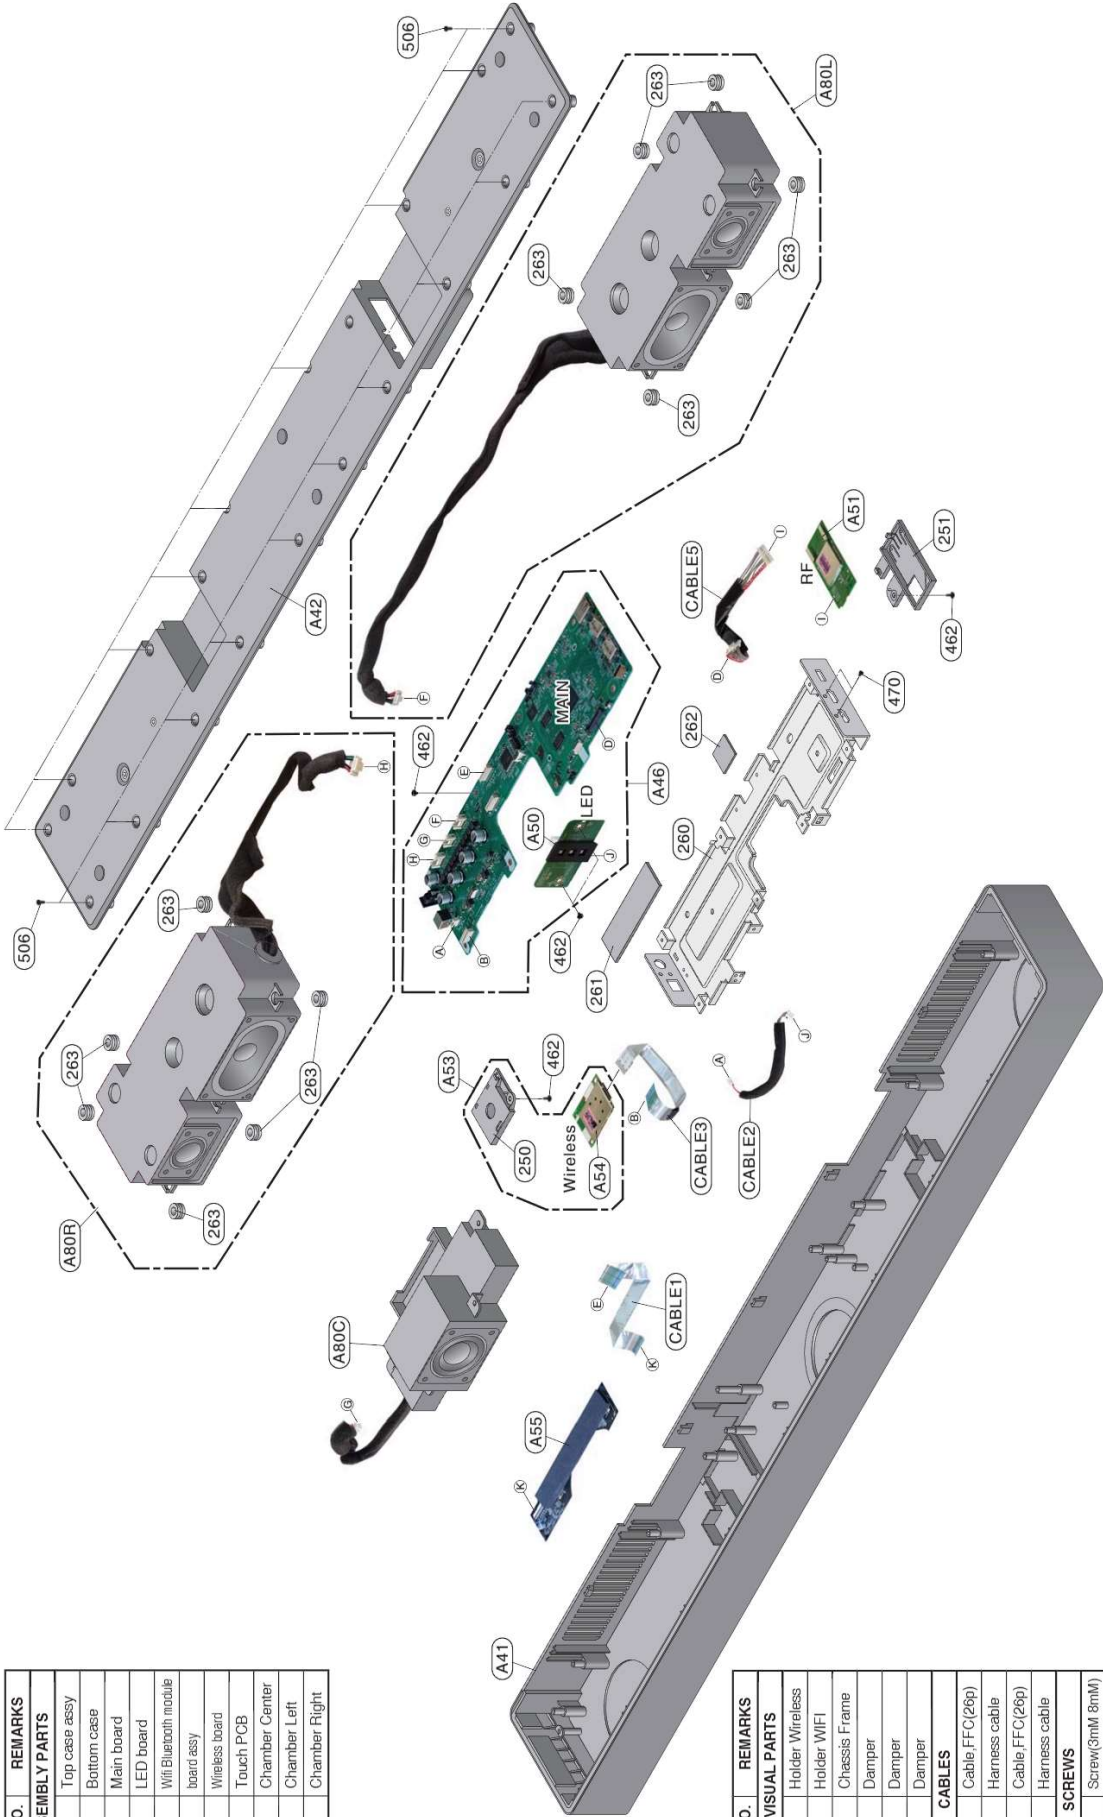

LOCA. NO.	REMARKS
INDIVIDUAL PARTS	
250	Holder Wireless
251	Holder WIFI
260	Chassis Frame
261	Damper
262	Damper
263	Damper
CABLES	
CABLE1	Cable FFC(26p)
CABLE2	Harness cable
CABLE3	Cable FFC(26p)
CABLE5	Harness cable
SCREWS	
462	Screw(3mm 8mM)
470	Screw(3mM)
506	Screw(3mM 12mM)

2. WIRELESS SUBWOOFER SECTION

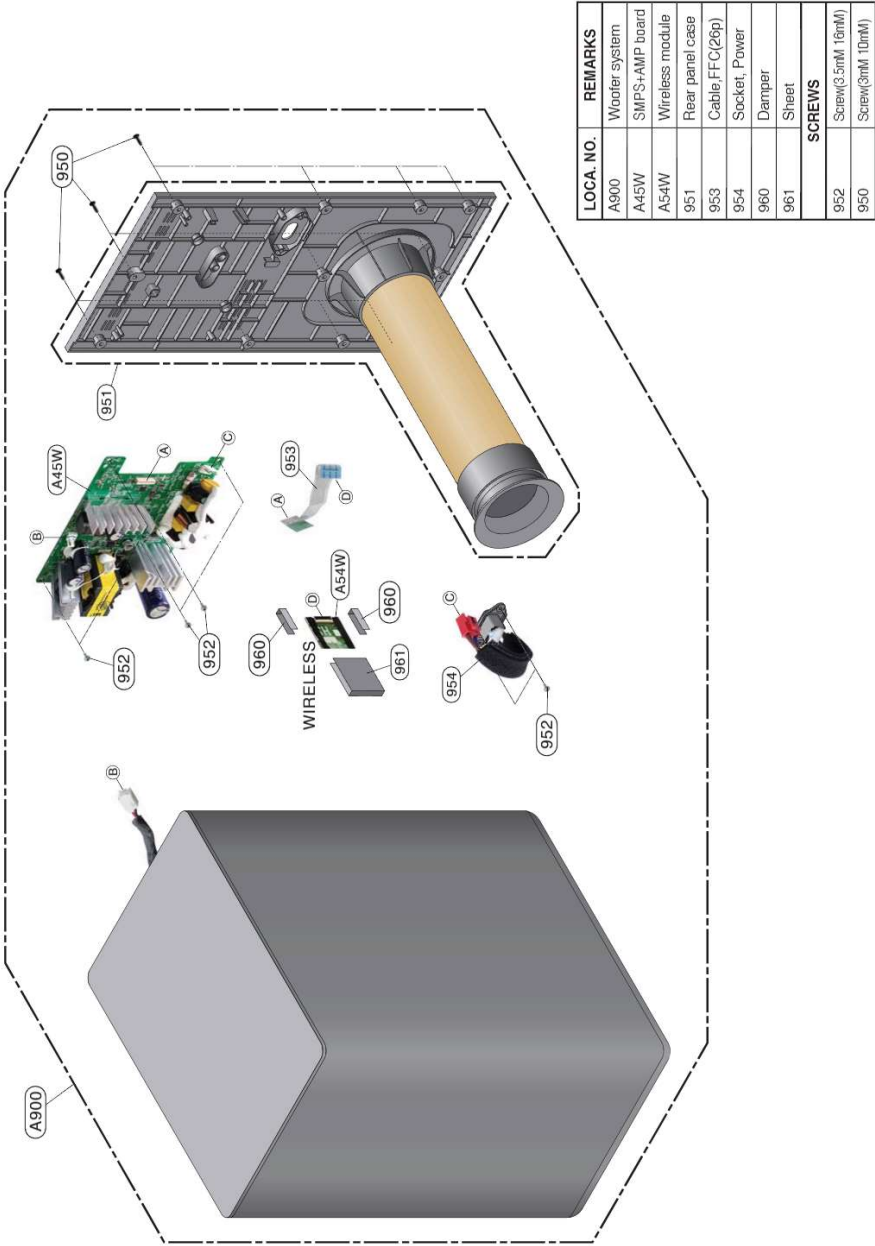

2-15

2-16

3. PACKING ACCESSORY SECTION

