

# SHARP PARTS LIST

## HOW TO ORDER REPLACEMENT PARTS

To have your order filled promptly and correctly, please furnish the following information.

1. MODEL NUMBER
2. REF. NO.
3. PART NO.
4. DESCRIPTION

## MICROWAVE OVEN

## MODEL R-331Y(S)

Parts marked "\*" may cause undue microwave exposure.  
Parts marked "▲" are used in voltage more than 250V.


## CONTENTS

[1] OVEN PARTS


PARTS

[2] DOOR AND CONTROL PANEL

■ INDEX

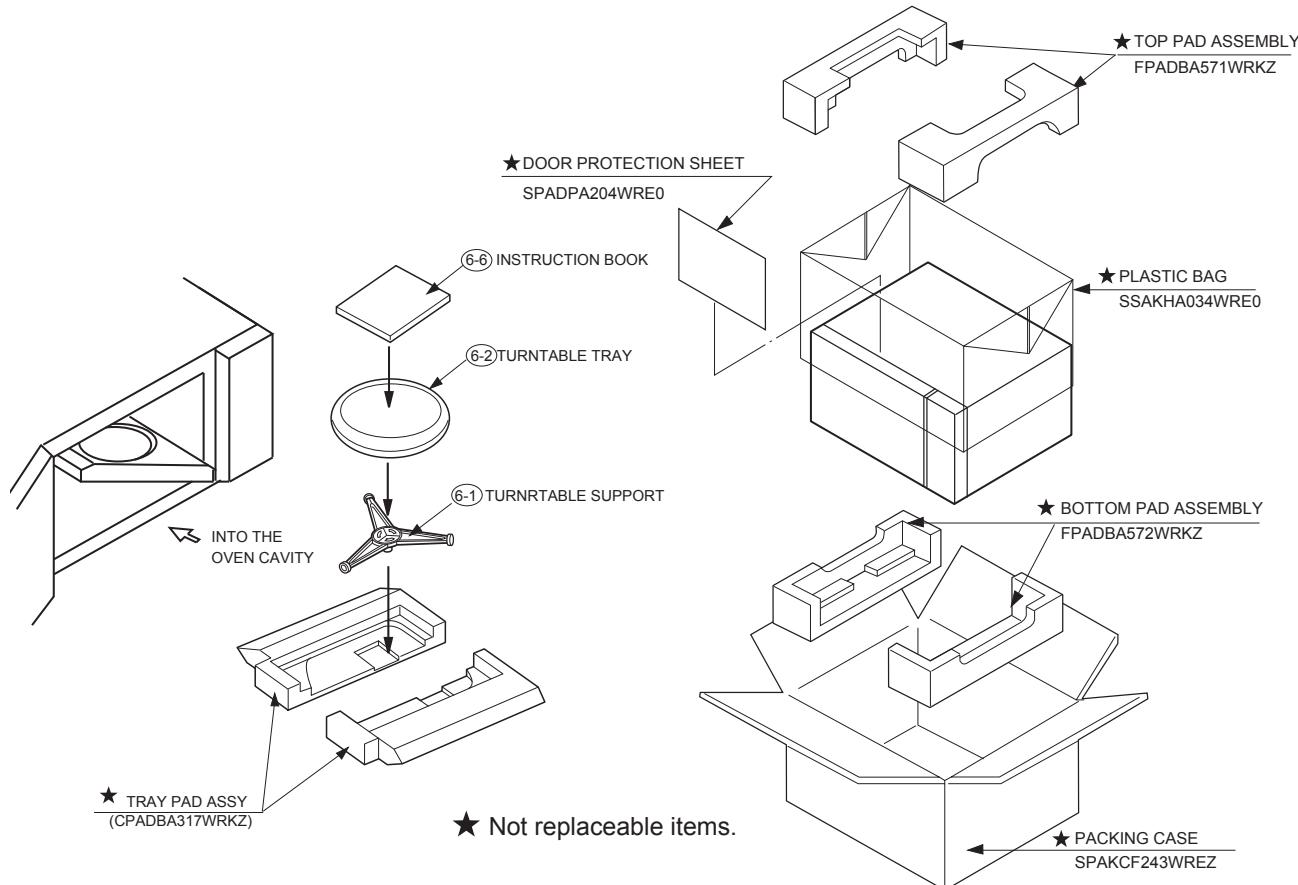


## [1] OVEN PARTS

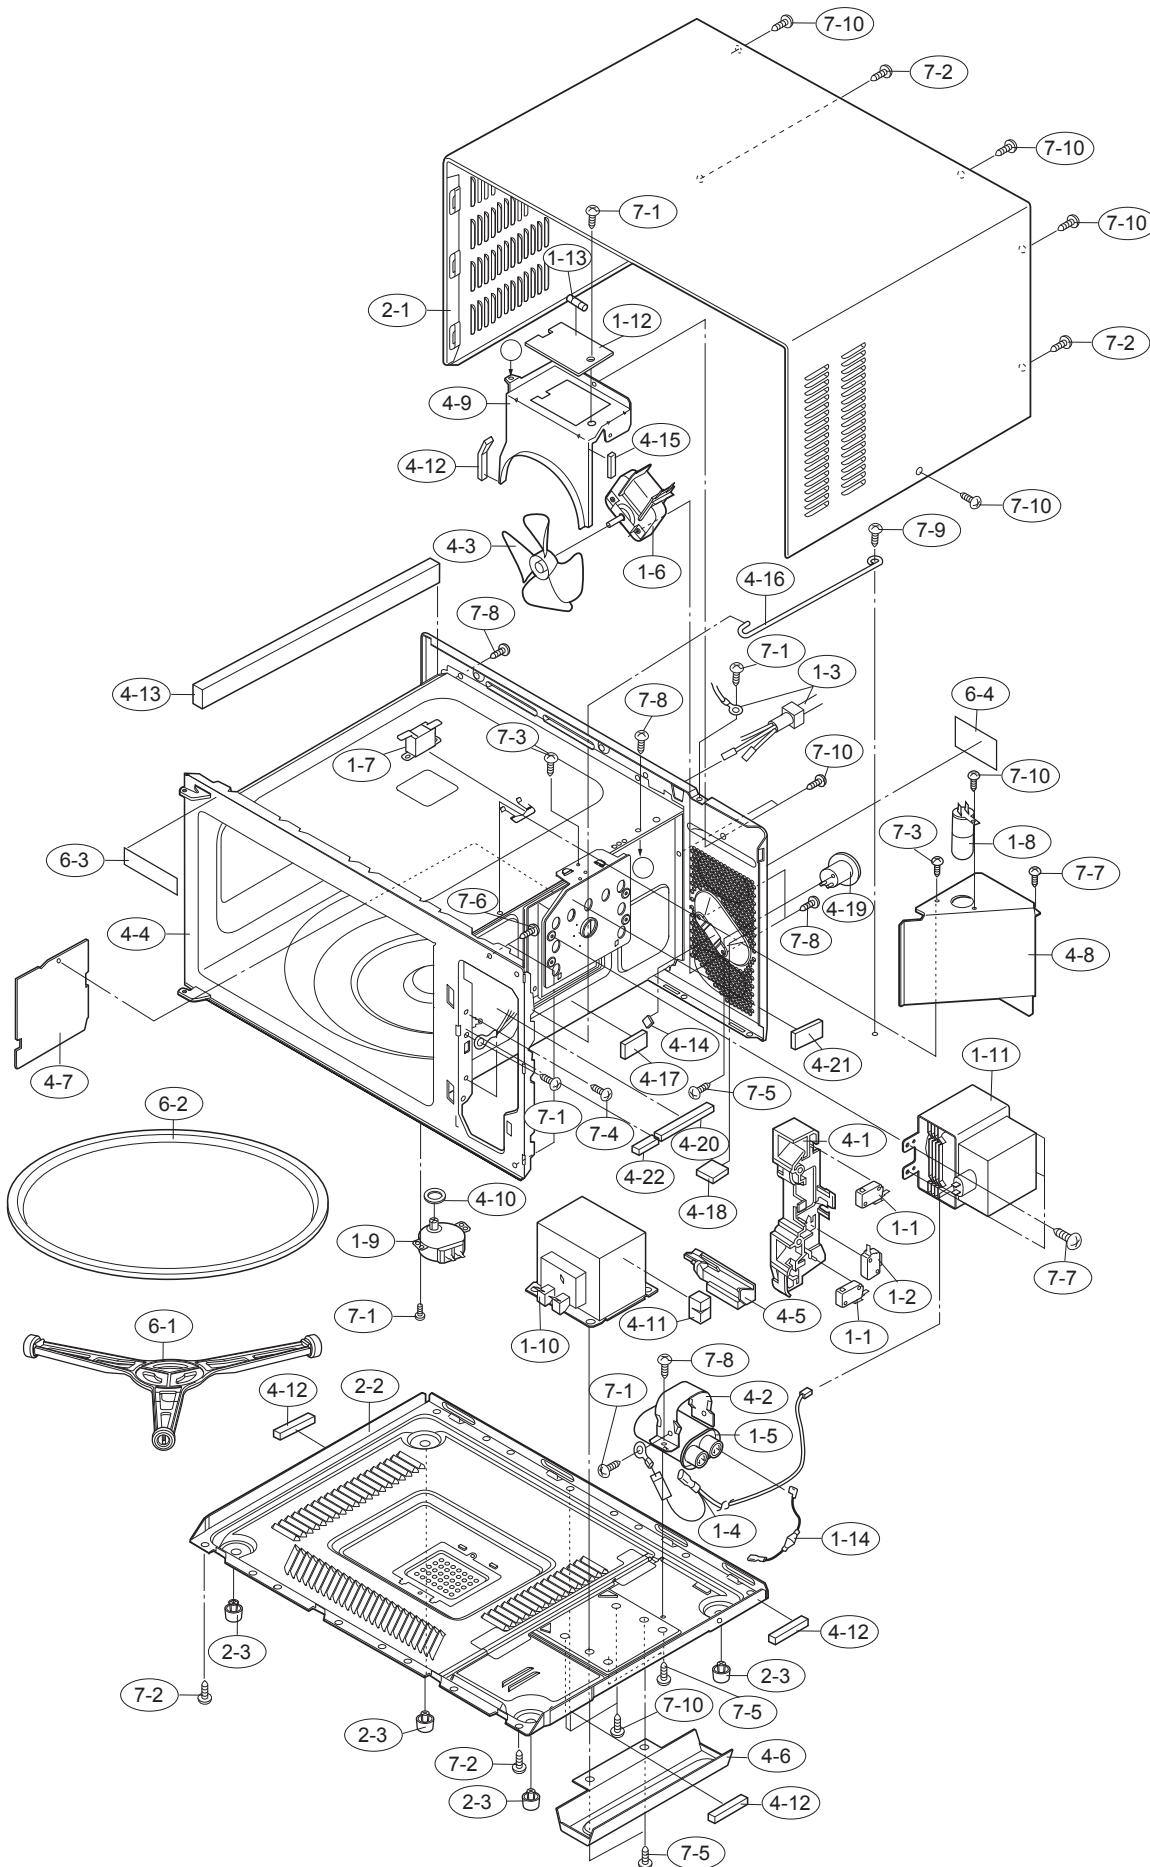


## [2] DOOR AND CONTROL PANEL PARTS


### DOOR PARTS

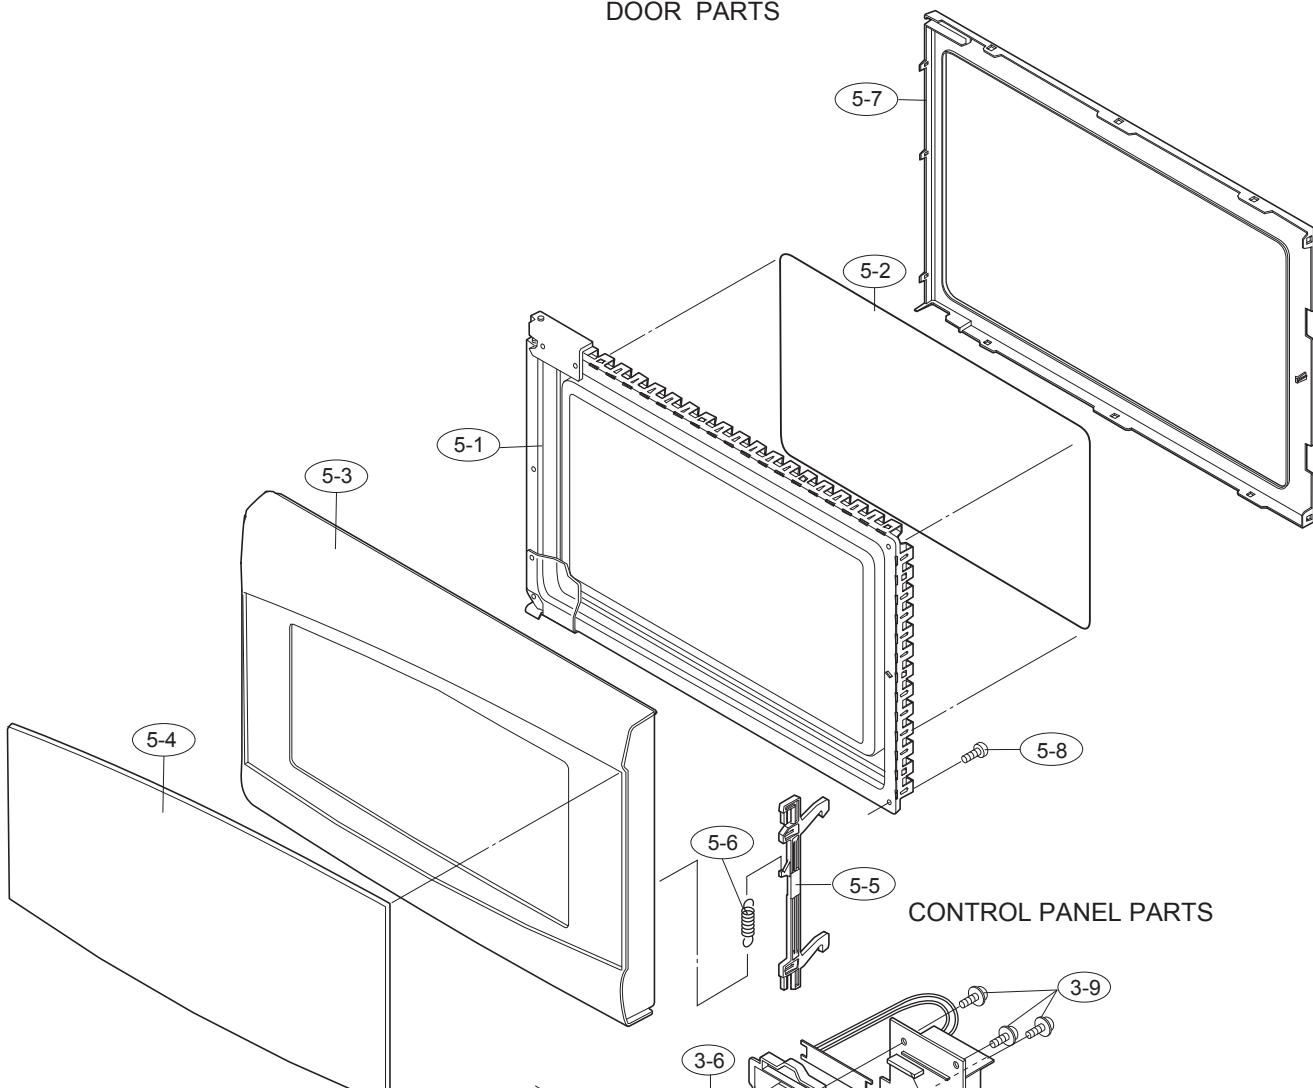

### CONTROL PANEL PARTS

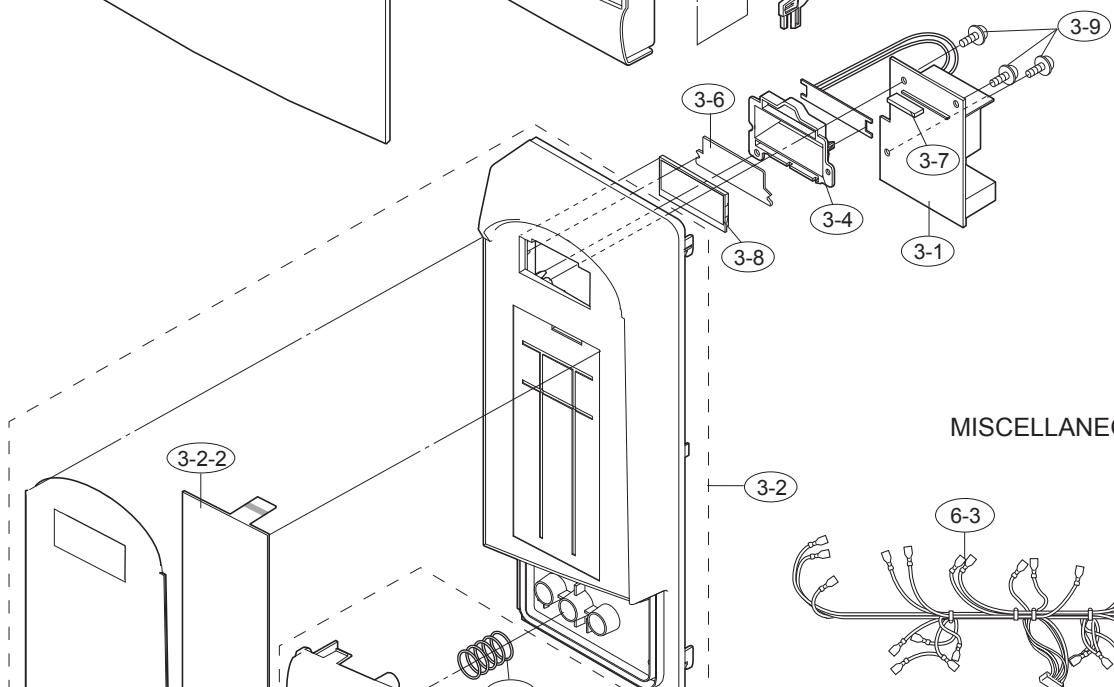

### MISCELLANEOUS

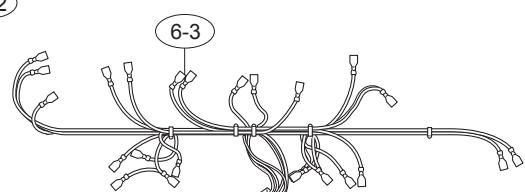

Actual wire harness may be different from illustration.

