

SONY®

SOLID-STATE MEMORY CAMCORDER

PXW-FS7

PXW-FS7H

PXW-FS7K

NZNEEDPA - Tue, 26 Nov 2024 00:07:32 GMT



XDCM XQD™ HDMI

MPEG HD422

Exmor
Super35 CMOS


XAVC

SERVICE MANUAL


1st Edition (Revised 4)

5-2. Exploded View


Overall Section-1

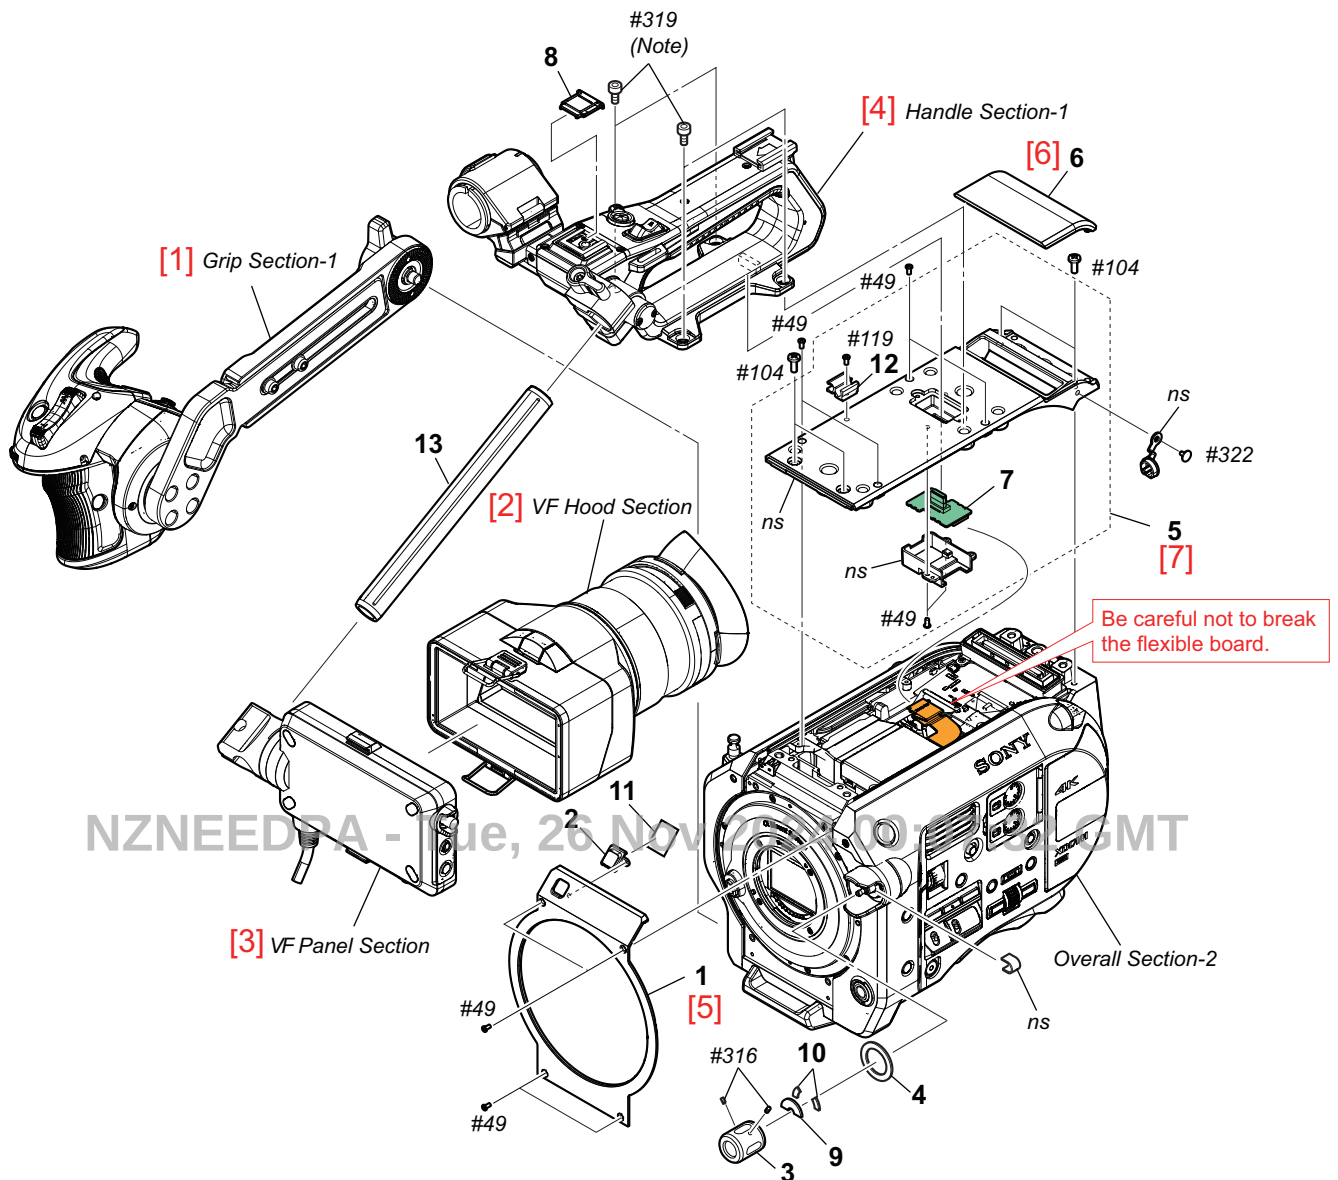


Overall Section-2

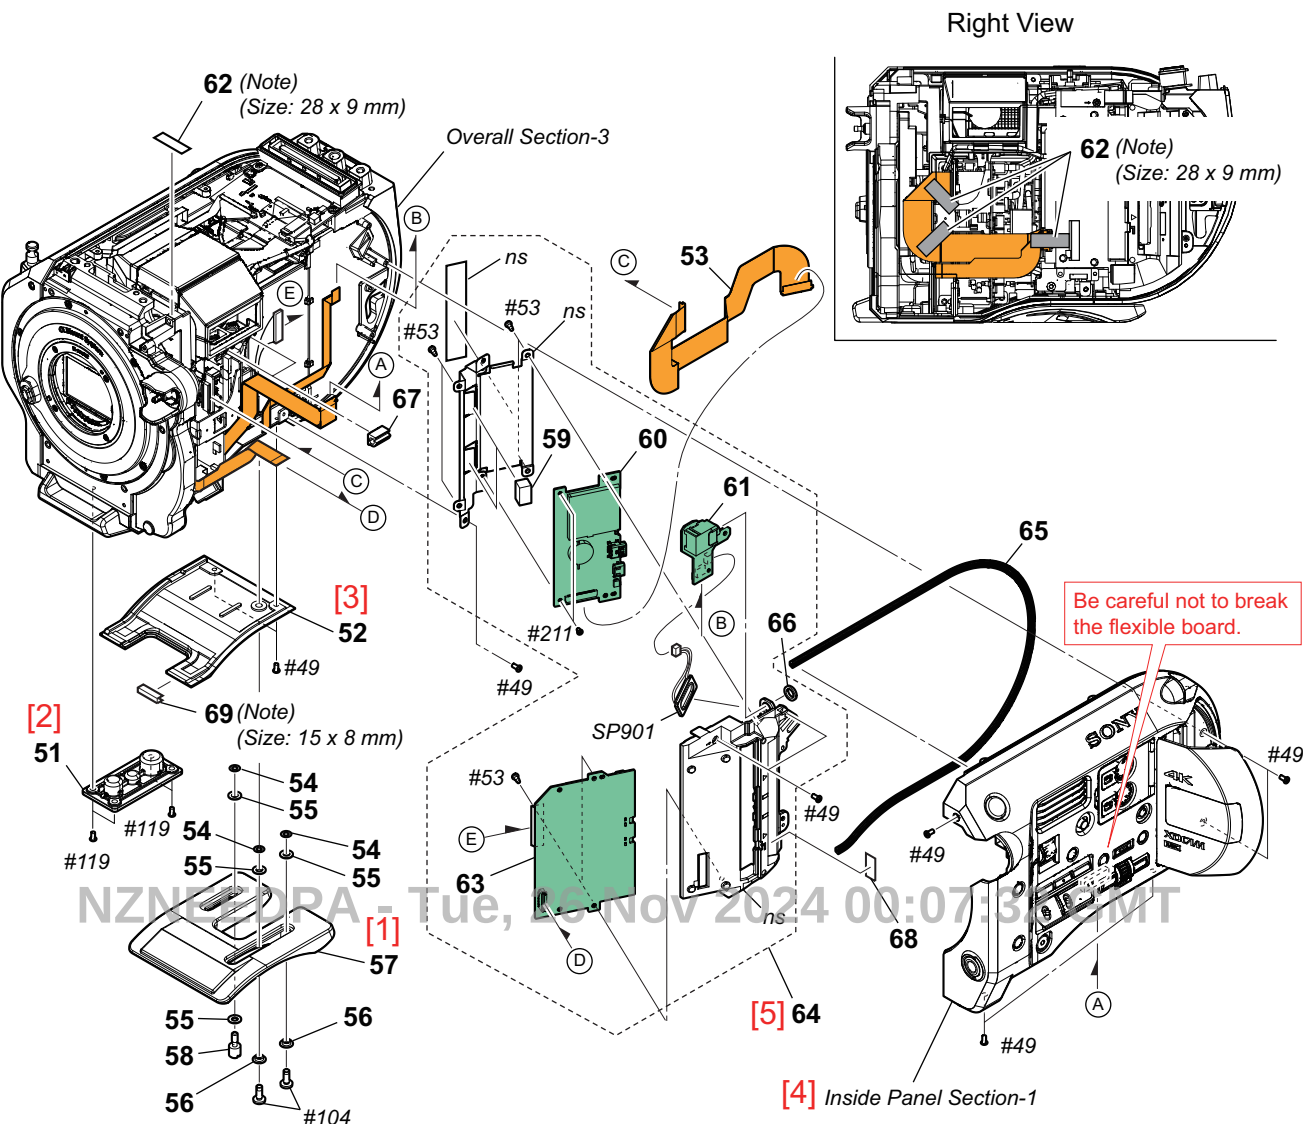


Overall Section-3

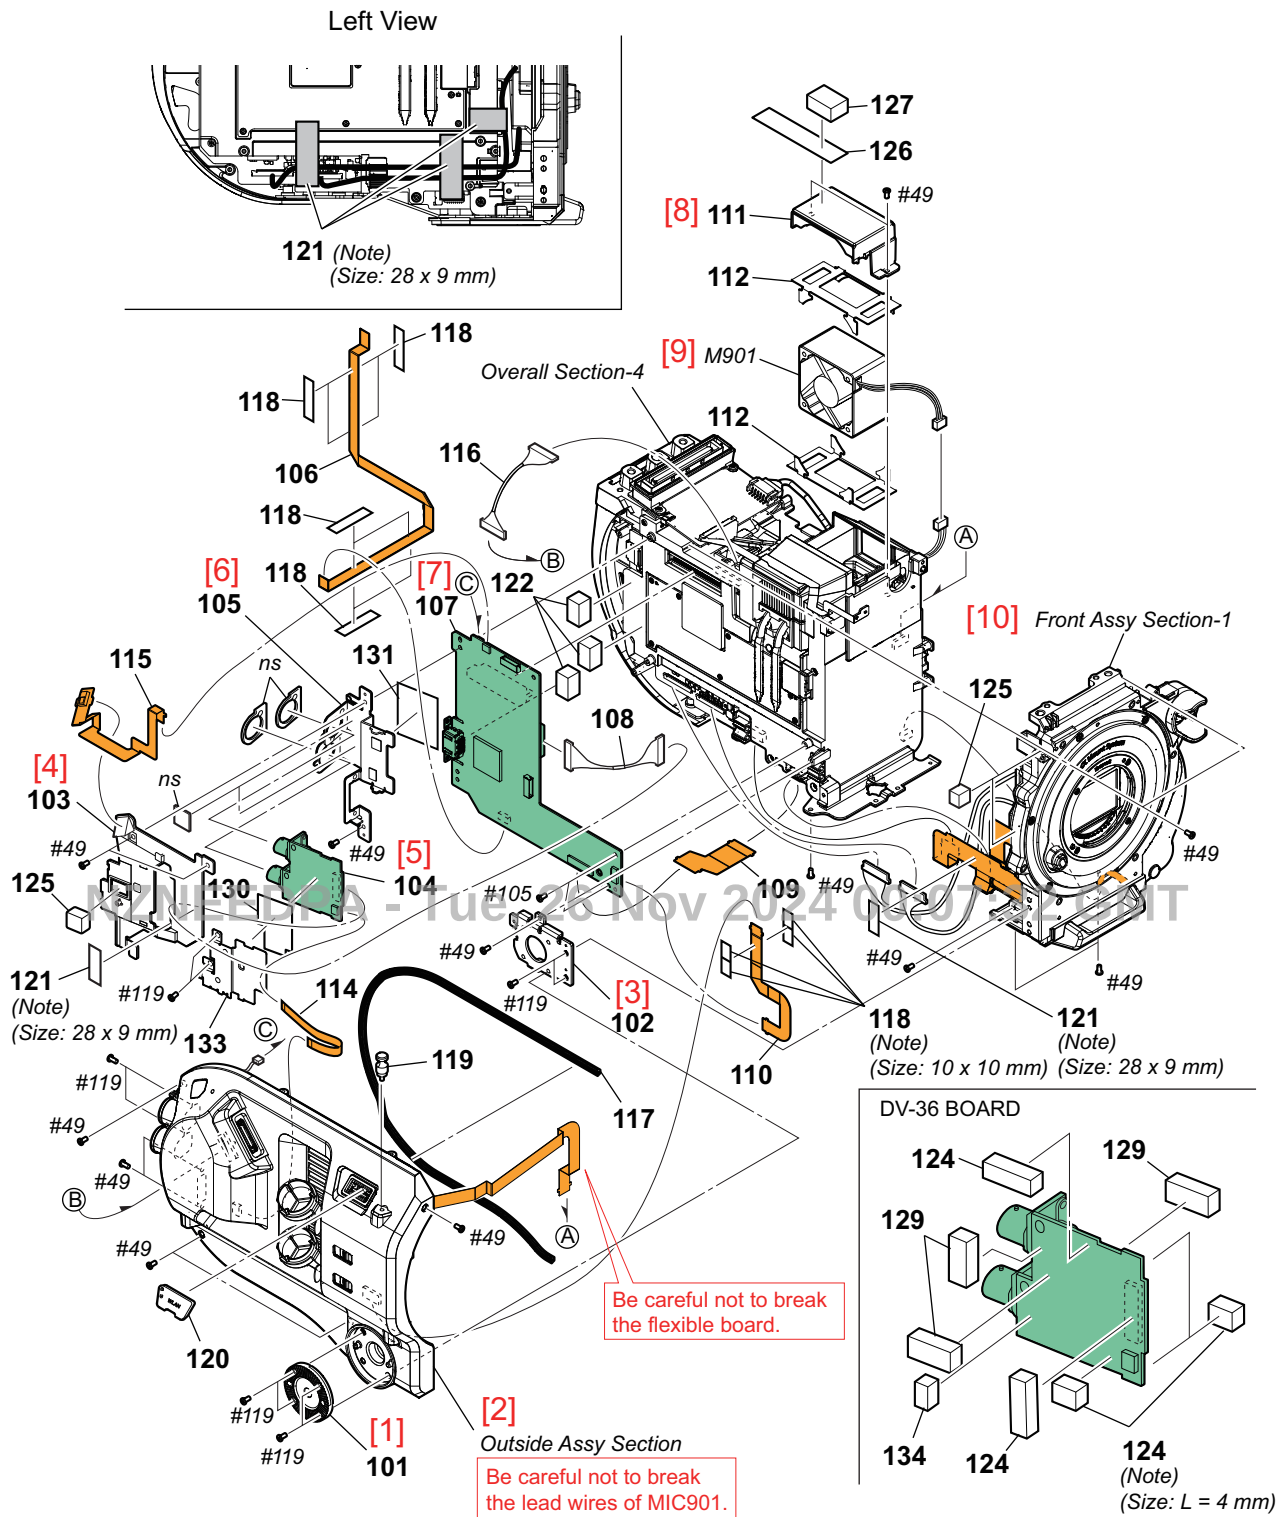


Overall Section-4

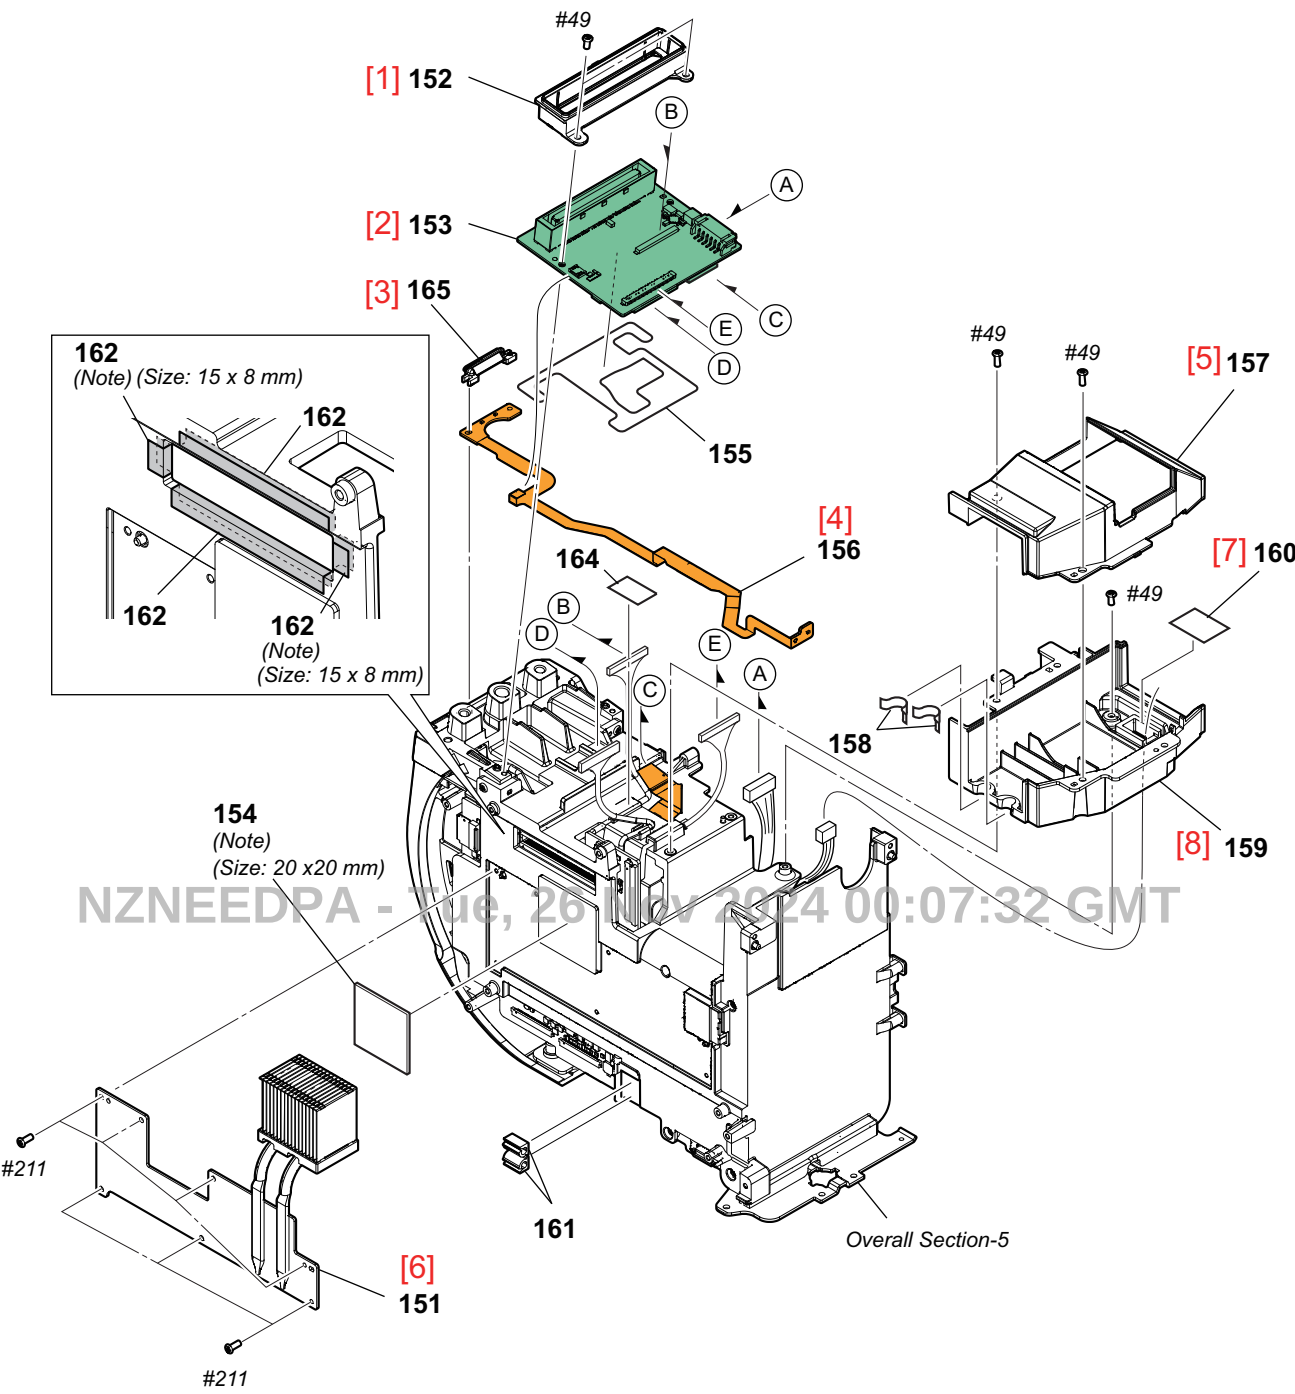


Overall Section-5

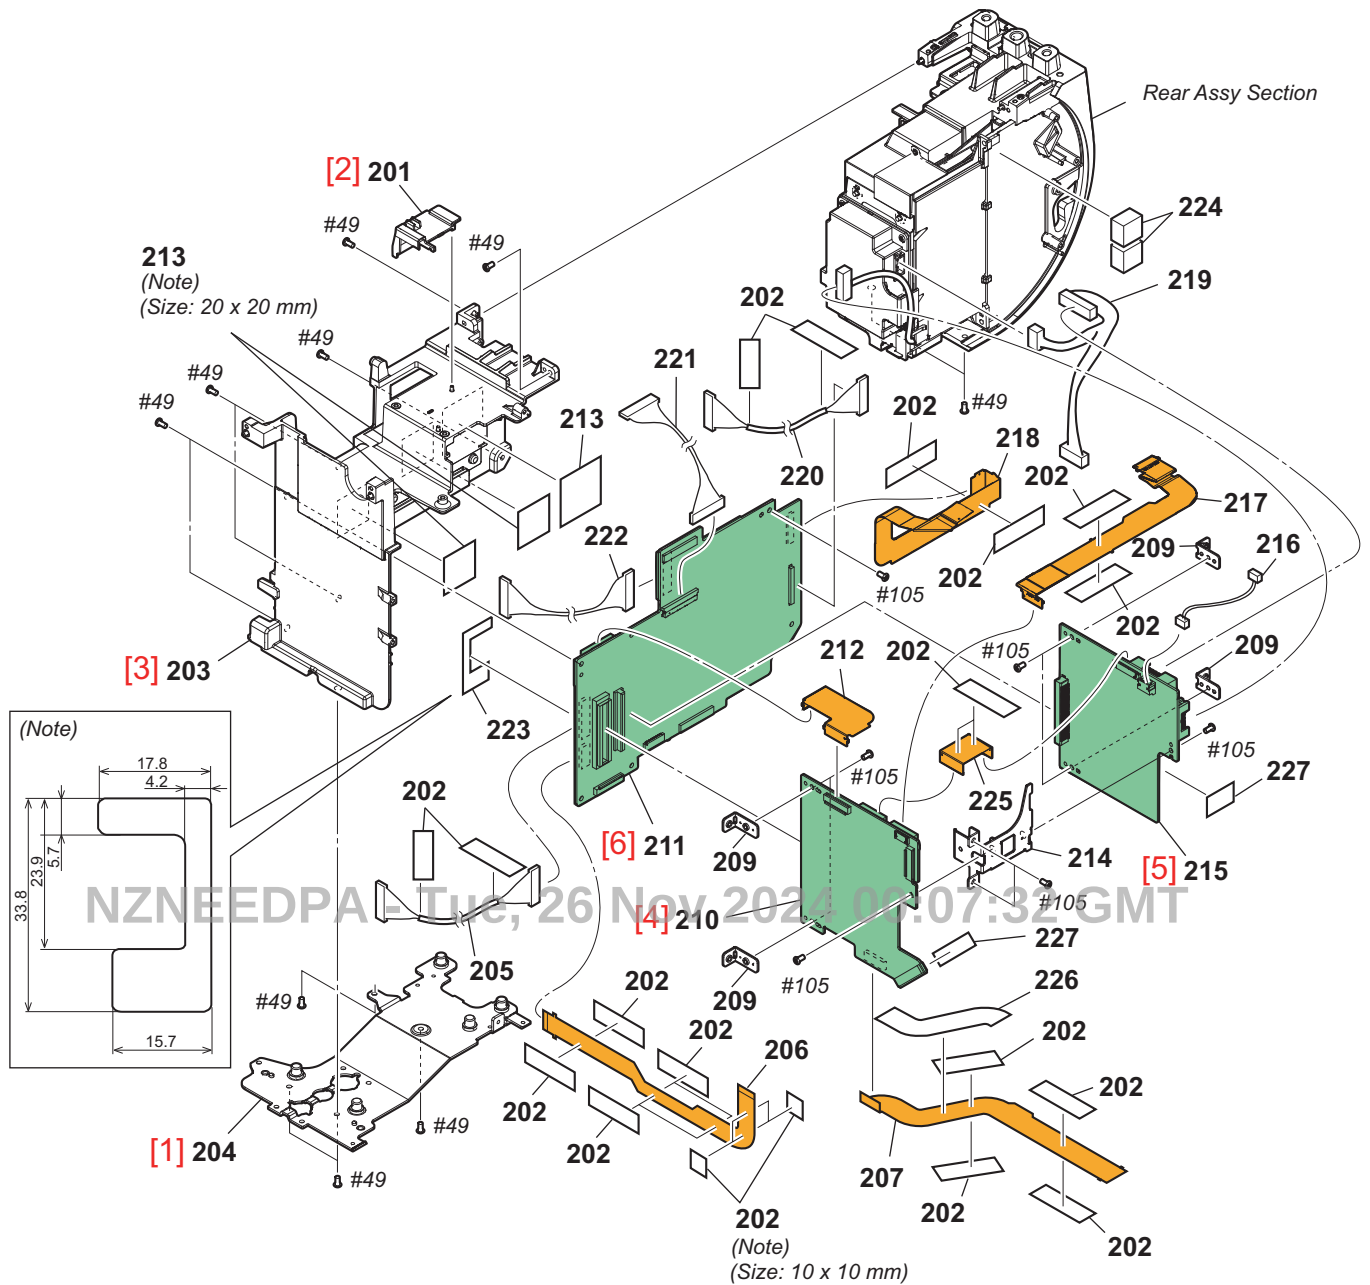


Handle Section-1

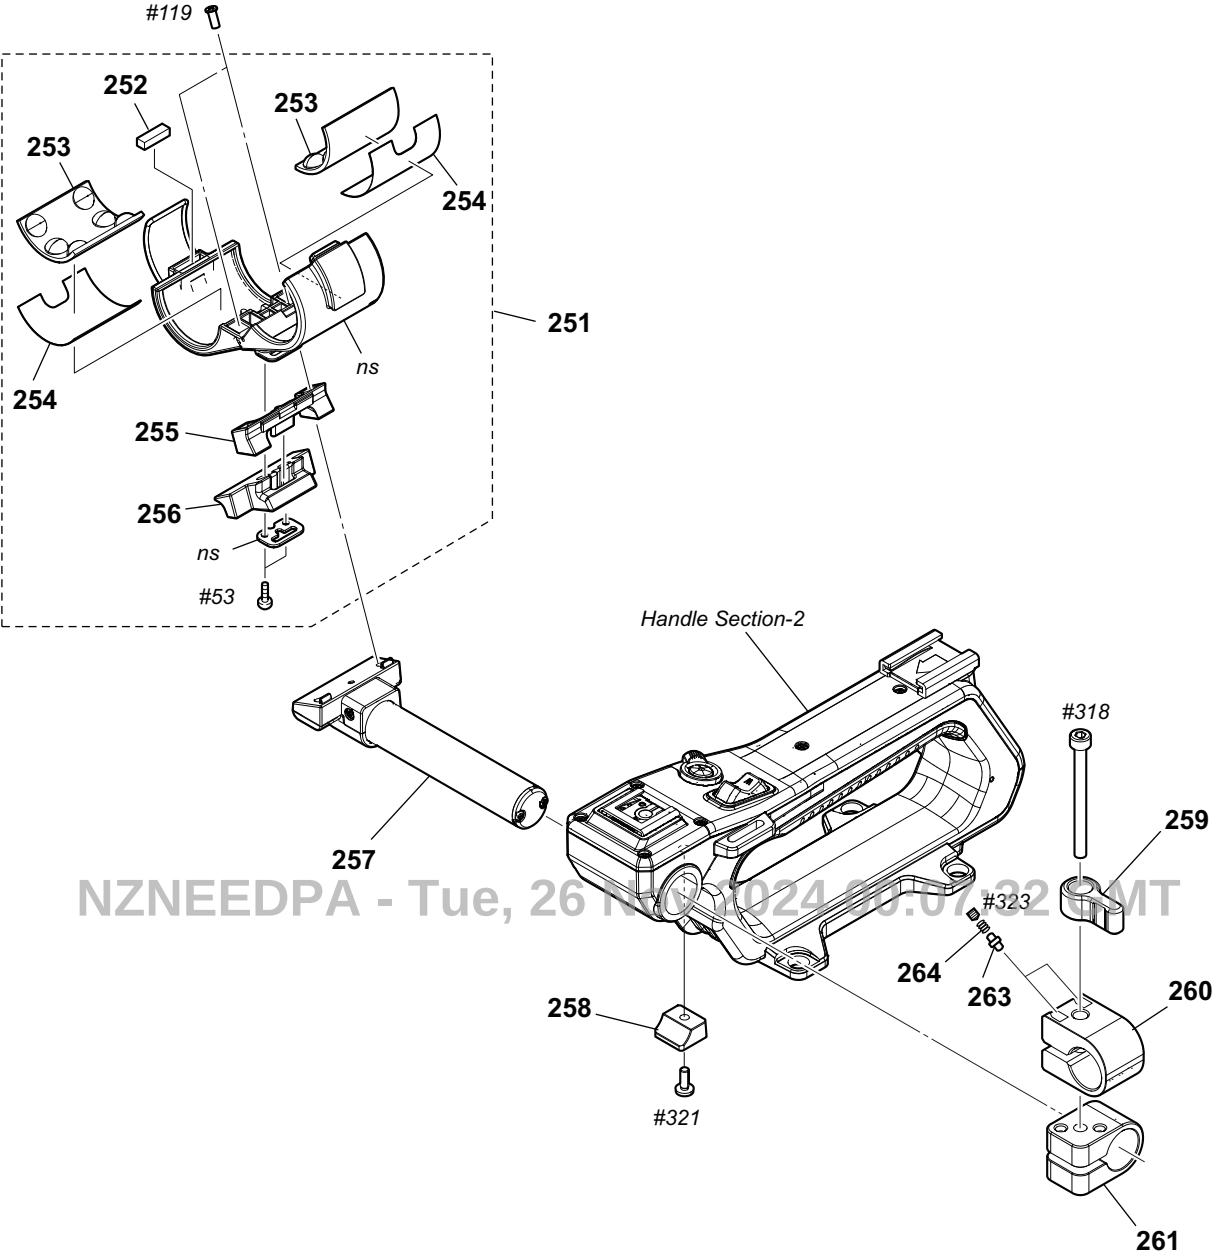


Handle Section-2

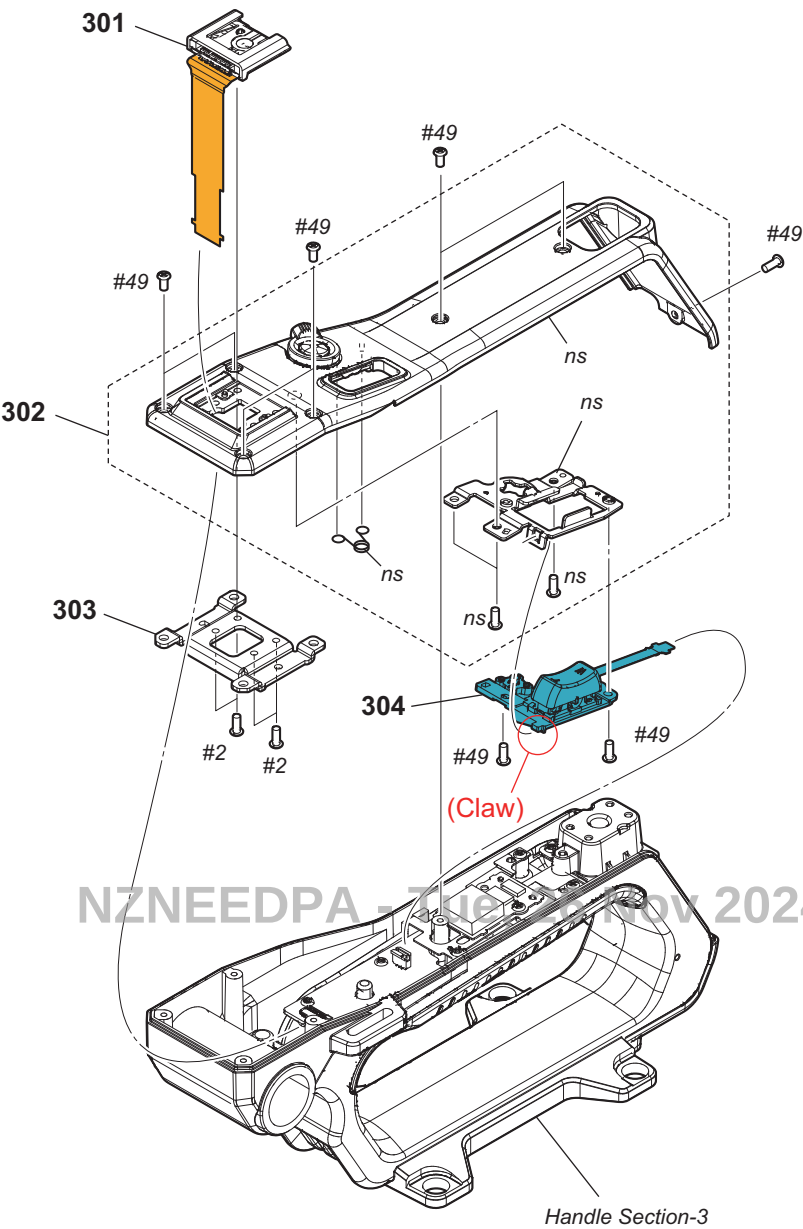


Handle Section-3

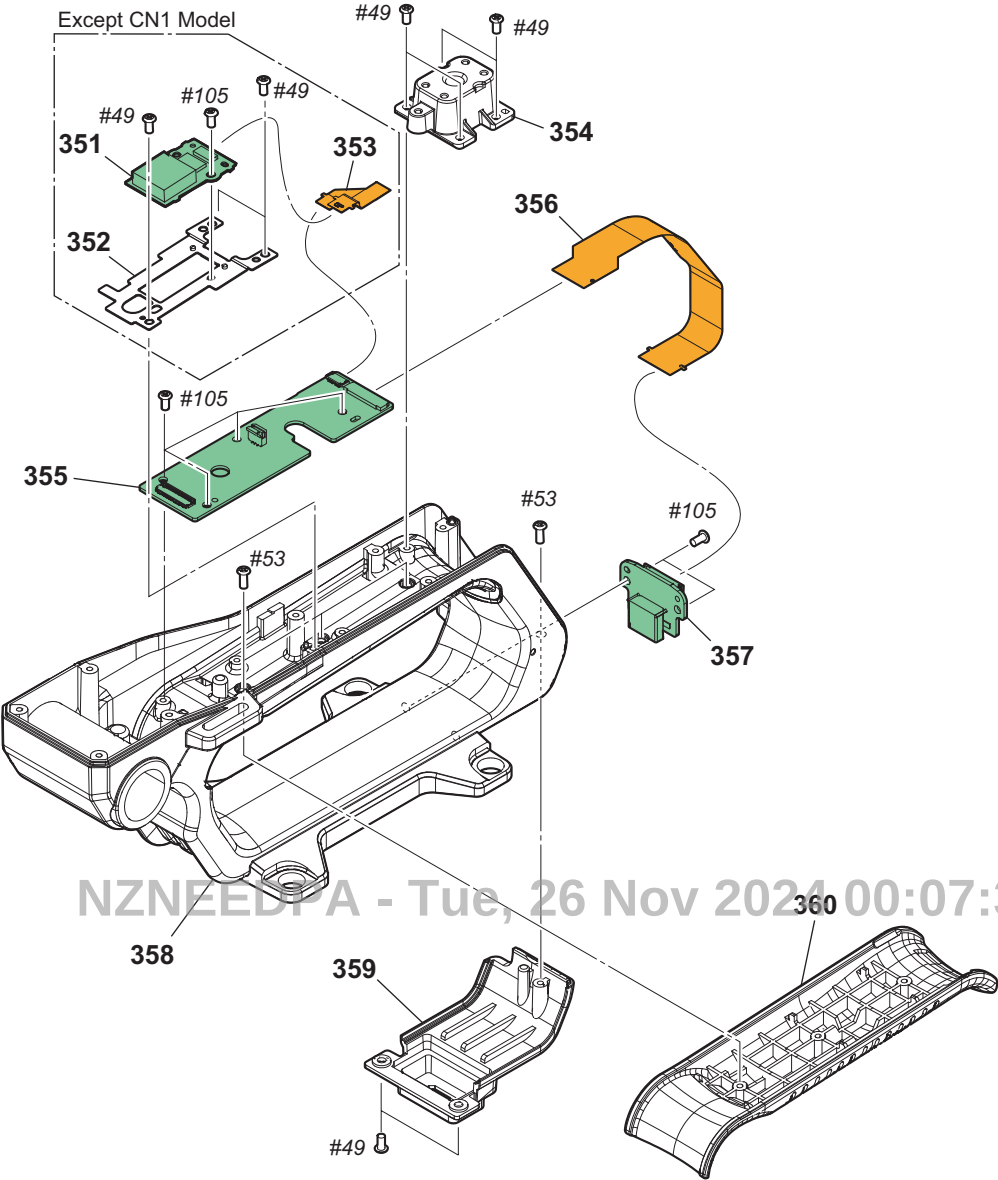


Inside Panel Section-1

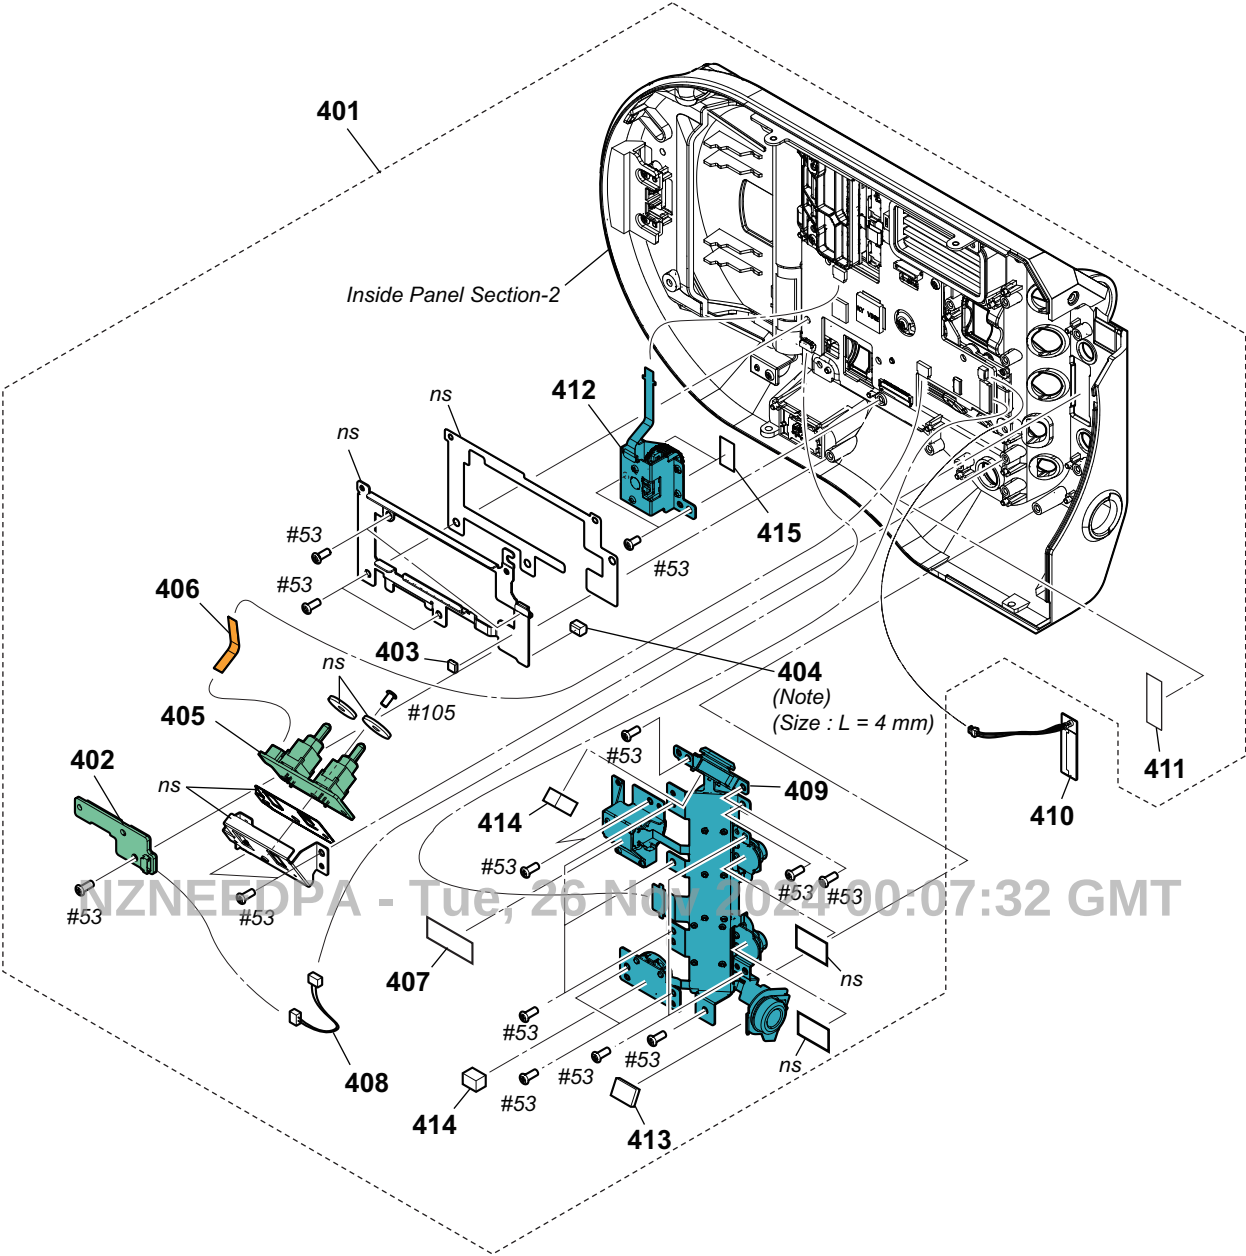


Inside Panel Section-2

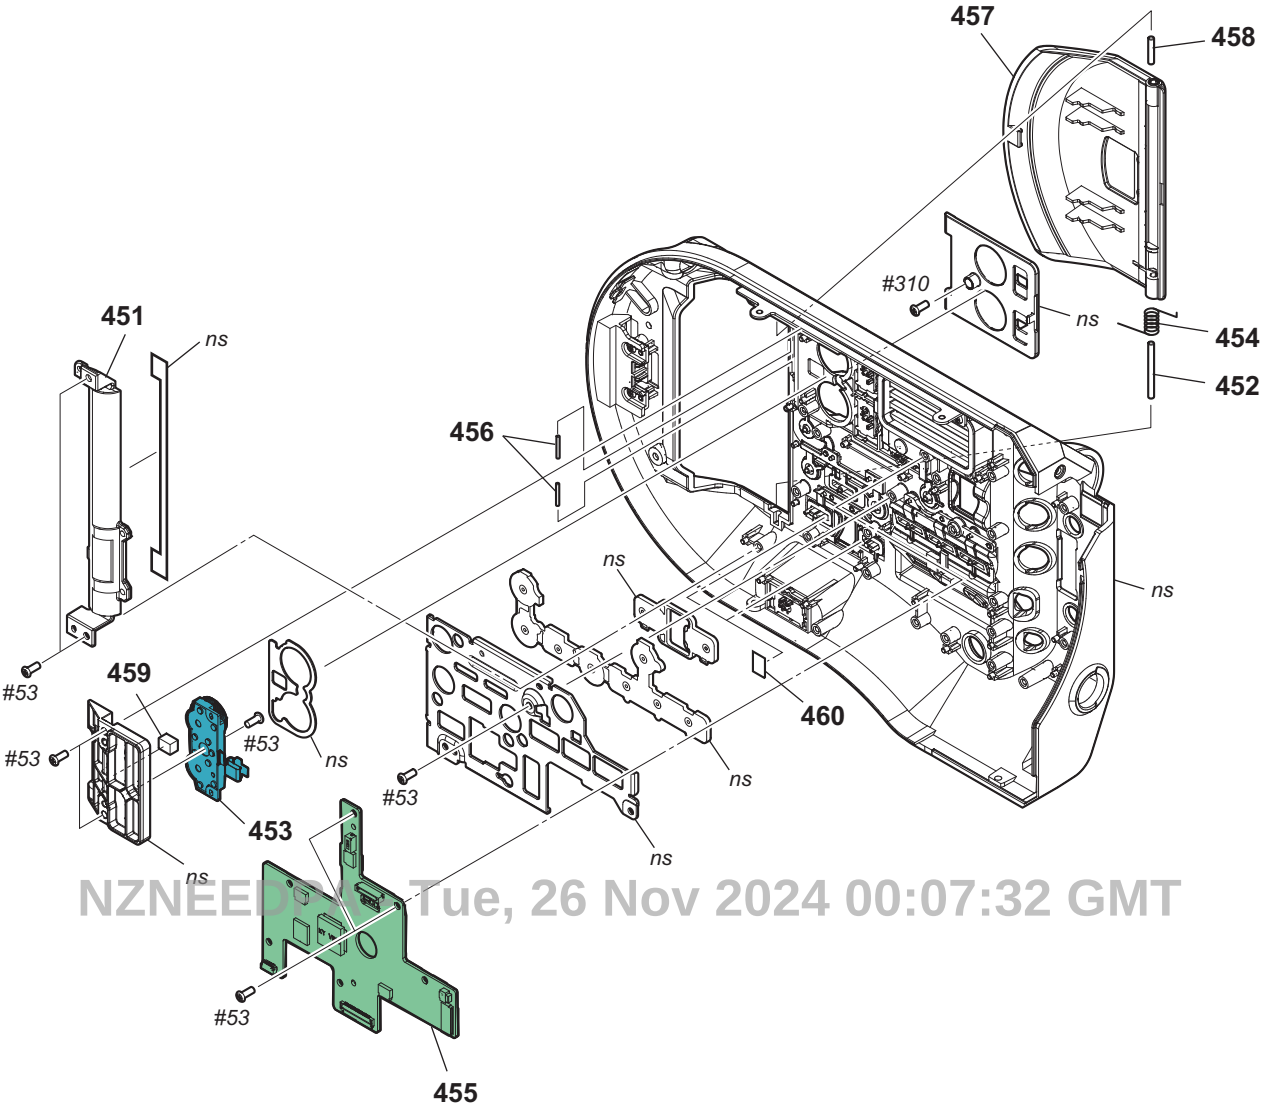


Outside Assy Section

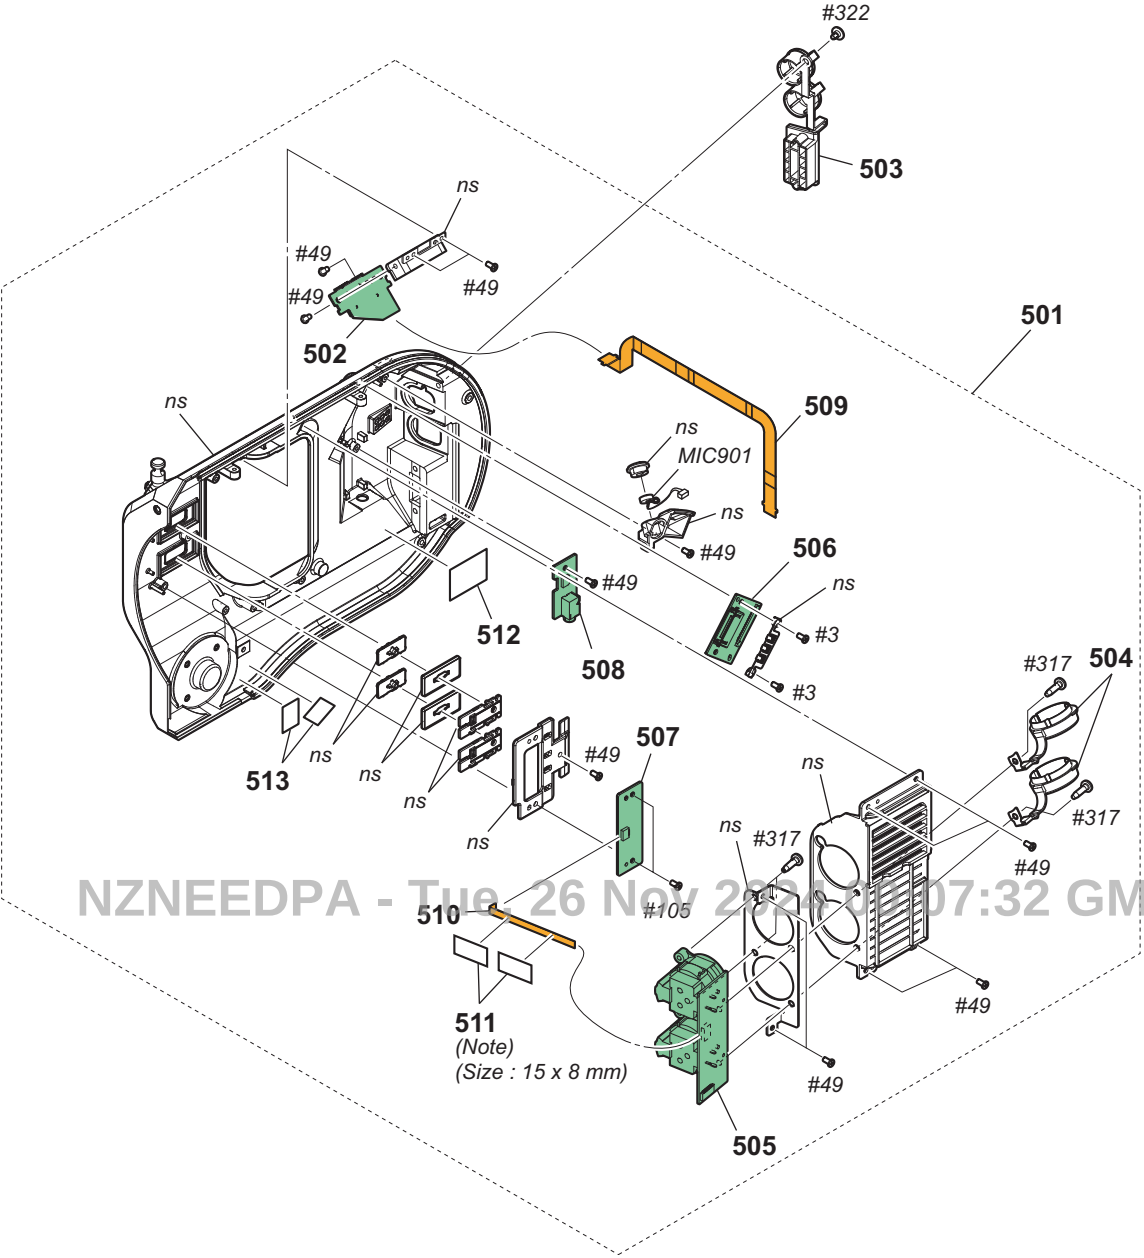


Rear Assy Section

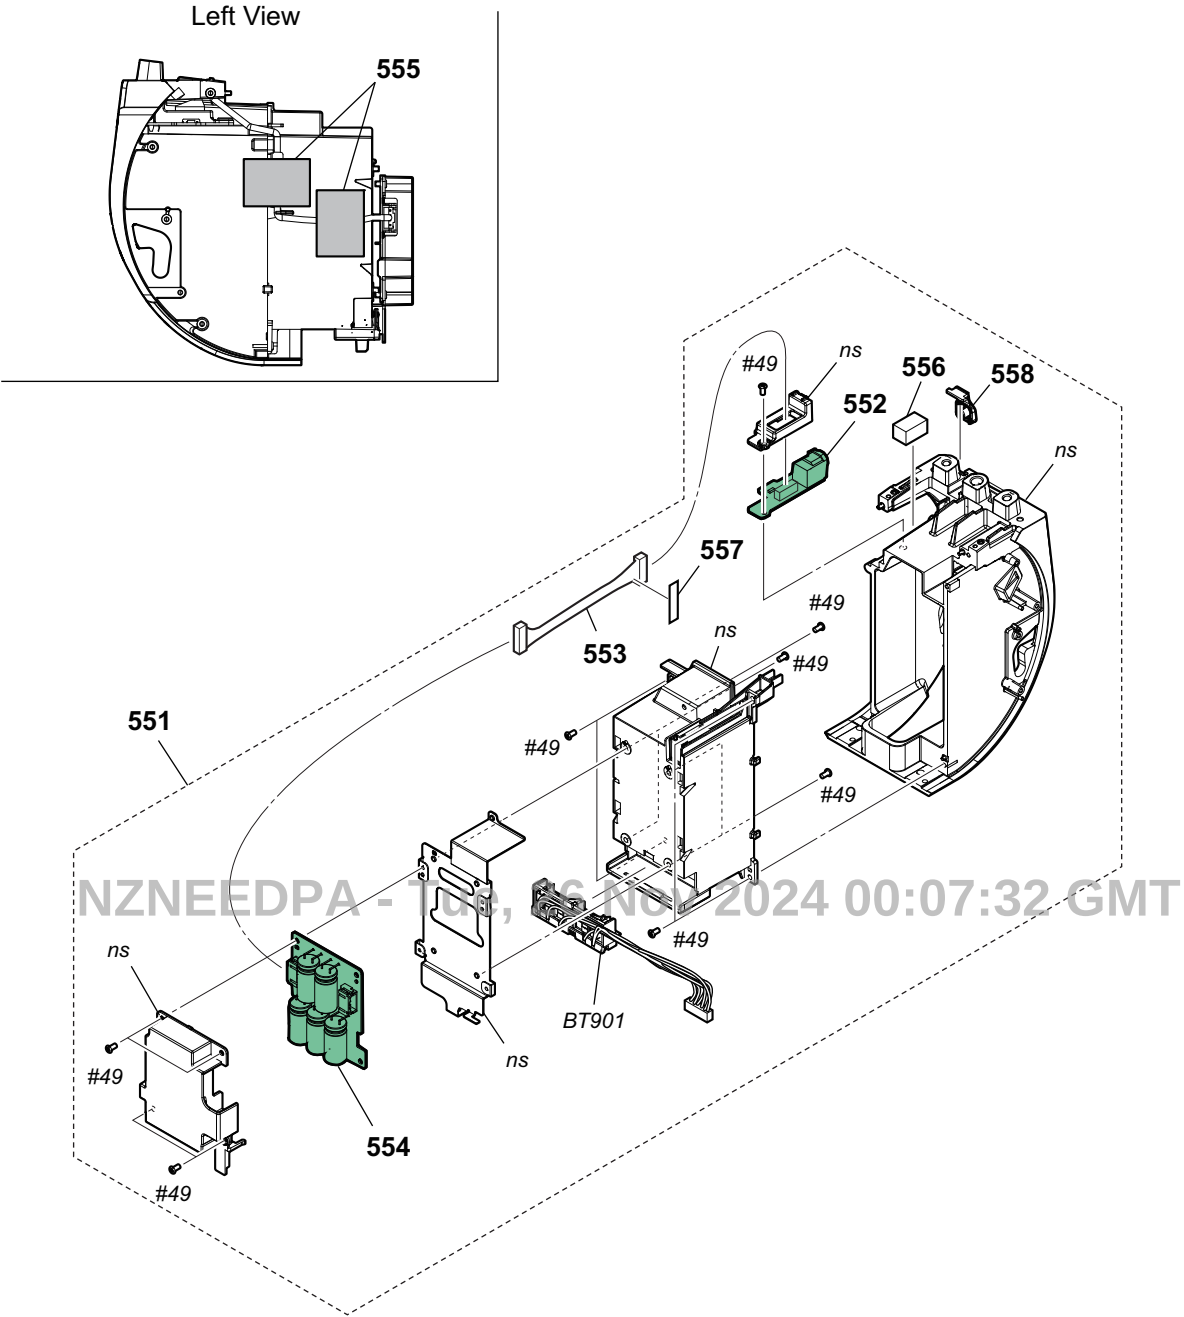


VF Hood Section

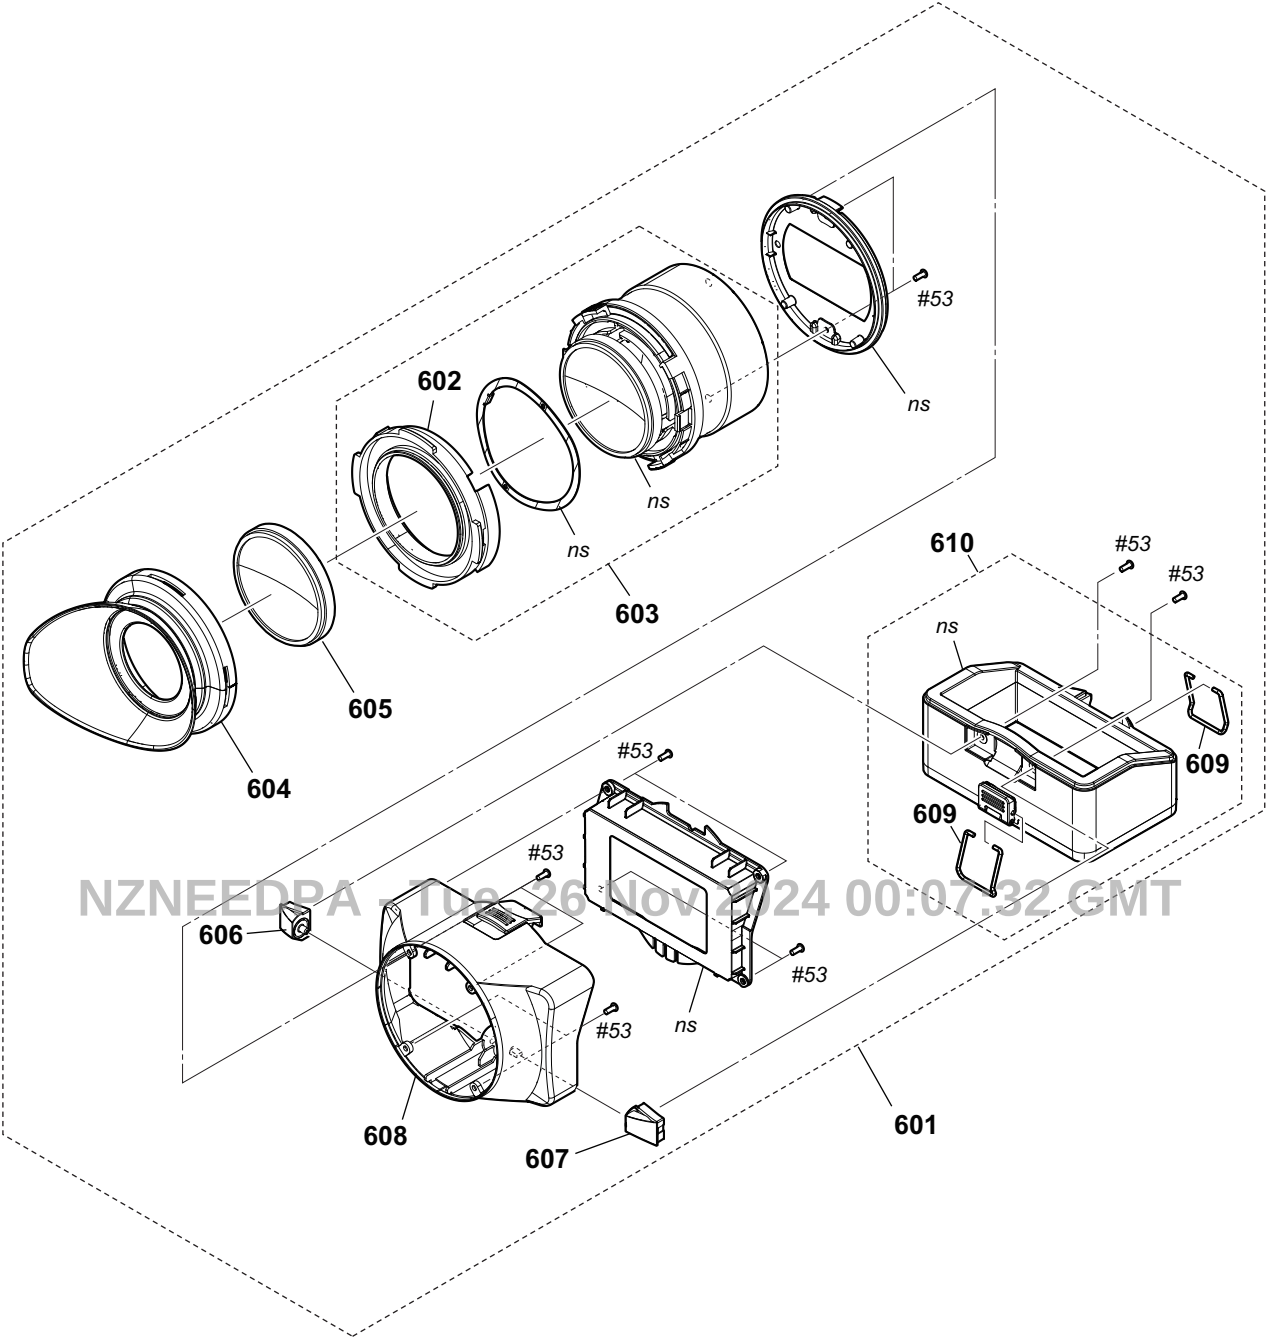


VF Panel Section

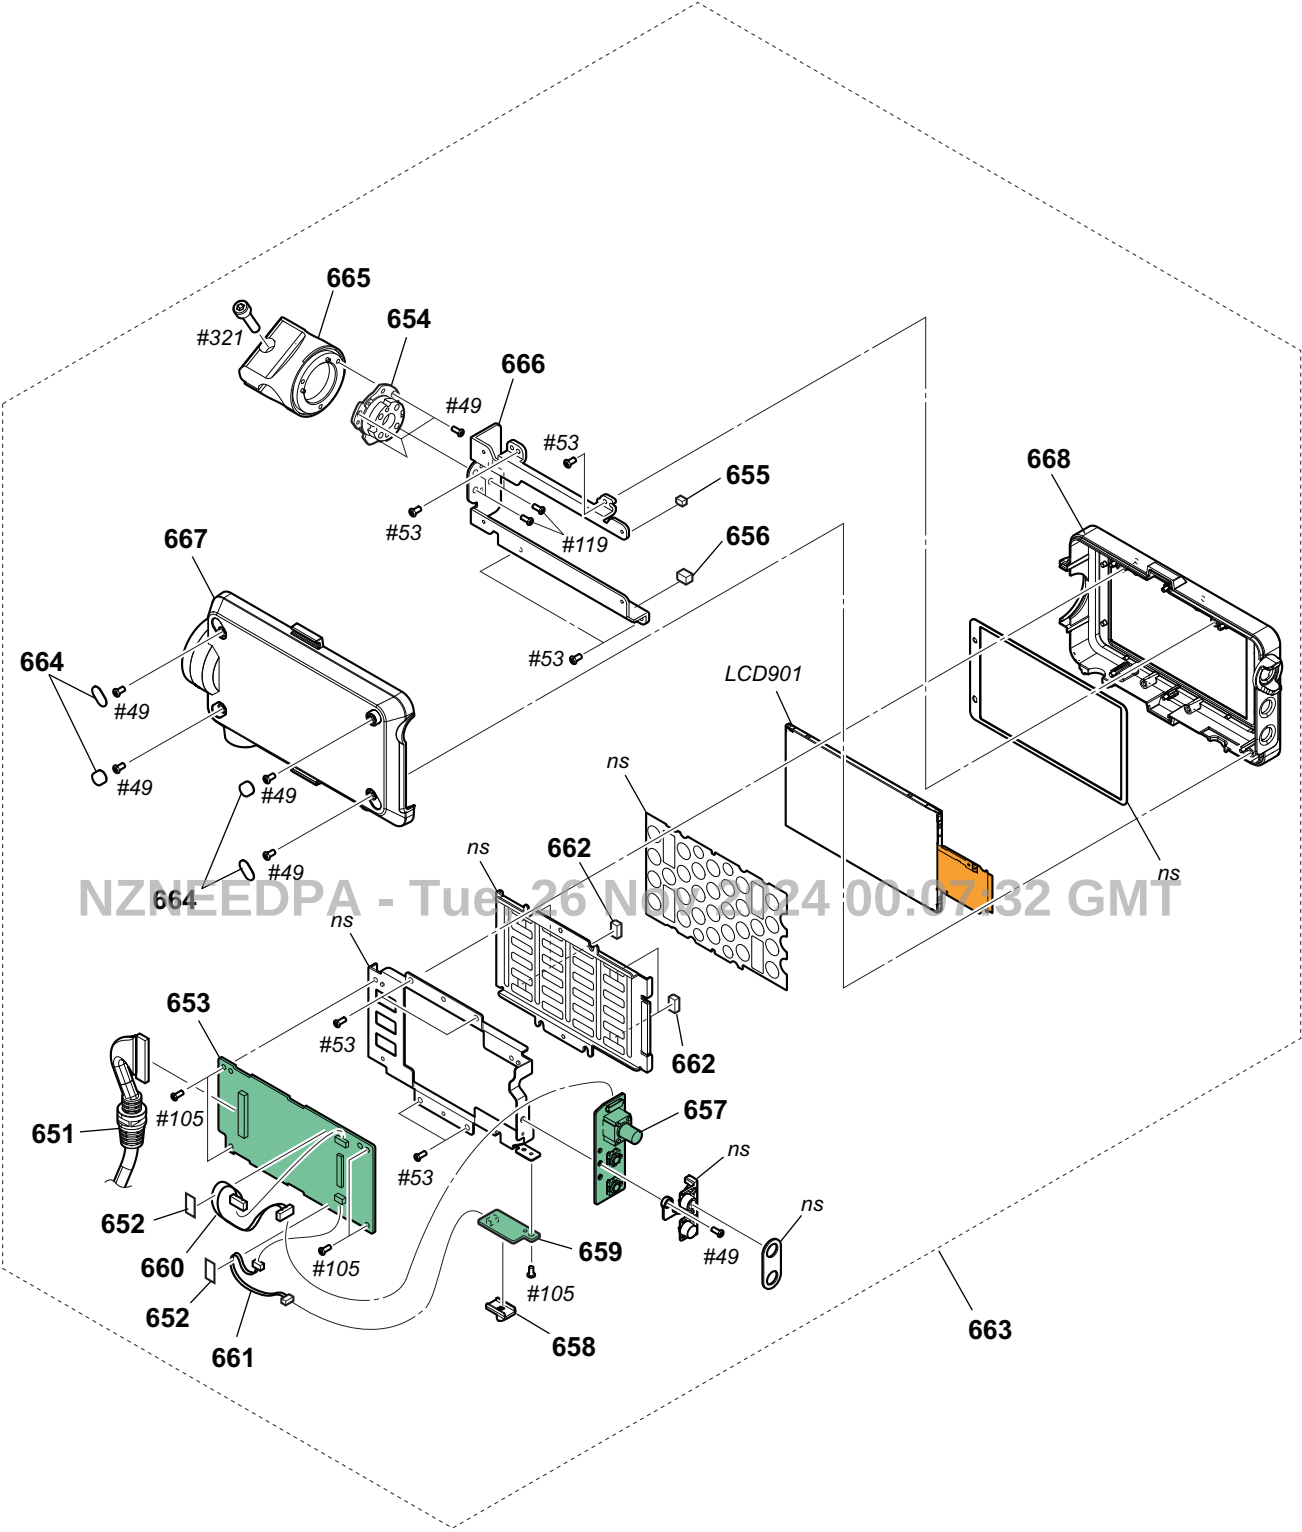

Front Assy Section-1

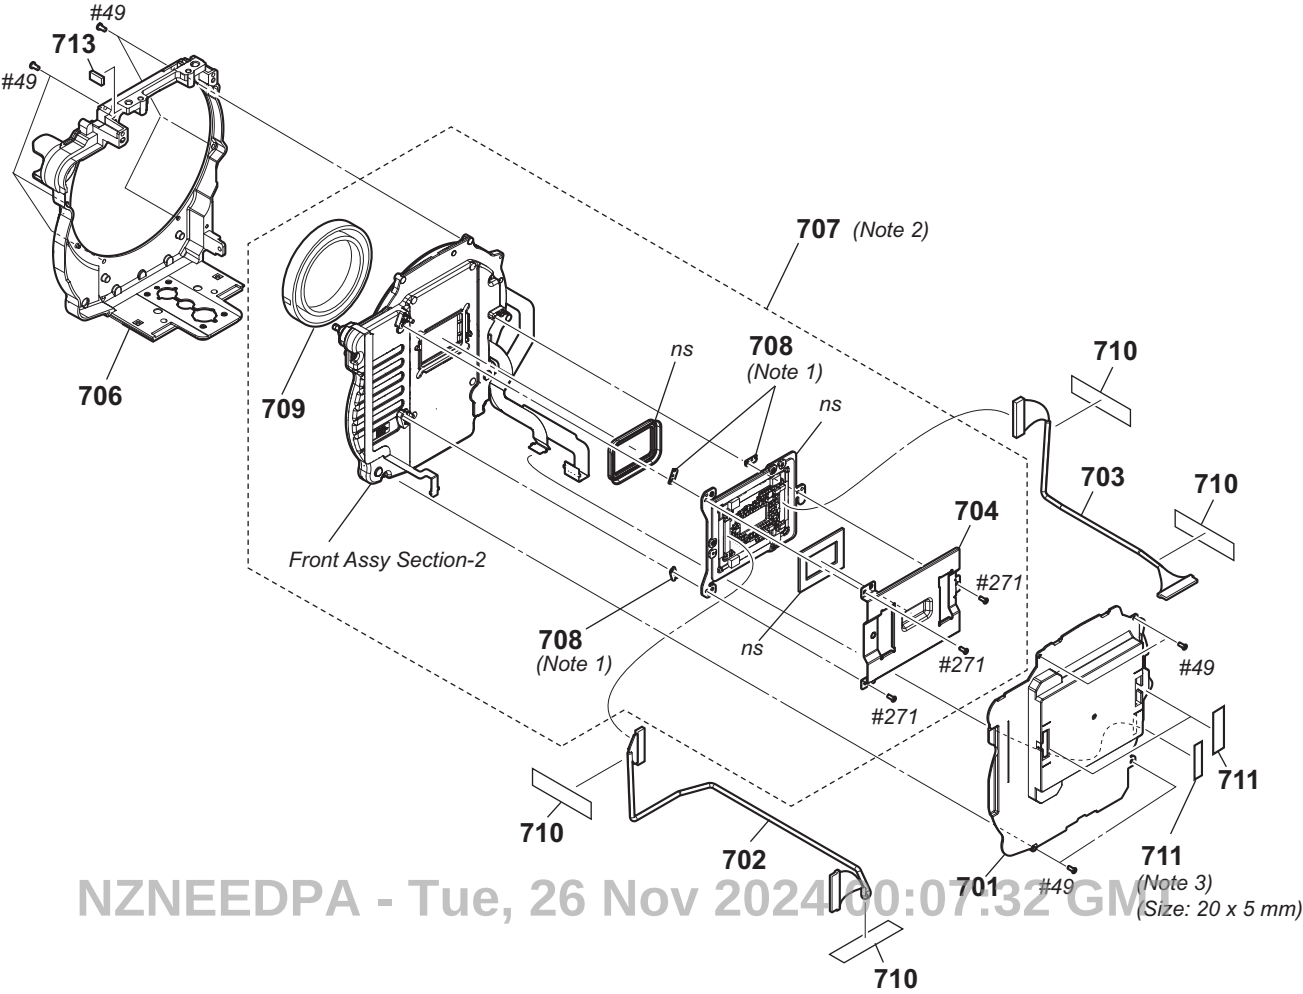


Front Assy Section-2

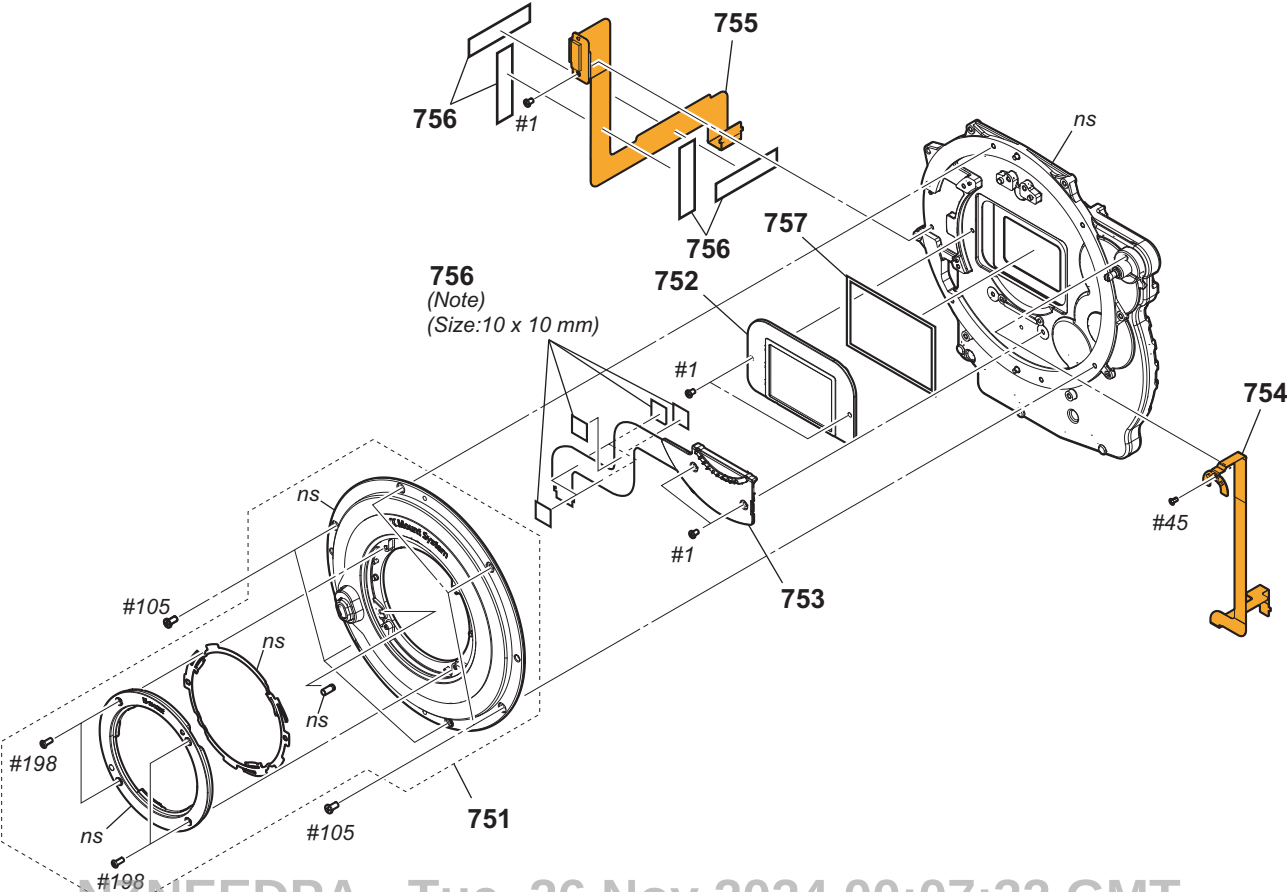

NZNEEDPA - Tue, 26 Nov 2024 00:07:32 GMT

Exploded view diagram of a Sony PS4 DualShock 4 controller, showing various components and their assembly points. The diagram includes callouts for parts such as the main body (801), grip section (802), touchpad (803), analog sticks (804), and various screws and pins. A large watermark "NZNEEDPA" is visible across the center of the diagram.

Grip Section-2

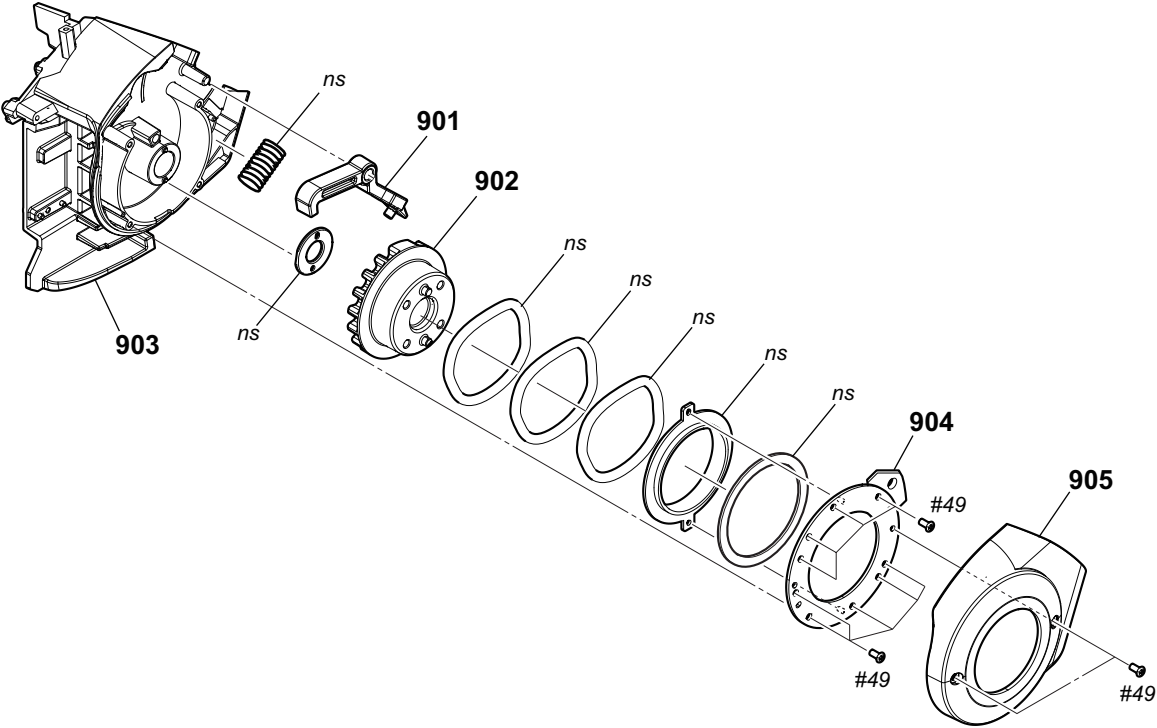

Except Japanese Model

