

SECTION 3 XR / XRM-65X9*J

- Place the TV set facing downwards on a stable, level surface before disassembly and assembly of parts.
- 🗥 and shaded parts are critical for safety. Replace only with part number specified.
- Parts contain confidential information. Strictly follow the instruction whenever the components are repaired and/or replaced
- \[
 \bar{1}\] (*) Parts are not stocked since they are seldom required for routine service. Some delays should be anticipated when ordering these components.
 \]
- † Picture provided in this section might have slight difference from the actual sets.
- † The reference number beside the part indicates the disassembly sequence.
- † Remove screws before disassembly. Unplug connectors before disassembly

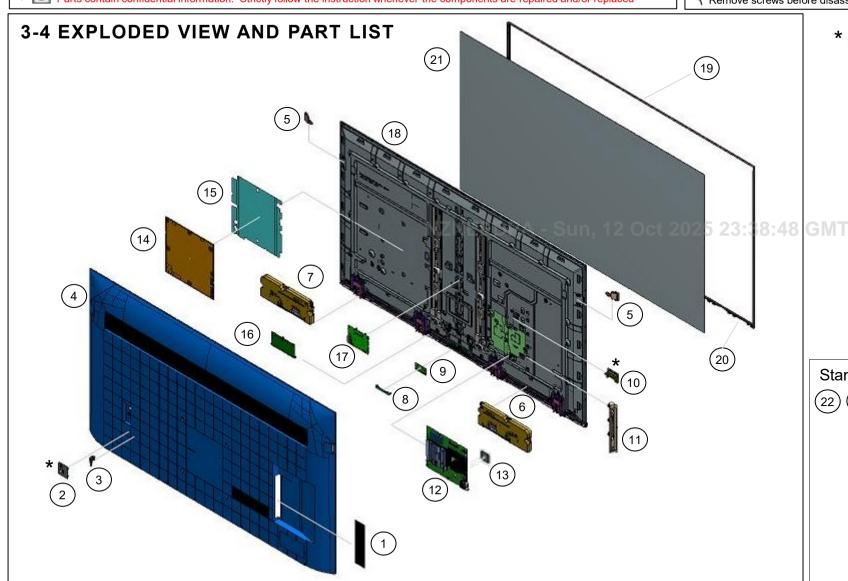


* Only on limited region / country / TV model

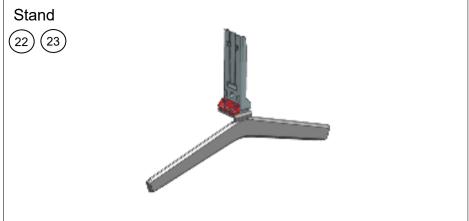

TOOLS & EQUIPMENTS SECTION 1 SECTION 2 SECTION 3 SECTION 4 SMART CORE

SECTION 3 XR / XRM-65X9*J

CONNECTOR

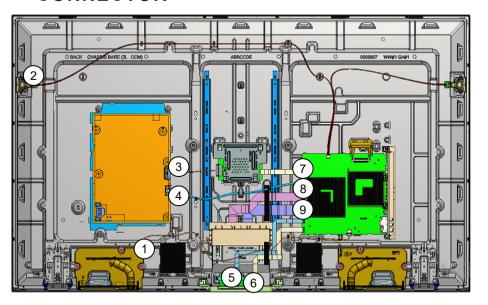

SMART CORE

50"/ 55"/ 65"/ 75"/ 100"

