


■ Nozzle Assembly, Turbine

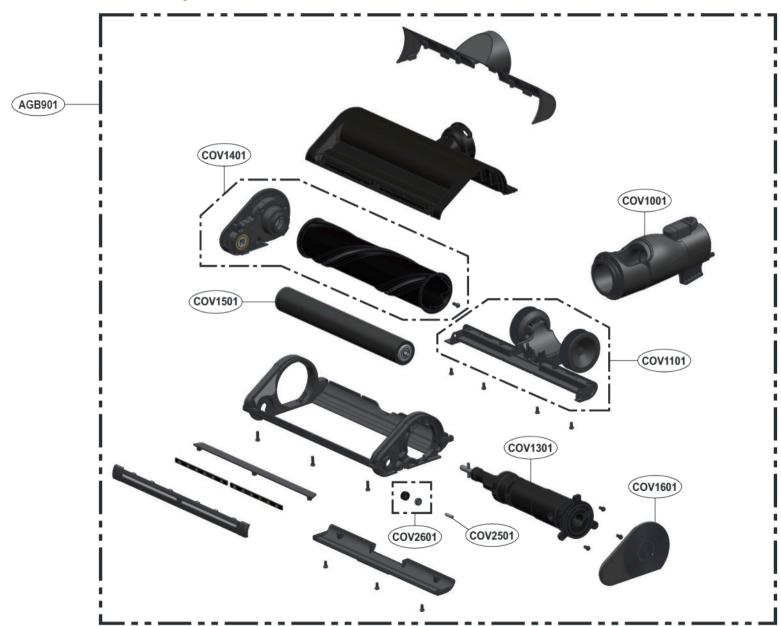

■ Nozzle Assembly, Mop (Spray Mop)

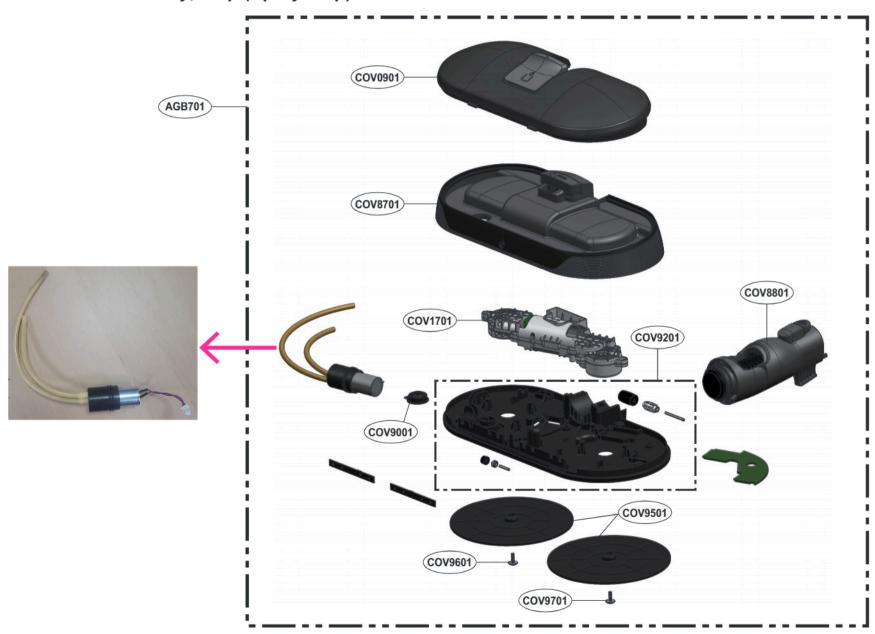


■ Handy Assembly

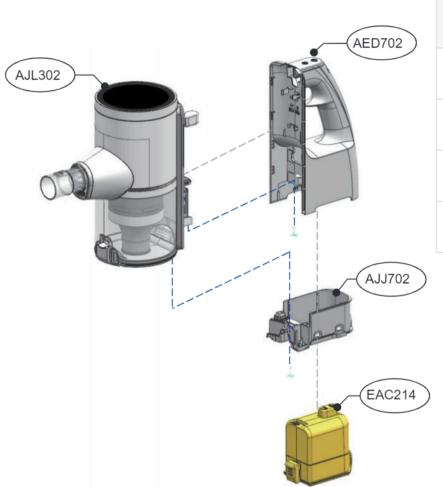

1	AJL302
2	AED702
3	AJJ702
4	EAC214




■ Handy Assembly

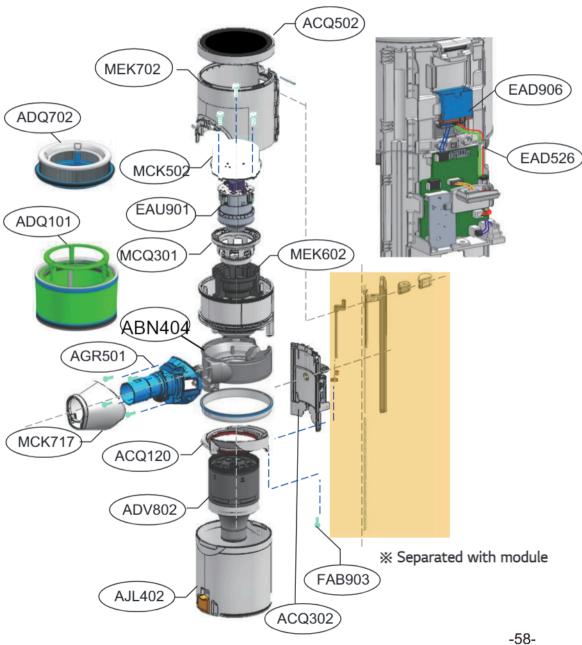

☐ Tank Assembly, Set

	Part name	
1		
2		
3		
4		
5		
6		
7		
8		
9		ABN404
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		


■ Handy Assembly

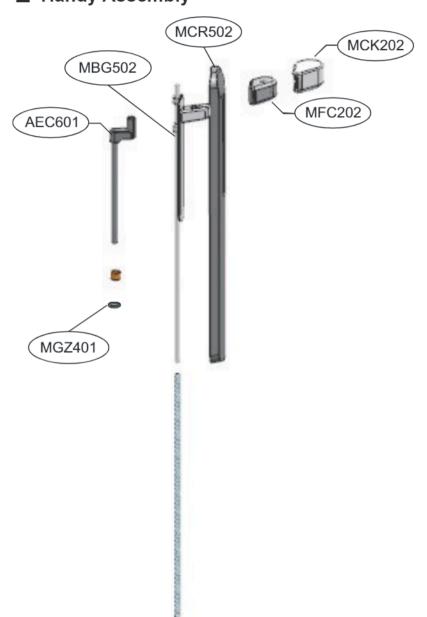

■ Tank Assembly, Set (Compress Lever)

	Part Name	
1		
2		
3	é	
4		
5		
6		
7		
8		
9		


■ Handle Assembly

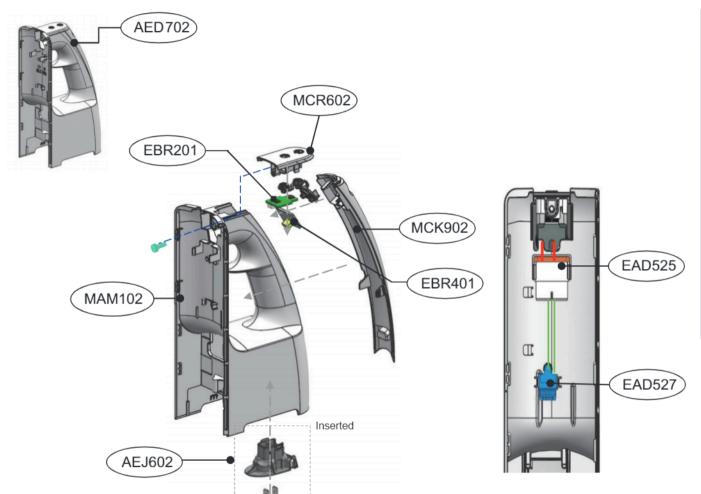

	Part Name	
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		




■ Cover Assembly Top

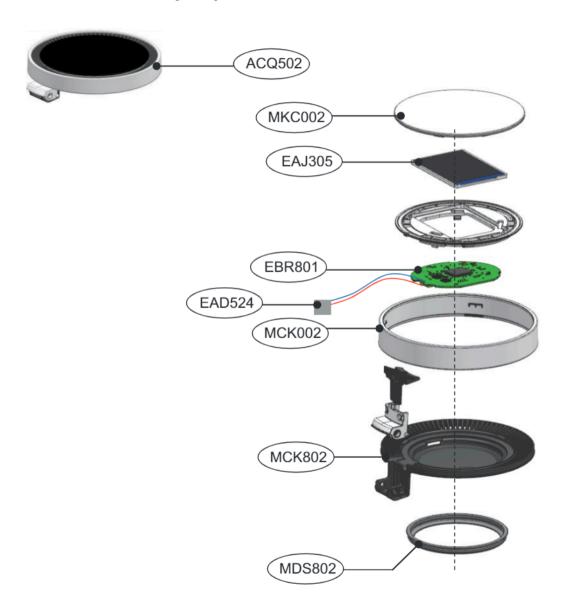

	Part Name	
1	Cover Assembly, Top	
2	Window, LCD	
3	LCD, Module-TFT	
4	Case, LCD	
5	PCB Assembly	
6	Cover, Décor	
7	Decor, Hinge	
8	Cover, Hinge	
9	Cover, Exhaust Filter	
10	Gasket, Sealing	
11	Harness,Single	

■ Cover FrontAssembly

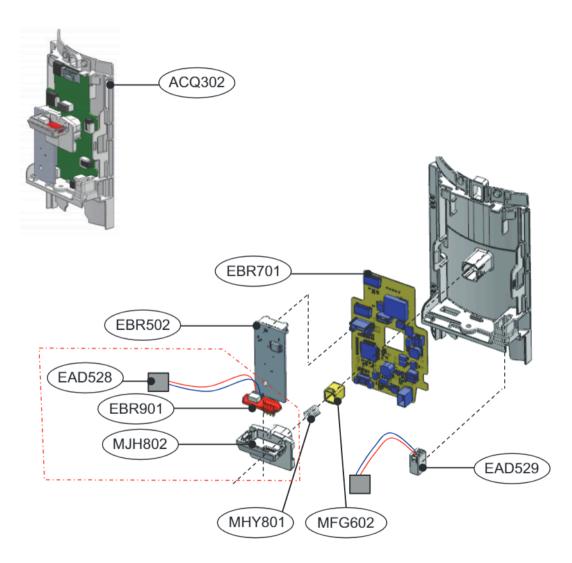



		Part Name	
	1		
	2		
	3		
٢	4		
\dashv	5		
L	6		
	7		
	8		MCK602
	9		
	10		

Should be replaced simultaneously




■ Supporter Cover Assembly

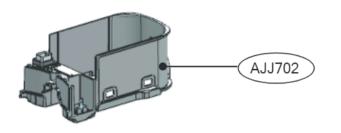

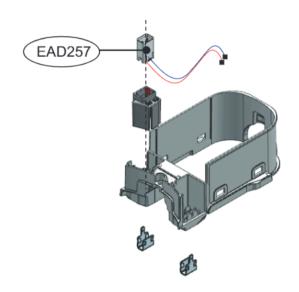

	Part Name	
1		AJJ702
2		
3		
4		
5		

■ Tank Assembly, Dust

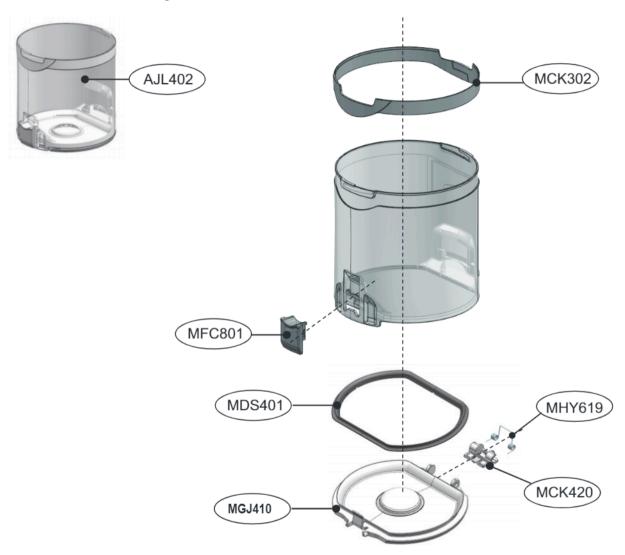


	Part Name	
1		
2		
3		
4		
5		
6		MGJ410
7		MHY619
8		MCK420



■ FrameAssembly




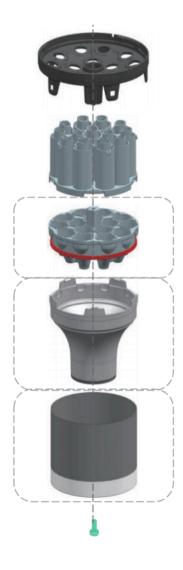


	Part Name
1	
2	
3	
4	
5	
6	
7	
8	é
9	
10	
11	
12	



 ■ Filter Assembly, Mesh



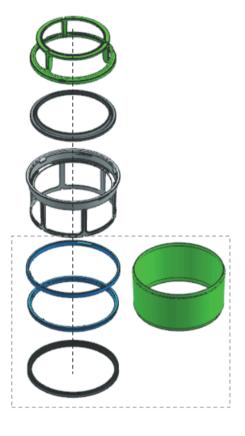


	Part Name	
1		
2		
3		
4		
5		
6		
7		
8		



■ Filter Assembly, Exhaust Filter



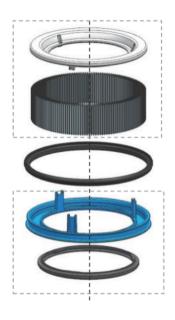

	Part Name	
1		
2		
3		
4		-
5		
6		
7		



Accessories










■ Battery

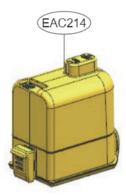

■ Adjustable extension tube






■ Power Drive Mini Nozzle





■ Dust emptying charging station_3.0

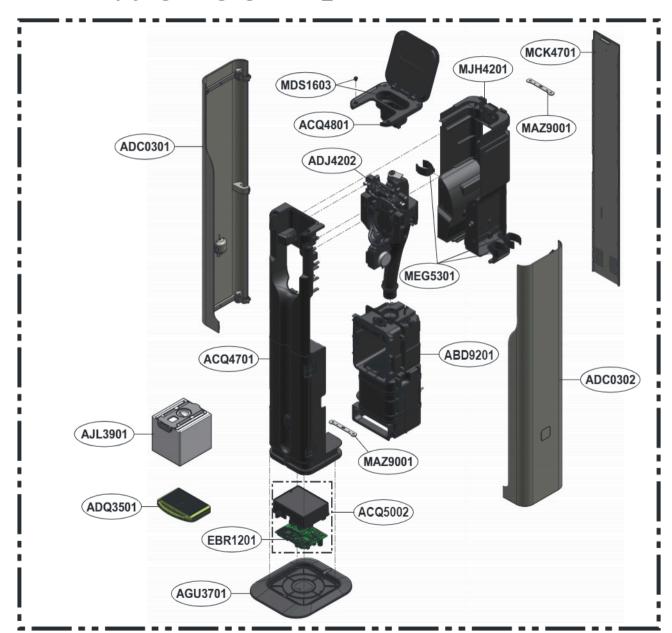








■ Body Cover Assembly







■ Top Cover Assembly

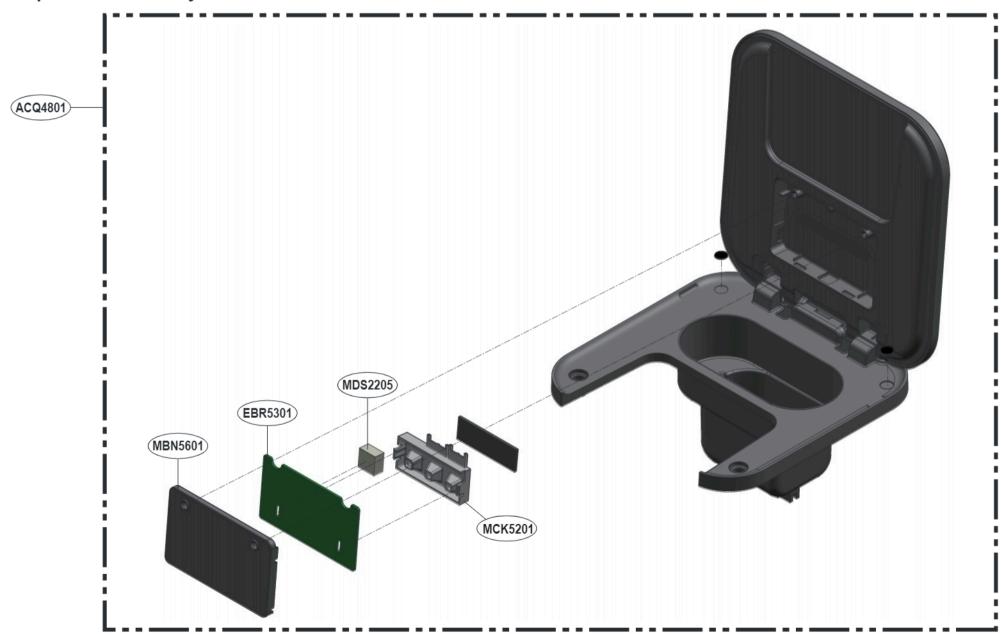




■ Door Assembly

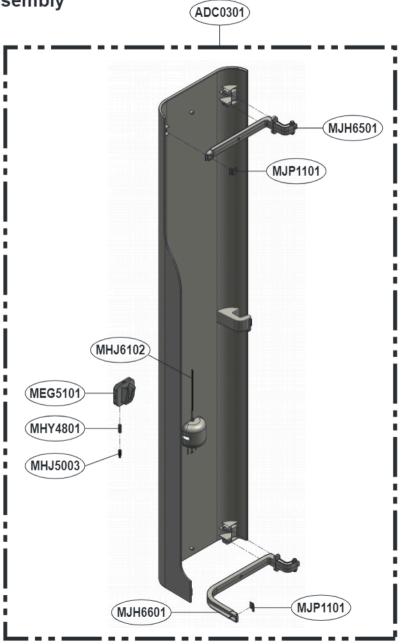

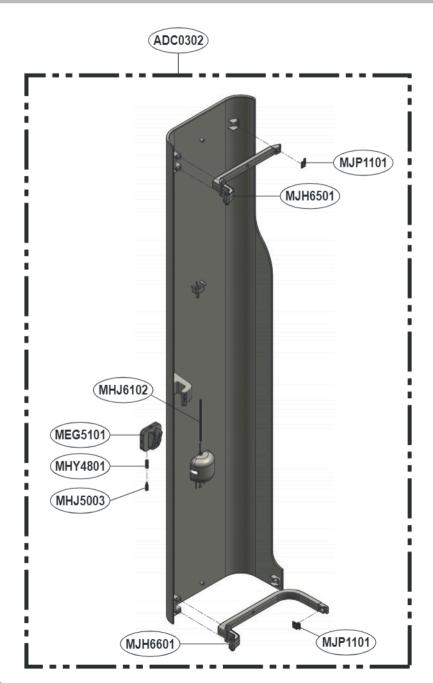




■ Duct Assembly_3.0

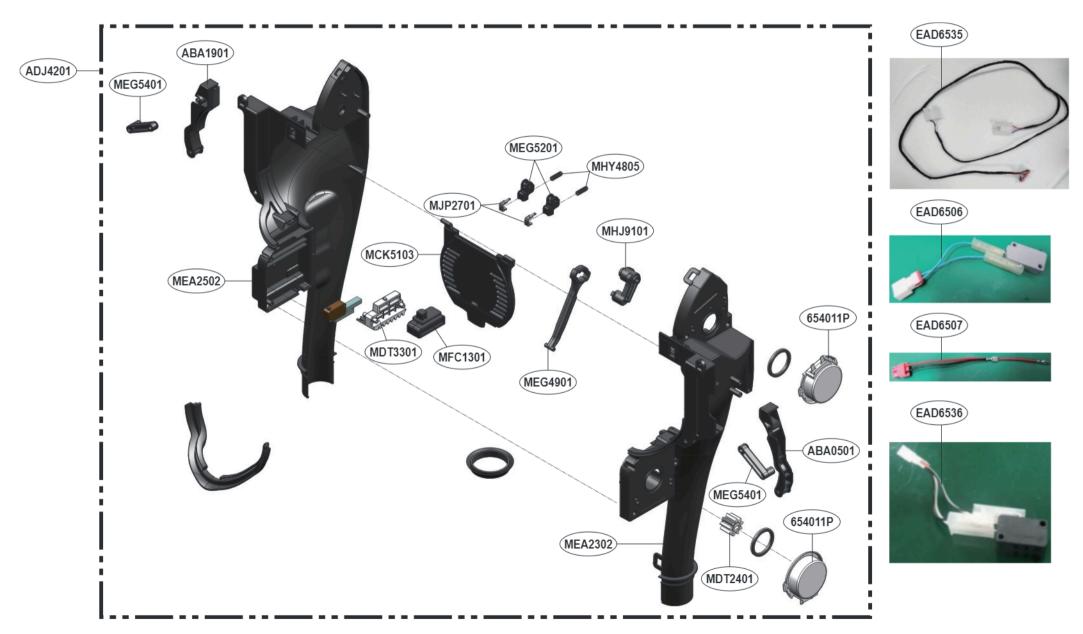



■ Chamber Assembly_3.0

* The Components of Product may vary depending on the model.

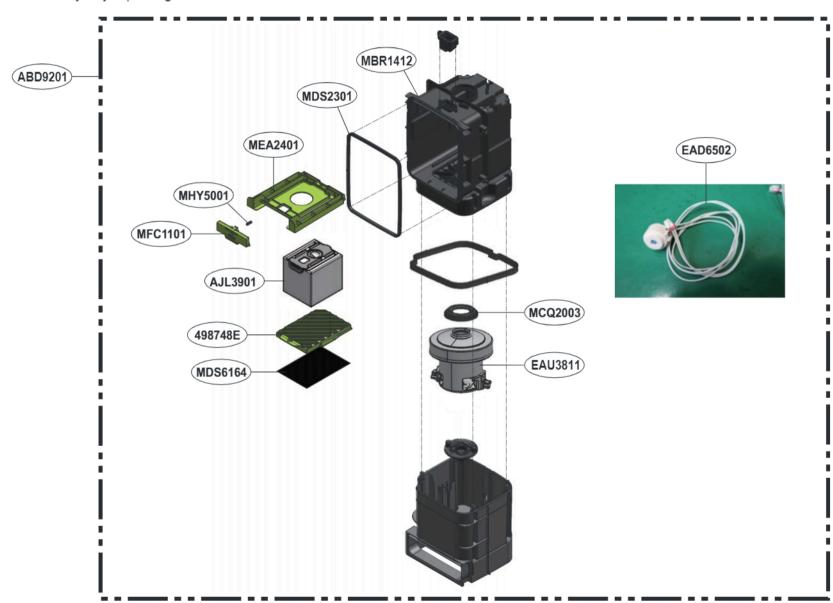



■ Bottom Plate Assembly

