




Single Wall Oven General Assembly Diagram

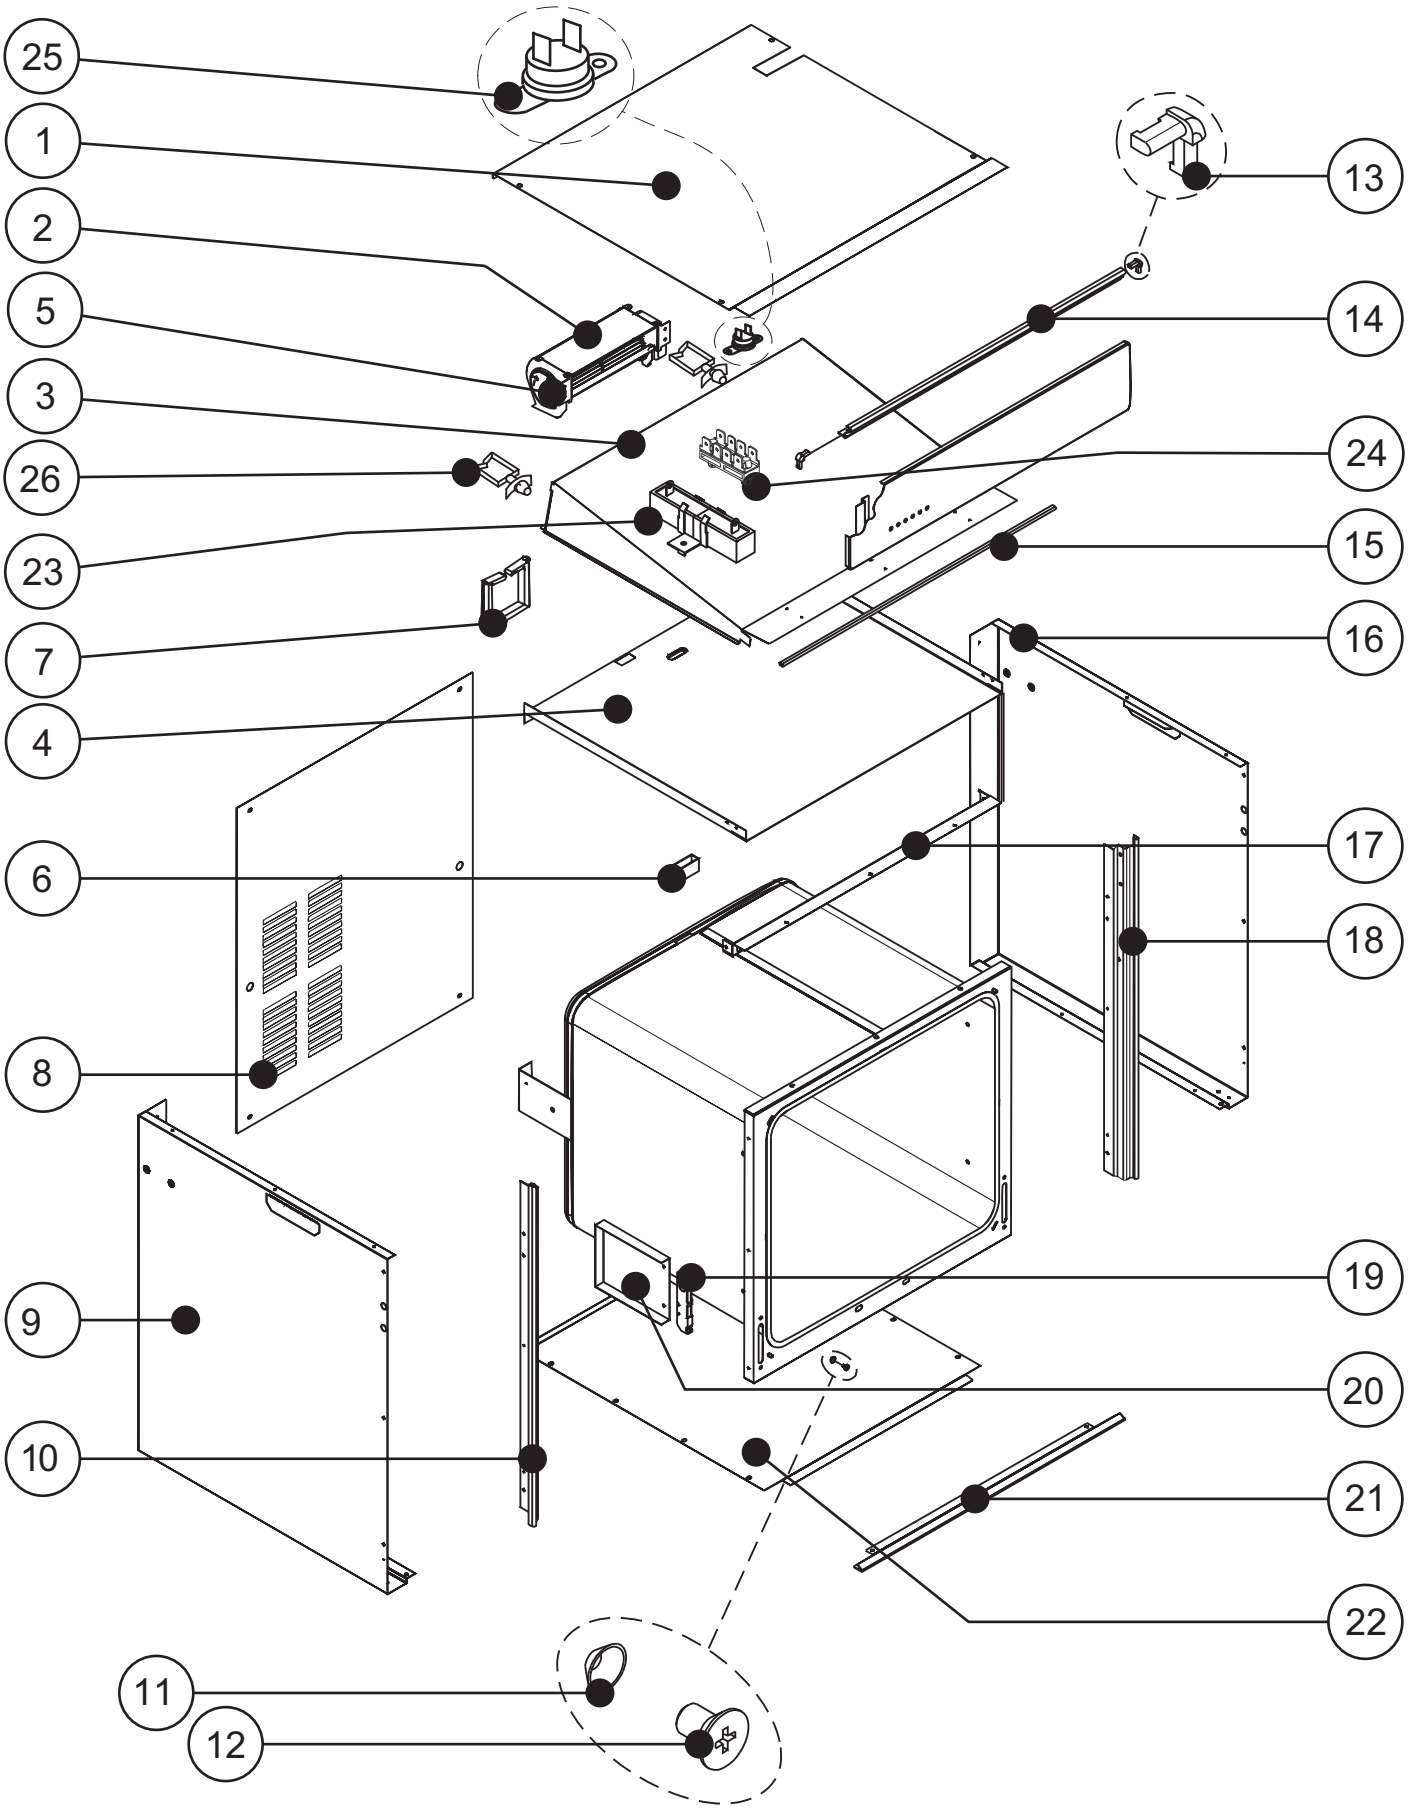


Oven Assembly; Main Oven

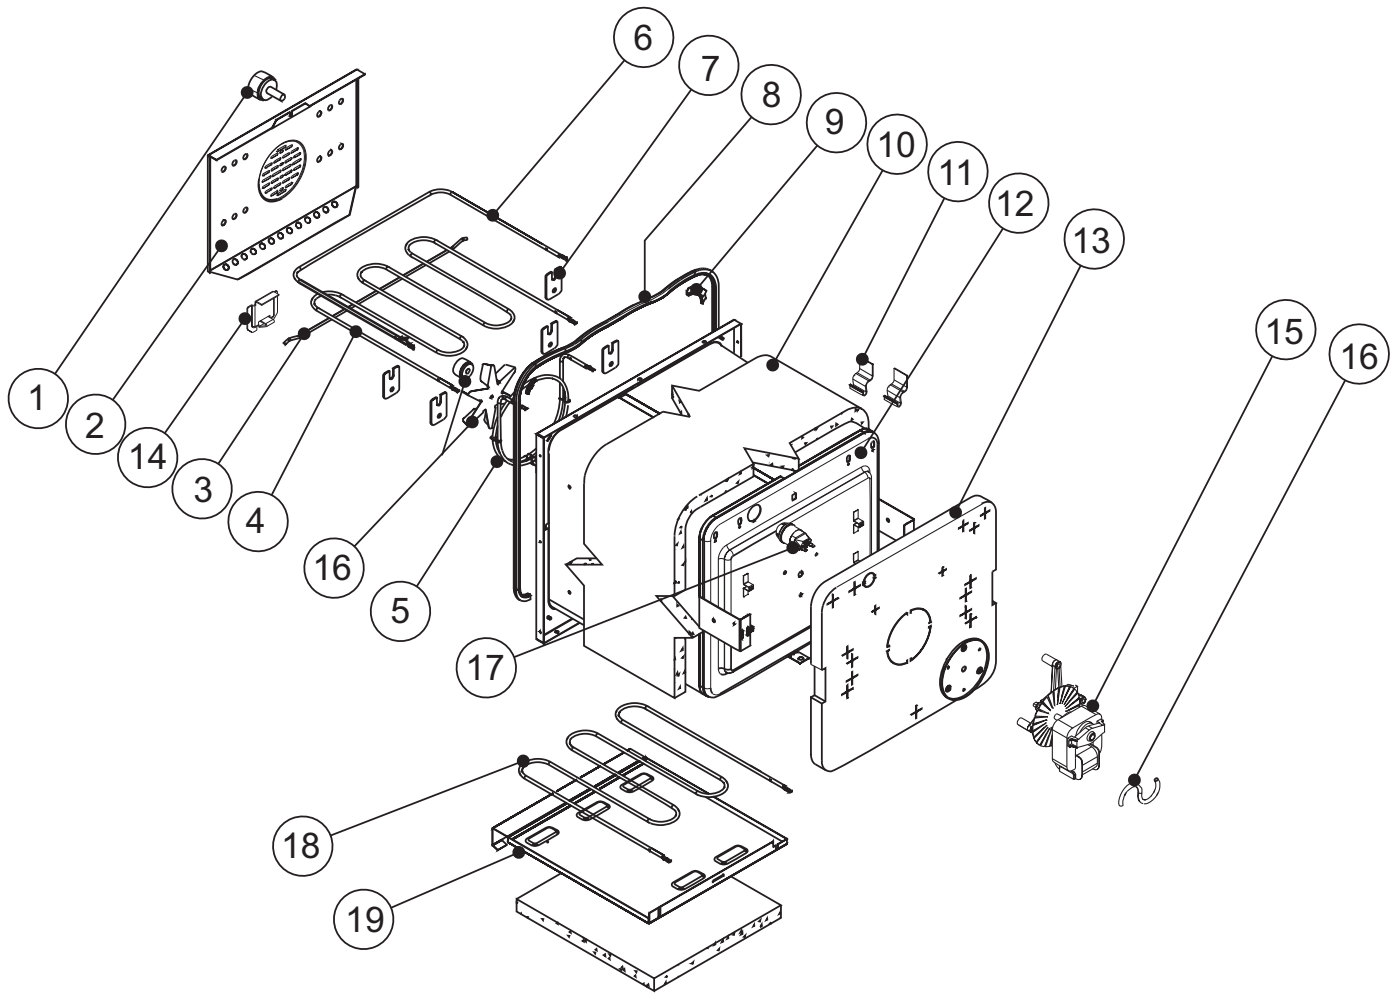

Switch Panel Assembly EW100

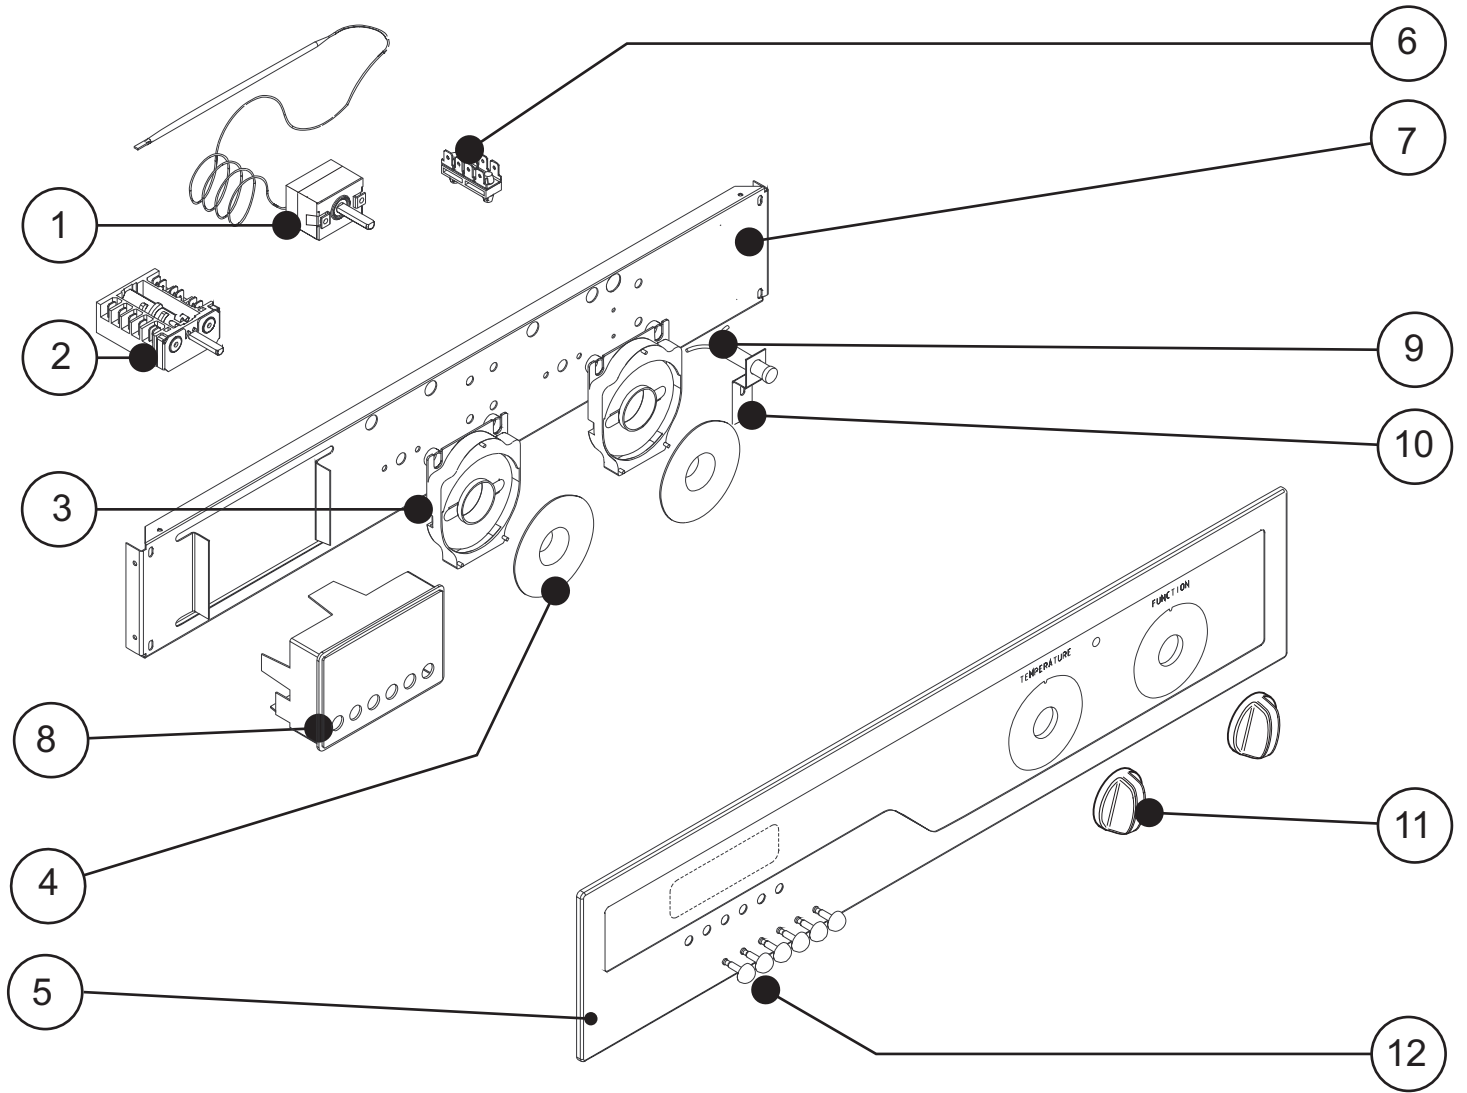

Door Assembly EW050,EW100 & EW300

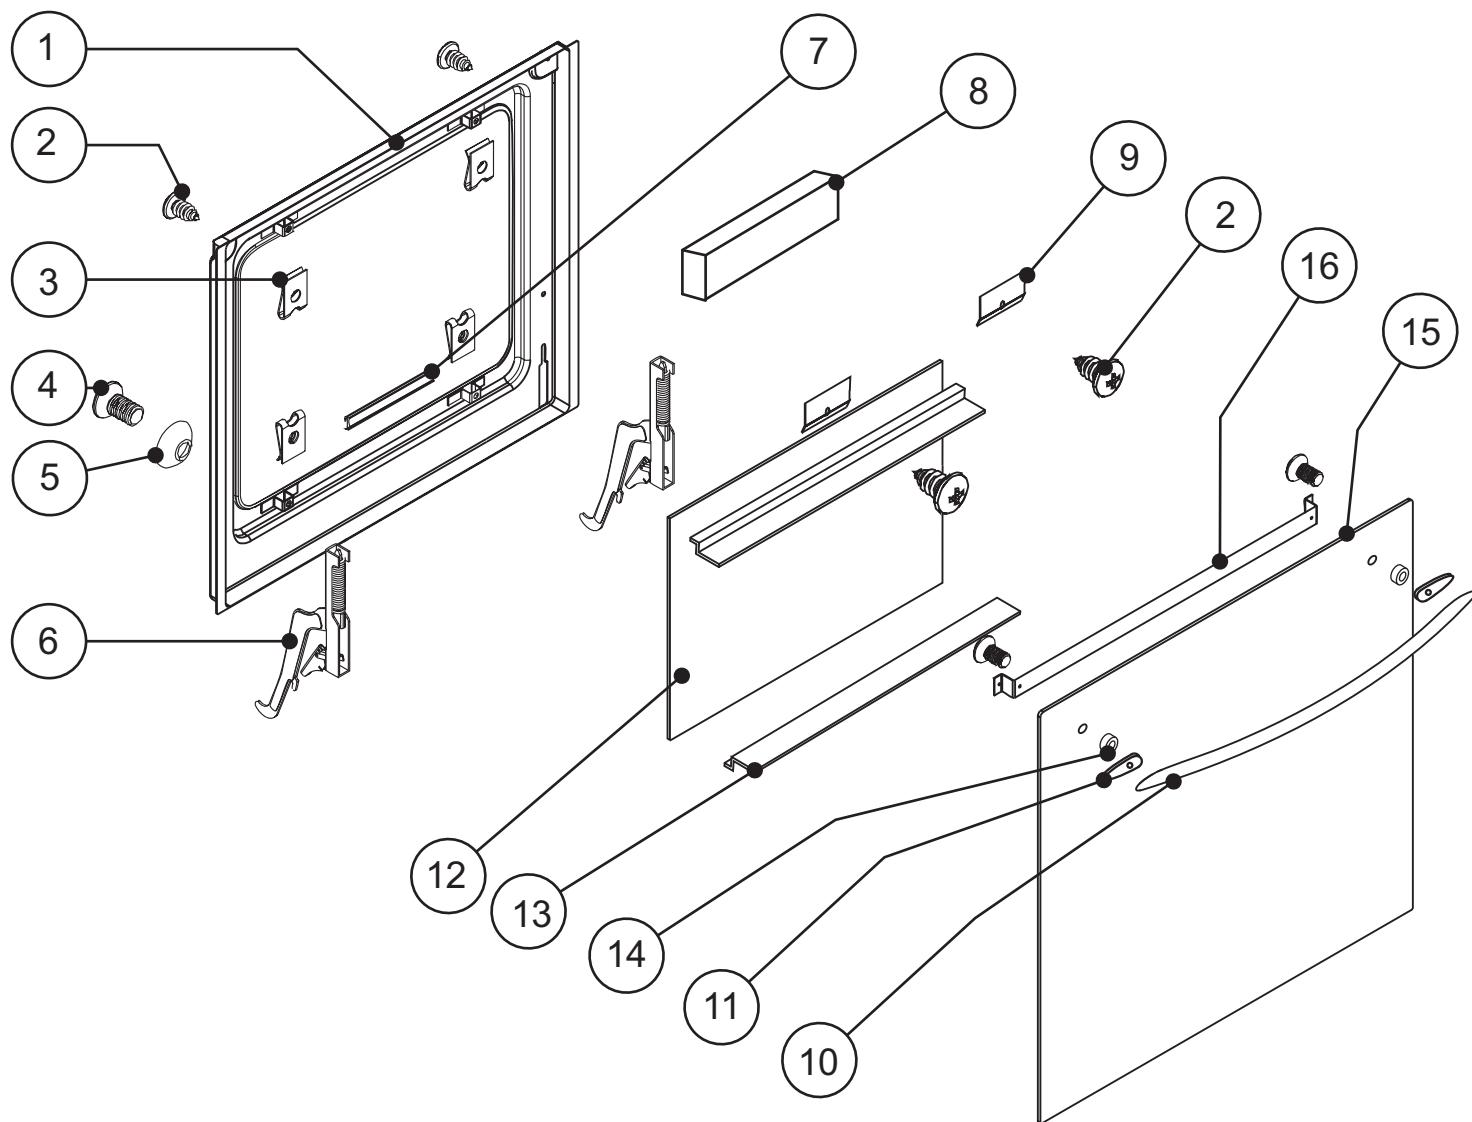

Accessories

Model Number

	EW050	EW100	EW300
Description			
Oven Tray	2	3	3
Meat Dish Curved	1	1	1
Grill Tray Curved	1	1	1
Thumbscrew	3	3	5
Screw	2	2	2
Fibre Washer	2	2	2
Side runner 2nd oven (RHS)	-	-	1
Side runner 2nd oven (LHS)	-	-	1
Grill Reflector 2nd Oven	-	-	1
Oven Rack	-	3	3
Oven Rack	2	-	-
Grill Pan Curved	-	-	1
Grill Pan Rack	-	-	1
8 Rung side Runner (LHS)	-	1	1
8 Rung Side Runner (RHS)	-	1	1
7 Rung side Runner (LHS)	1	-	-
7 Rung side Runner (RHS)	1	-	-
Self Clean Panel	-	2	2
Oven Fan Baffle Self Clean	-	1	1
Oven Fan Baffle	1	-	-

