 


Exploded view of structure and list of parts (3D)

■ A9X LITE 150W

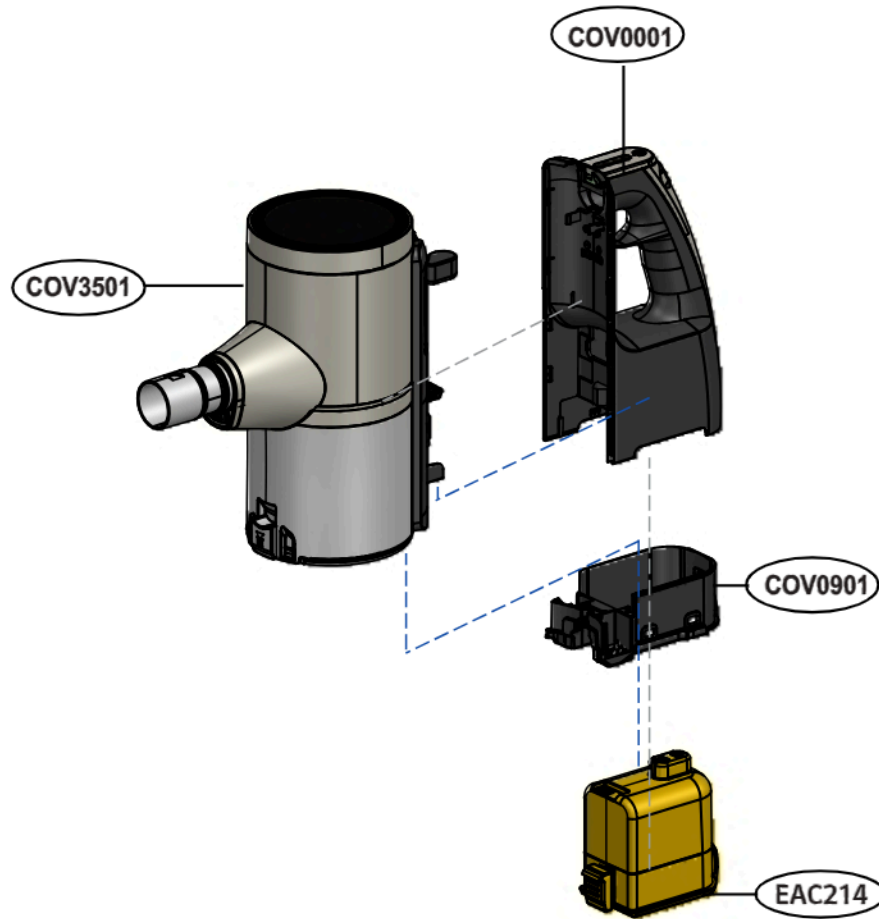


No.	부품명	Location No
1	Tank Assembly,Set	COV3501
2	Handle Assembly	COV0001
3	Supporter Assembly	COV0901
4	Battery Assembly	EAC214



Exploded view of structure and list of parts (3D)

 
■ Tank Assembly, Set

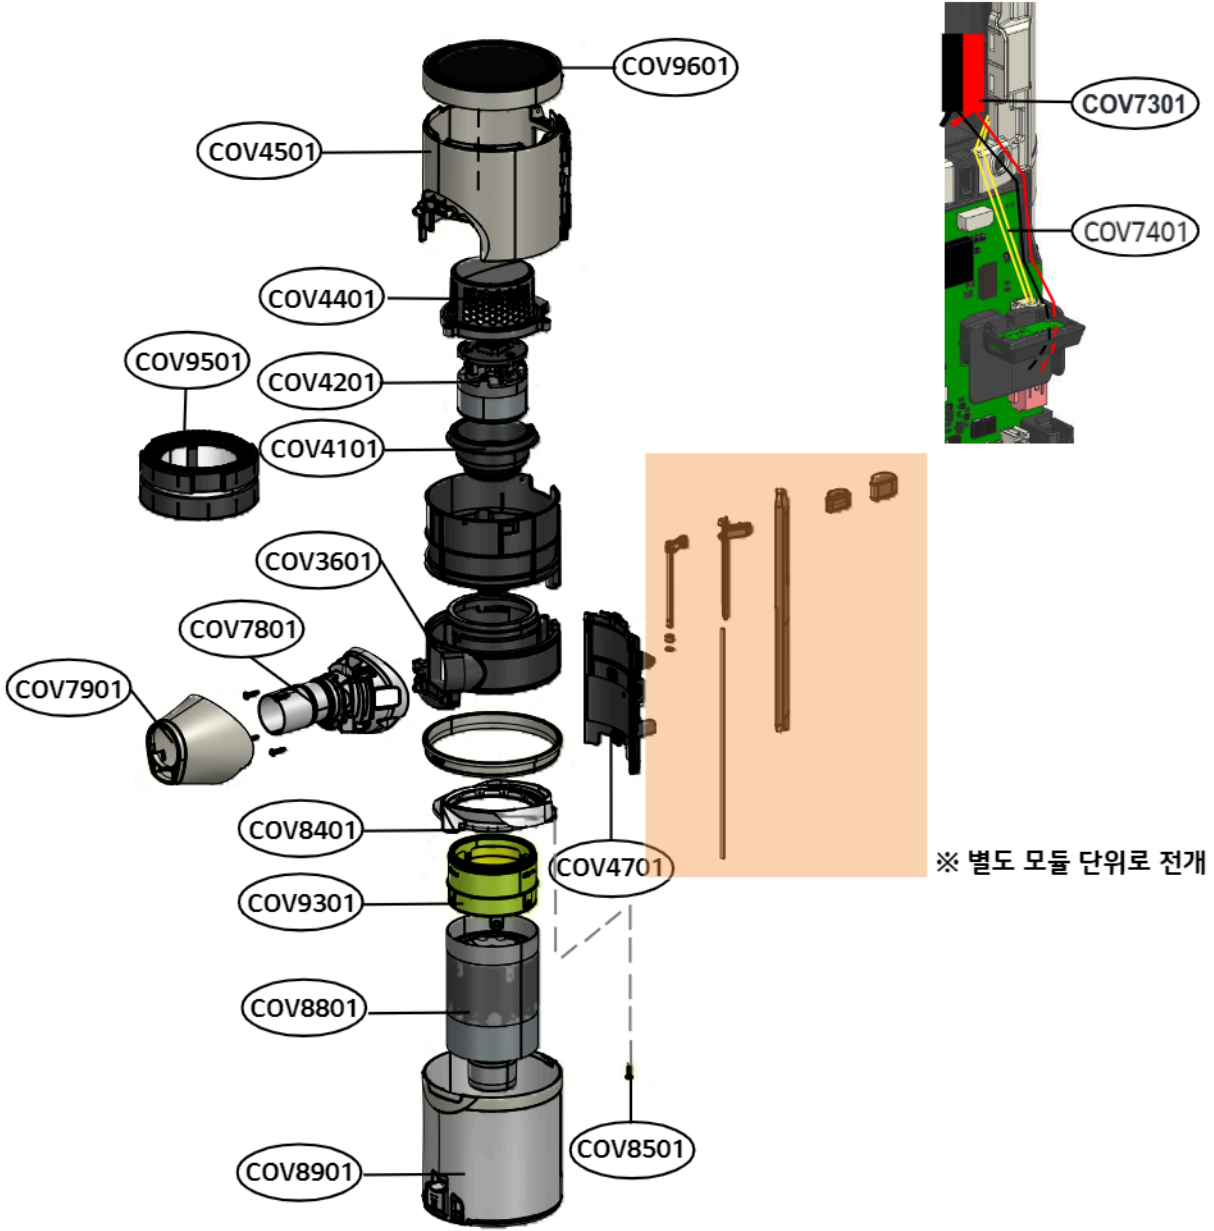

No.	부품명	Location No
1	Cover Assembly,Top	COV9601
2	Shaft	-
3	Housing	COV4501
4	Cover,Motor	COV4401
5	Motor Assembly,DC	COV4201
6	Damper,Motor Mount	COV4101
7	Guide Assembly Air	-
8	Duct Assembly Dust	-
9	Cover Assembly Dust	COV8401
10	Frame Assembly	COV8801
11	Tank Assembly Dust	COV8901
12	Pipe Assembly Suction	COV7801
13	Cover Pipe	COV7901
14	Filter Assembly,Exhaust Filter	COV9501
15	Filter Assembly,Mesh	COV9301
16	Cover Front Assembly	COV4701
17	Harness Multi	COV7301
18	Harness Single	COV7401
19	Screw,Customized	COV8501
20	Cap Assembly,Dust	COV3601

Exploded view of structure and list of parts (3D)

 
■ Tank Assembly, Set (압축레버)

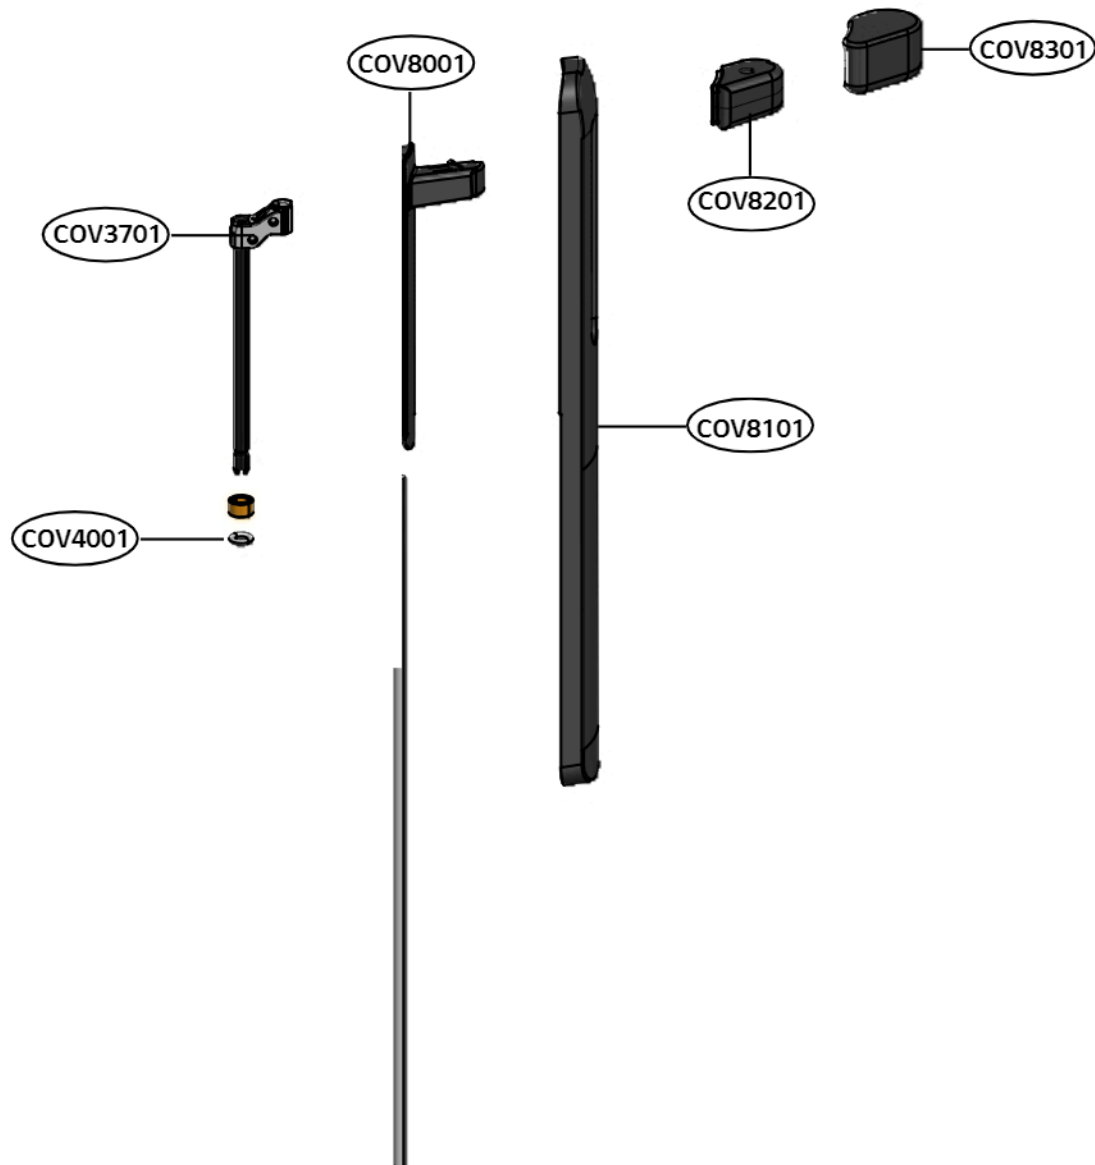

No.	부품명	Location No
1	Cover,Lever	COV8301
2	Lever,Release	COV8201
3	Décor,Button	COV8101
4	Shaft	-
5	Button,Release	COV8001
6	Guide Assembly	COV3701
7	Bushing	-
8	Spring	-
9	Ring	COV4001

Exploded view of structure and list of parts(3D)

 
Handle Assembly

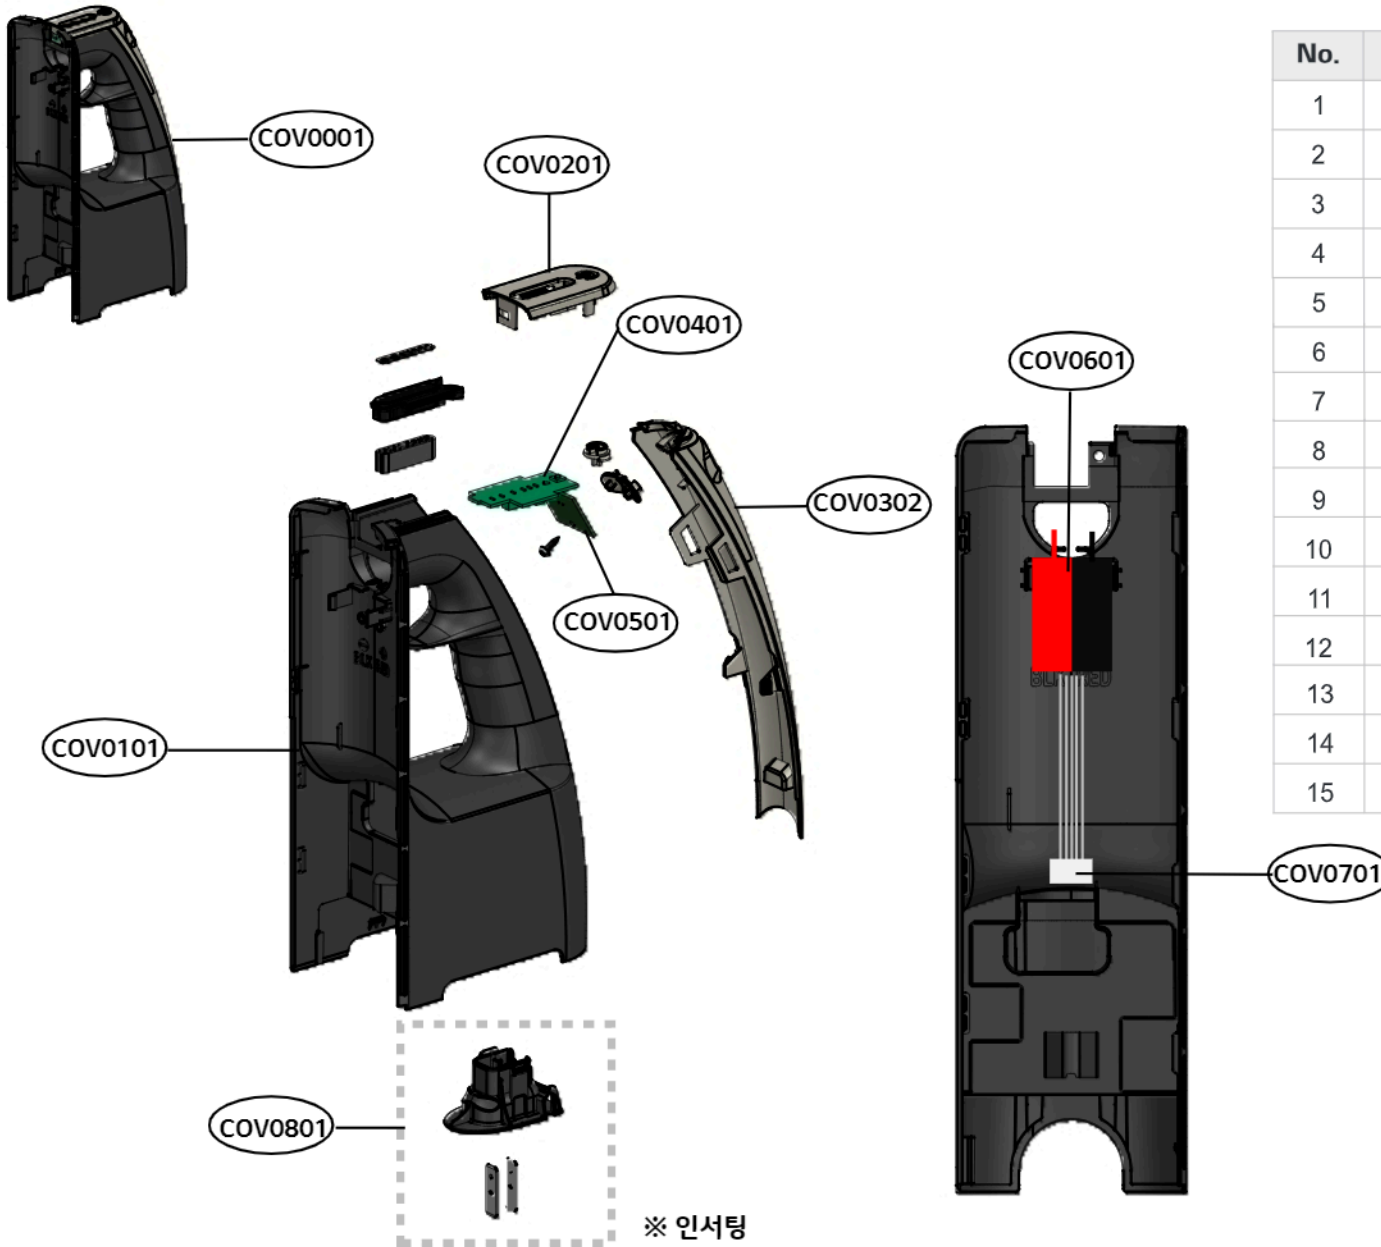

No.	부품명	Location No
1	Handle Assembly	COV0001
2	Base,Handle	COV0101
3	Cover,Handle	COV0302
4	Decor,Button	COV0201
5	Cover,LED	-
6	Film,LED	-
7	Gasket,LED	-
8	Button	-
9	PCB Assembly,Key	COV0401
10	PCB Assembly,Key	COV0501
11	Holder Assembly	COV0801
12	Holder,Terminal	-
13	Pin,Customized	-
14	Harness,Single	COV0601
15	Harness,Single	COV0701

Exploded view of structure and list of parts(3D)

 ■ Cover Assembly Top

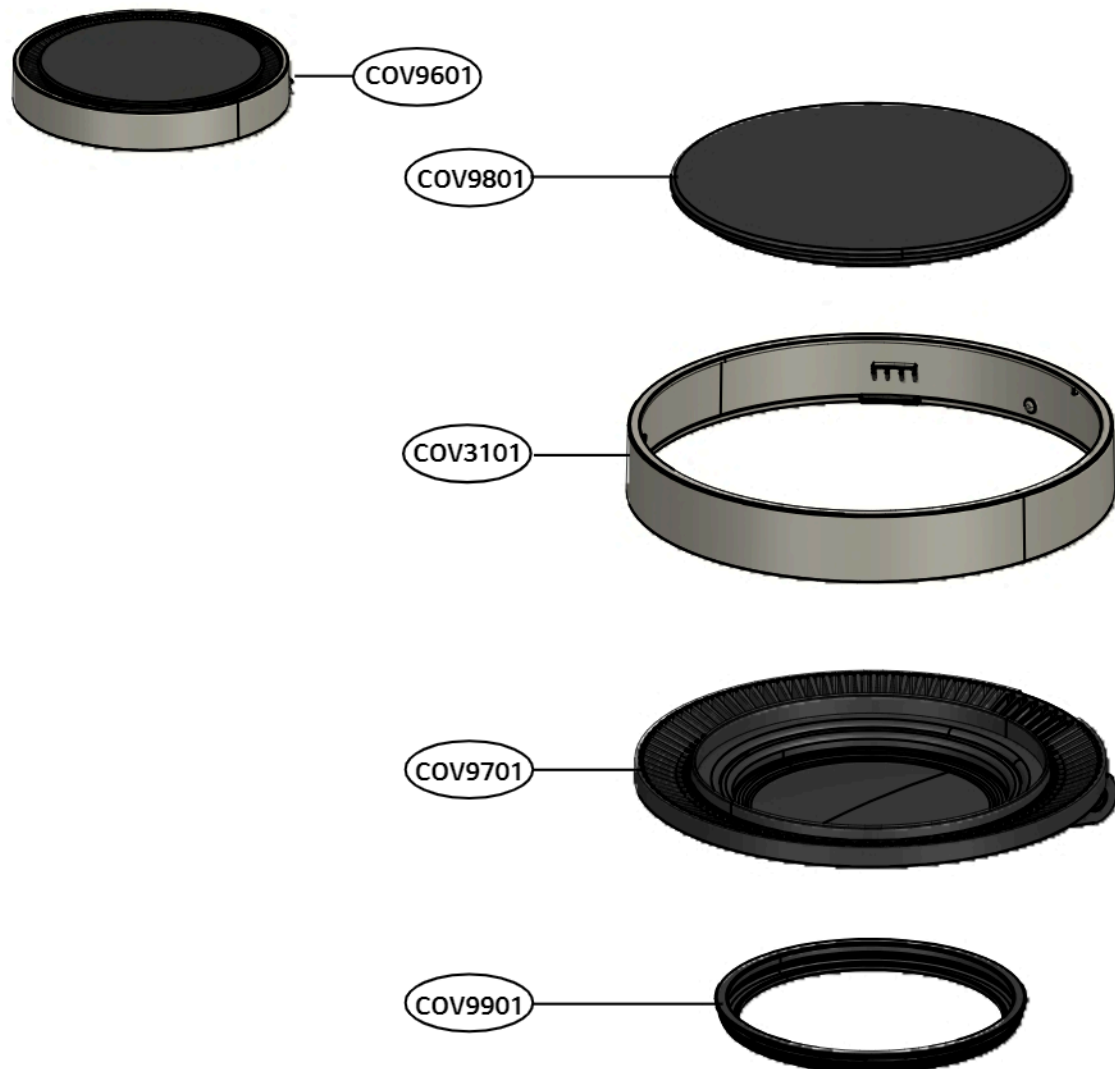


No.	부품명	Location No
1	Cover Assembly,Top	COV9601
2	Cover,Décor	COV3101
3	Cover,Exhaust Filter	COV9701
4	Cover,Top	COV9801
5	Gasket,Sealing	COV9901



Exploded view of structure and list of parts(3D)



 
■ Cover Assembly,Front

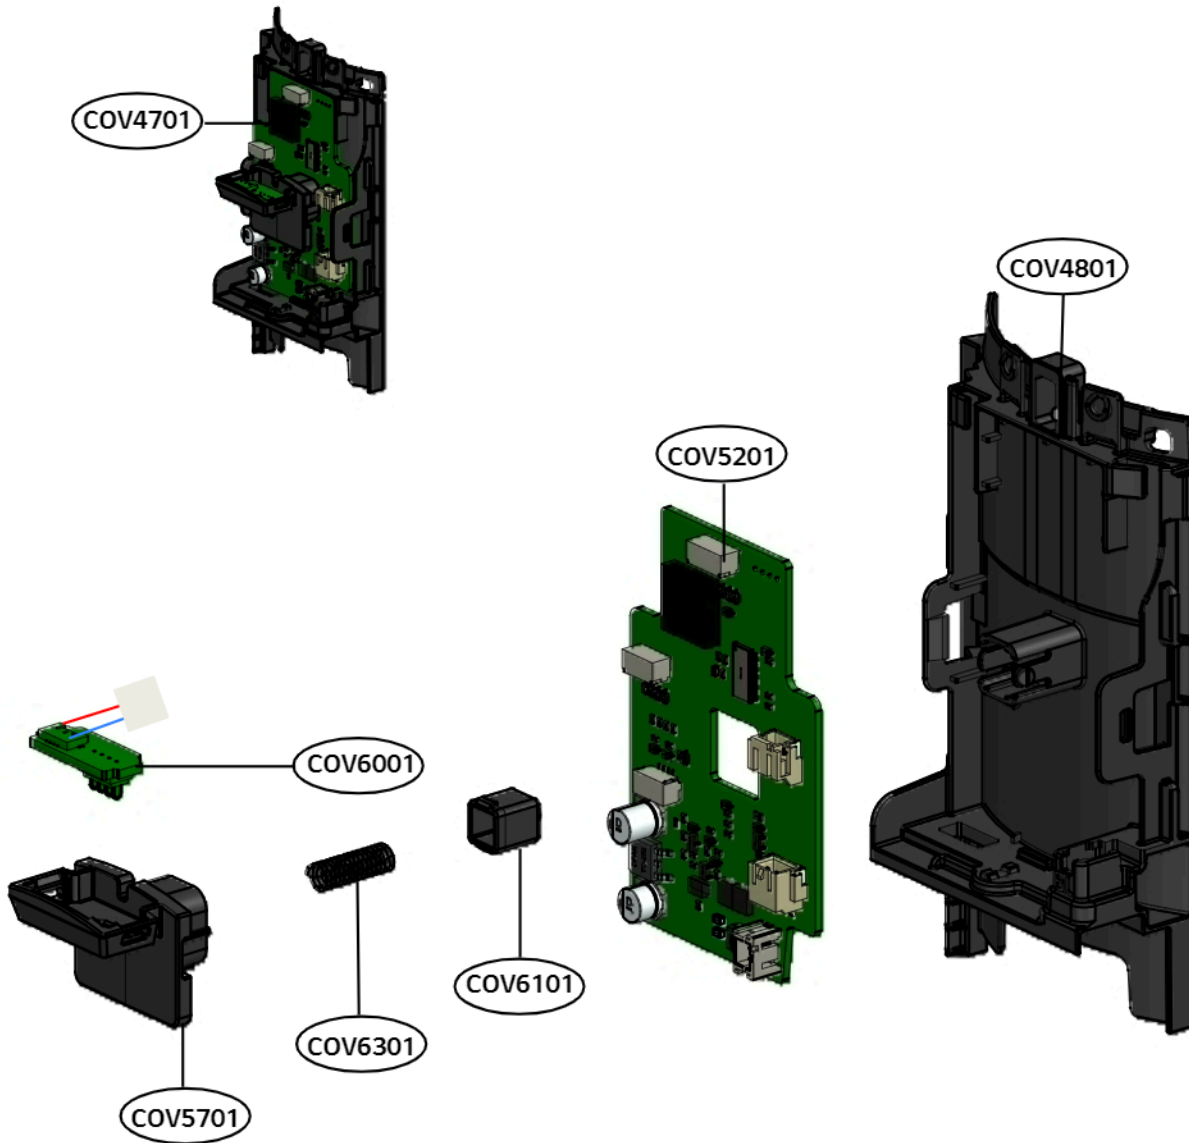

No.	부품명	Location No
1	Cover Assembly,Front	COV4701
2	PCB Assembly,Main	COV5201
3	PCB Assembly,Sub	COV6001
4	Supporter,PCB	COV5701
5	Cover Front	COV4801
6	Locker	COV6101
7	Spring	COV6301

Exploded view of structure and list of parts (3D)

   
Supporter Cover Assembly

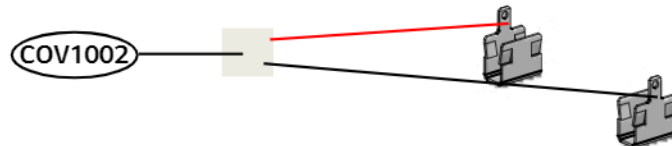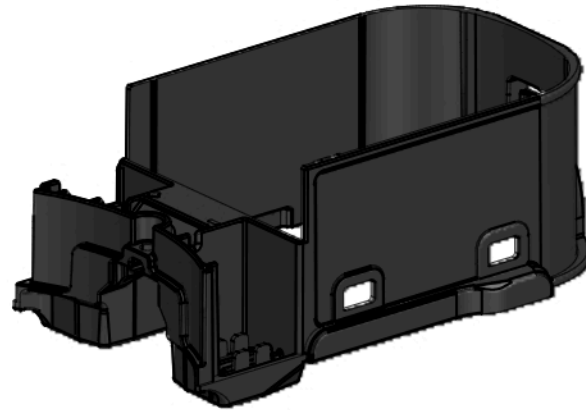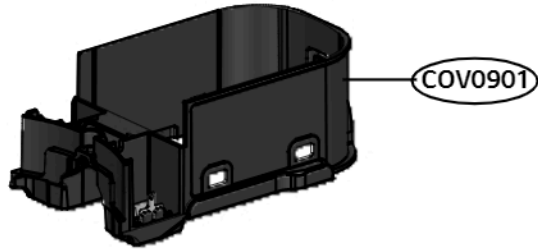

No.	부품명	Location No
1	Supporter Assembly	COV0901
2	Supporter,Cover	-
3	Terminal,Contact	-
4	Cable,Assembly	COV1002

Exploded view of structure and list of parts(3D)

 
■ Tank Assembly, Dust

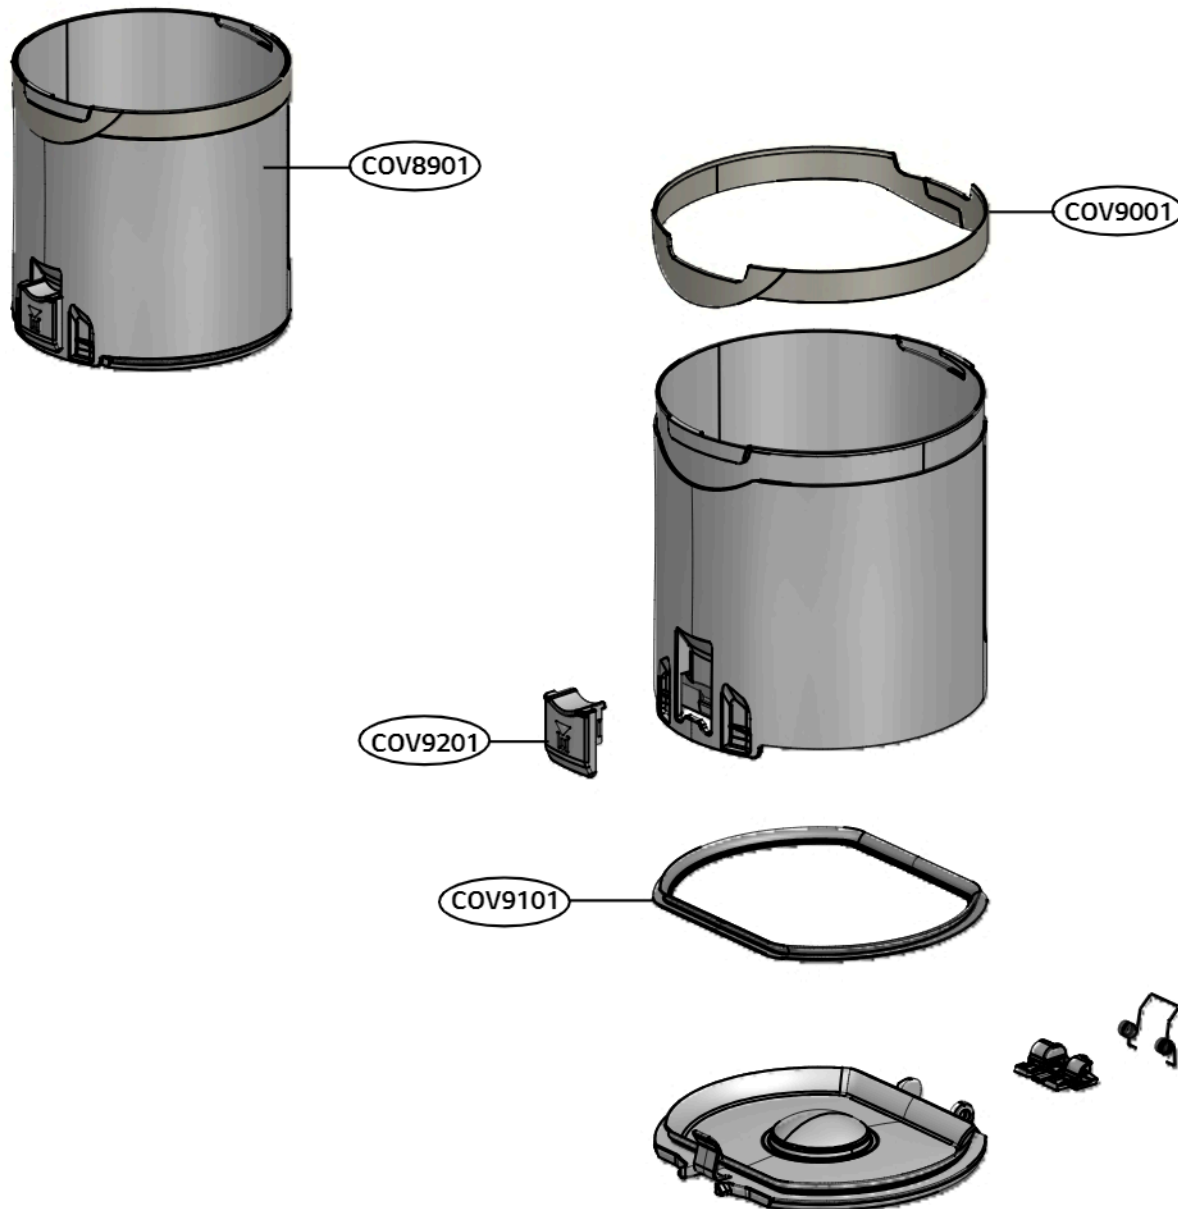

No.	부품명	Location No
1	Tank Assembly Dust	COV8901
2	Cover,Decor	COV9001
3	Tank,Dust	-
4	Lever,Release	COV9201
5	Gasket,Sealing	COV9101
6	Plate,Bottom	-
7	Spring	-
8	Cover,Spring	-

Exploded view of structure and list of parts (3D)

 
■ Frame Assembly

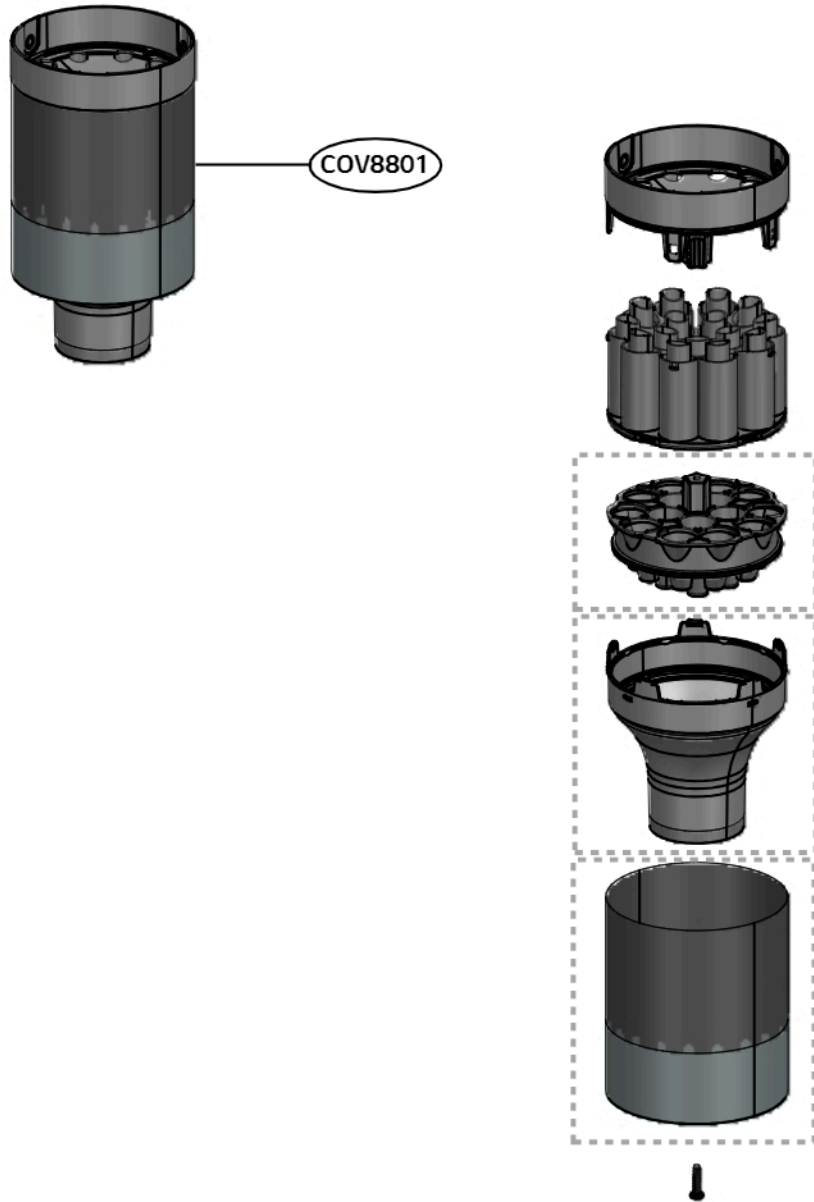

No.	부품명	Location No
1	Frame Assembly	COV8801
2	Frame,Filter	-
3	Strainer,Inner	-
4	Duct Assembly,Dust	-
5	Duct,Dust	-
6	Gasket	-
7	Cover Assembly,Dust	-
8	Cover,Décor	-
9	Gasket	-
10	Cover Assembly	-
11	Mesh	-
12	Cover,Display	-

Exploded view of structure and list of parts (3D)

 Filter Assembly, Exhaust Filter

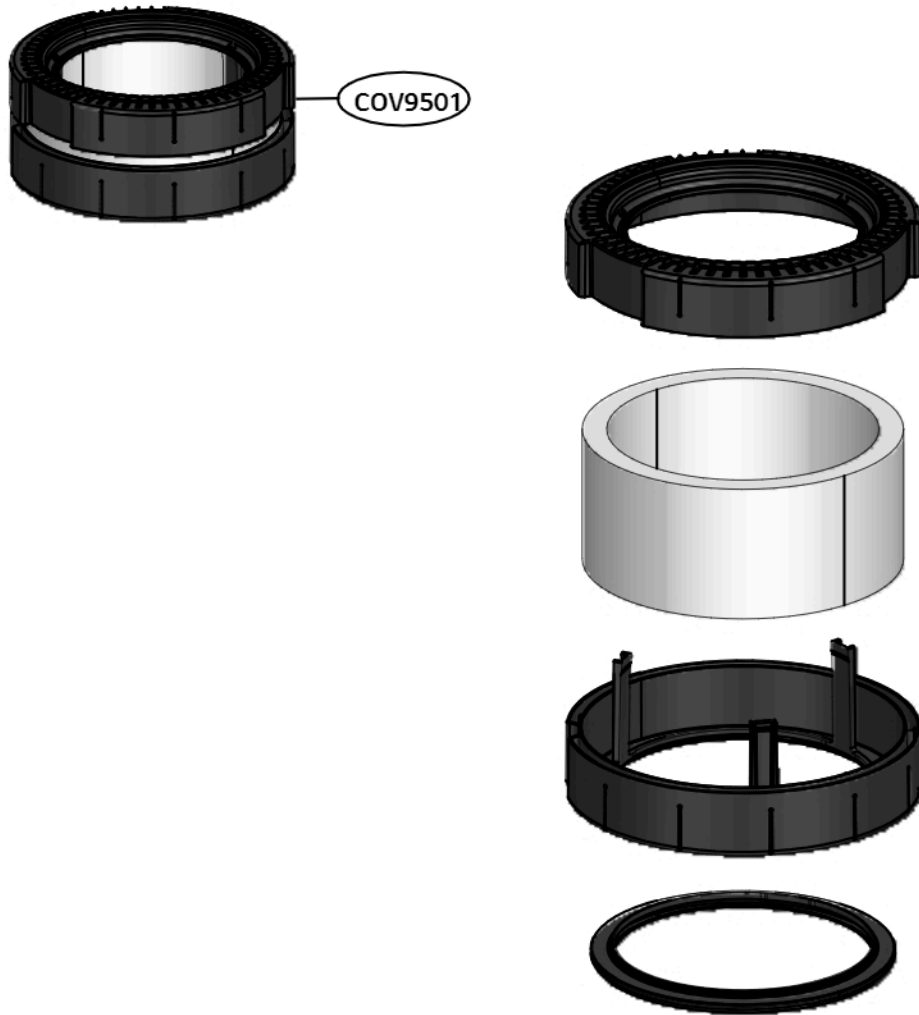


No.	부품명	Location No
1	Filter Assembly, Exhaust Filter	COV9501
2	Cover, Exhaust filter	-
3	Filter, Exhaust	-
4	Supporter, Assembly	-
5	Supporter, filter	-
6	Gasket, Sealing	-



Exploded view of structure and list of parts (3D)



■ Base Assembly

No.	부품명	Location No
1	Base Assembly,Body	COV4202
2	Charger,Battery	COV4601

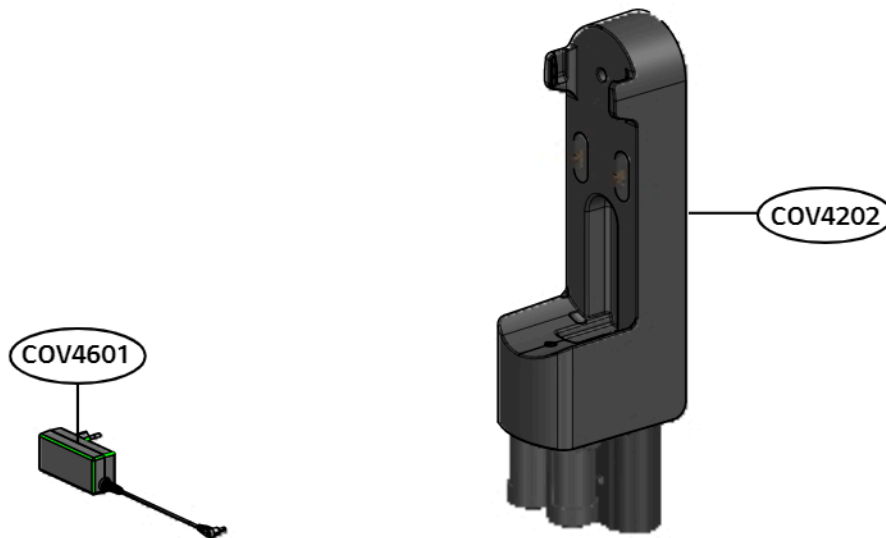 


Exploded view of structure and list of parts(3D)

  ■ Accessory

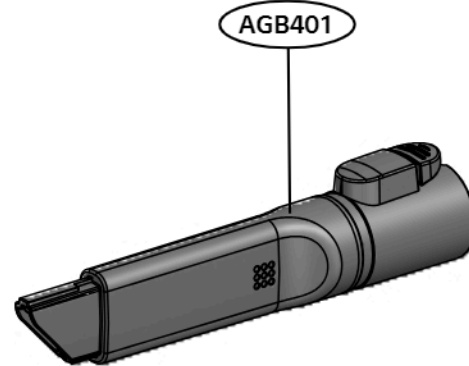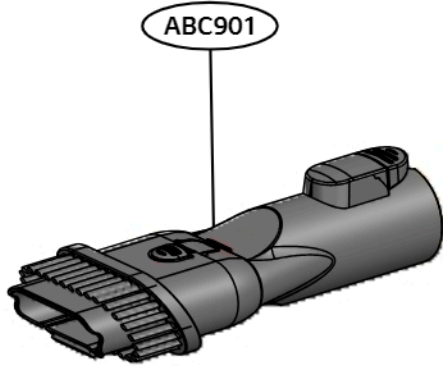

No.	부품명	Location No
1	Brush Assembly ,Dust	ABC901
2	Nozzle Assembly, Crevice	AGB401
3	Pipe Assembly,Fixed	AGR904

 ■ Fixed Pipe

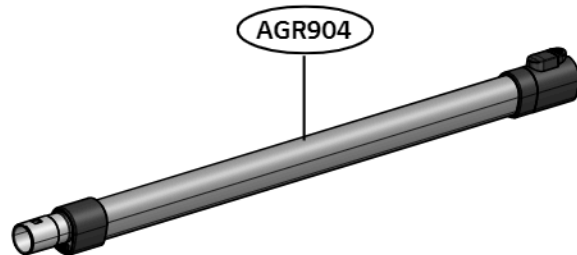

Exploded view of structure and list of parts

■ Nozzle Assembly, Turbine

