

BRAUN

Series 3



91783119/II-18



Type 5416, 5414
Modèle 5416, 5414
Modelo 5416, 5414

www.braun.com

3080
3045
3040
3010

wet & dry



Braun Infolines
Lignes d'assistance Braun
Líneas de información de Braun

English	6
Français	16
Español	24

Thank you for purchasing a Braun product.
We hope you are completely satisfied with
your new Braun product.

If you have any questions, please visit
www.service.braun.com or call:

US residents 1-800-BRAUN-11
1-800-272-8611

Canadian residents 1-800-387-6657

Merci d'avoir fait l'achat d'un produit Braun.
Nous espérons que vous serez entièrement
satisfait de votre nouveau produit Braun.

Si vous avez des questions, veuillez visiter
www.service.braun.com ou appeler
Braun Canada : 1-800-387-6657

 
 
 
Gracias por haber comprado un producto
Braun.

 
 
 
 
Esperamos que quede completamente
satisfecho con su nuevo producto Braun.



3010BT + BT32



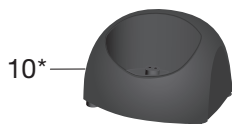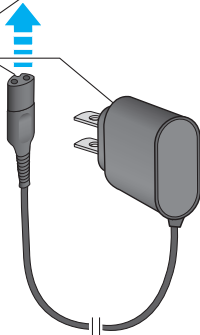

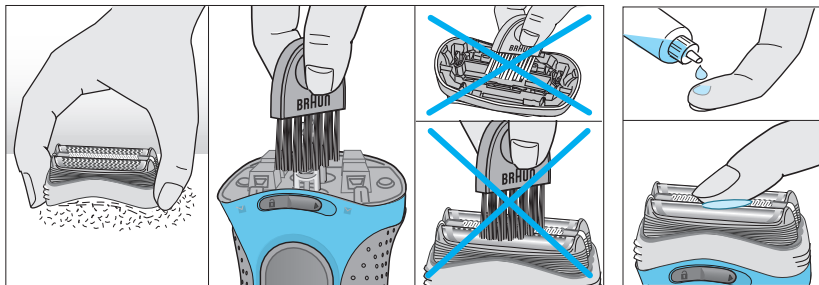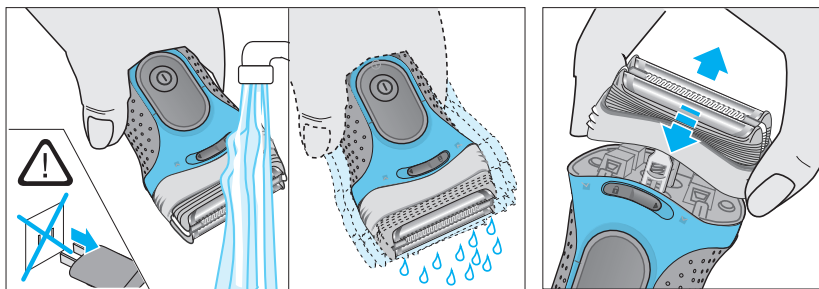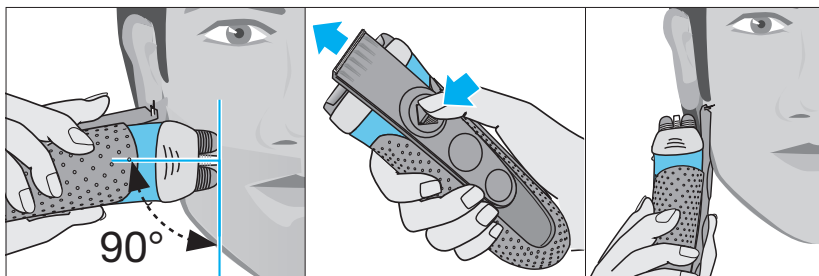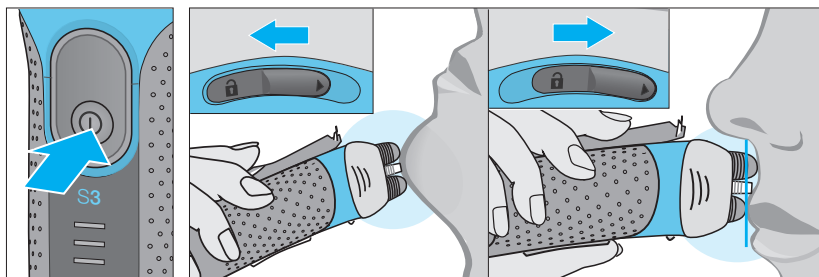

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using this appliance.



When disconnected, the hand-held part of this shaving appliance may be used in a bath or shower. For safety reasons, the appliance can only be operated cordless.

DANGER

To reduce the risk of electric shock:

1. The charger unit is not for immersion in water or for use in shower.
2. Do not reach for a charger that has fallen into water. Unplug immediately.
3. Do not place, store or charge the appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Except when charging, always unplug this appliance from the electrical outlet immediately after using.
5. This appliance is provided with a special cord set with integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it.
6. Do not use an extension cord with this appliance.
7. Unplug this appliance before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Close supervision is necessary when this appliance is used by, on, or near children or persons with disabilities.
2. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if the power supply has been dropped into water. Return the appliance to a service center for examination and repair.
4. Keep the cord away from heated surfaces.
5. Never drop or insert any object into any opening of the appliance.
6. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
7. Do not use this appliance with a damaged or broken foil / trimmer head / attachment, as serious skin injuries may occur.
8. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls off, then remove plug from outlet.
9. When plugging to an electrical outlet outside North America, use a plug adapter to match the outlet's pin configuration.
10. **Caution:** The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100 °C (212 °F), or incinerate.
11. To recharge the battery, only use the detachable power supply provided with this appliance. If the appliance is marked  492-XXXX, only use Braun power supplies coded 492-XXXX.

SAVE THESE INSTRUCTIONS

Important

Do not open the appliance! Only at the end of the product's useful life, disassemble the rechargeable battery for disposal reasons as shown in the battery removal section.

This product is for household use only.

Description

- 1 Foil & Cutter cassette
- 2 Long hair trimmer*
- 3 Precision mode switch* 
- 4 On/off switch
- 5 Green charging light(s)
- 6 Red low-charge light
- 7 Replacement light for shaving parts
- 8 Shaver power socket
- 9 Special cord set (design can differ)
- 10 Charging stand*
- 11 Travel pouch*
- 12 Protection cap*
- 13 Beard trimmer head with 5 combs (BT32)*

* not with all models

Charging

Recommended ambient temperature for charging is 41 °F to 95 °F / 5 °C to 35 °C. The battery may not charge properly or at all under extreme low or high temperatures. Recommended ambient temperature for shaving is 60 °F to 95 °F / 15 °C to 35 °C. Do not expose the shaver to temperatures higher than 122 °F / 50 °C for extended periods of time.

- Using the special cord set (9), connect the shaver or the charging stand (10) to an electrical outlet with the motor switched off.
- When charging for the first time or when the shaver is not used for a few months, leave the shaver to charge continuously for 4 hours.
- Once the shaver is completely charged, discharge the shaver through normal use. Then recharge to full capacity. Subsequent charges will take about 1 hour.
- 5-minute quick charge is sufficient for a shave.
- A full charge provides up to 45 minutes of cordless shaving time depending on your beard growth. However, the maximum battery capacity will only be reached after several charging/discharging cycles.

Charging lights (5)

The green charging light shows the charge status of the batteries. The green charging light blinks when the shaver is being charged or switched on. When the battery is fully charged, all green charging lights shine permanently, provided the shaver is connected to an electrical outlet.

Low-charge light (6)

The red low-charge light flashes when the battery is running low. You should be able to finish your shave.