

SPLIT TYPE
ROOM AIR CONDITIONER
WALL MOUNTED TYPE


SERVICE MANUAL



Indoor unit	Outdoor unit
ASTG18LVCC	AOTG18LVCC
ASTG22LVCC	AOTG22LVCC


PARTS

OUTDOOR UNIT
AOTG18LVCC
AOTG22LVCC

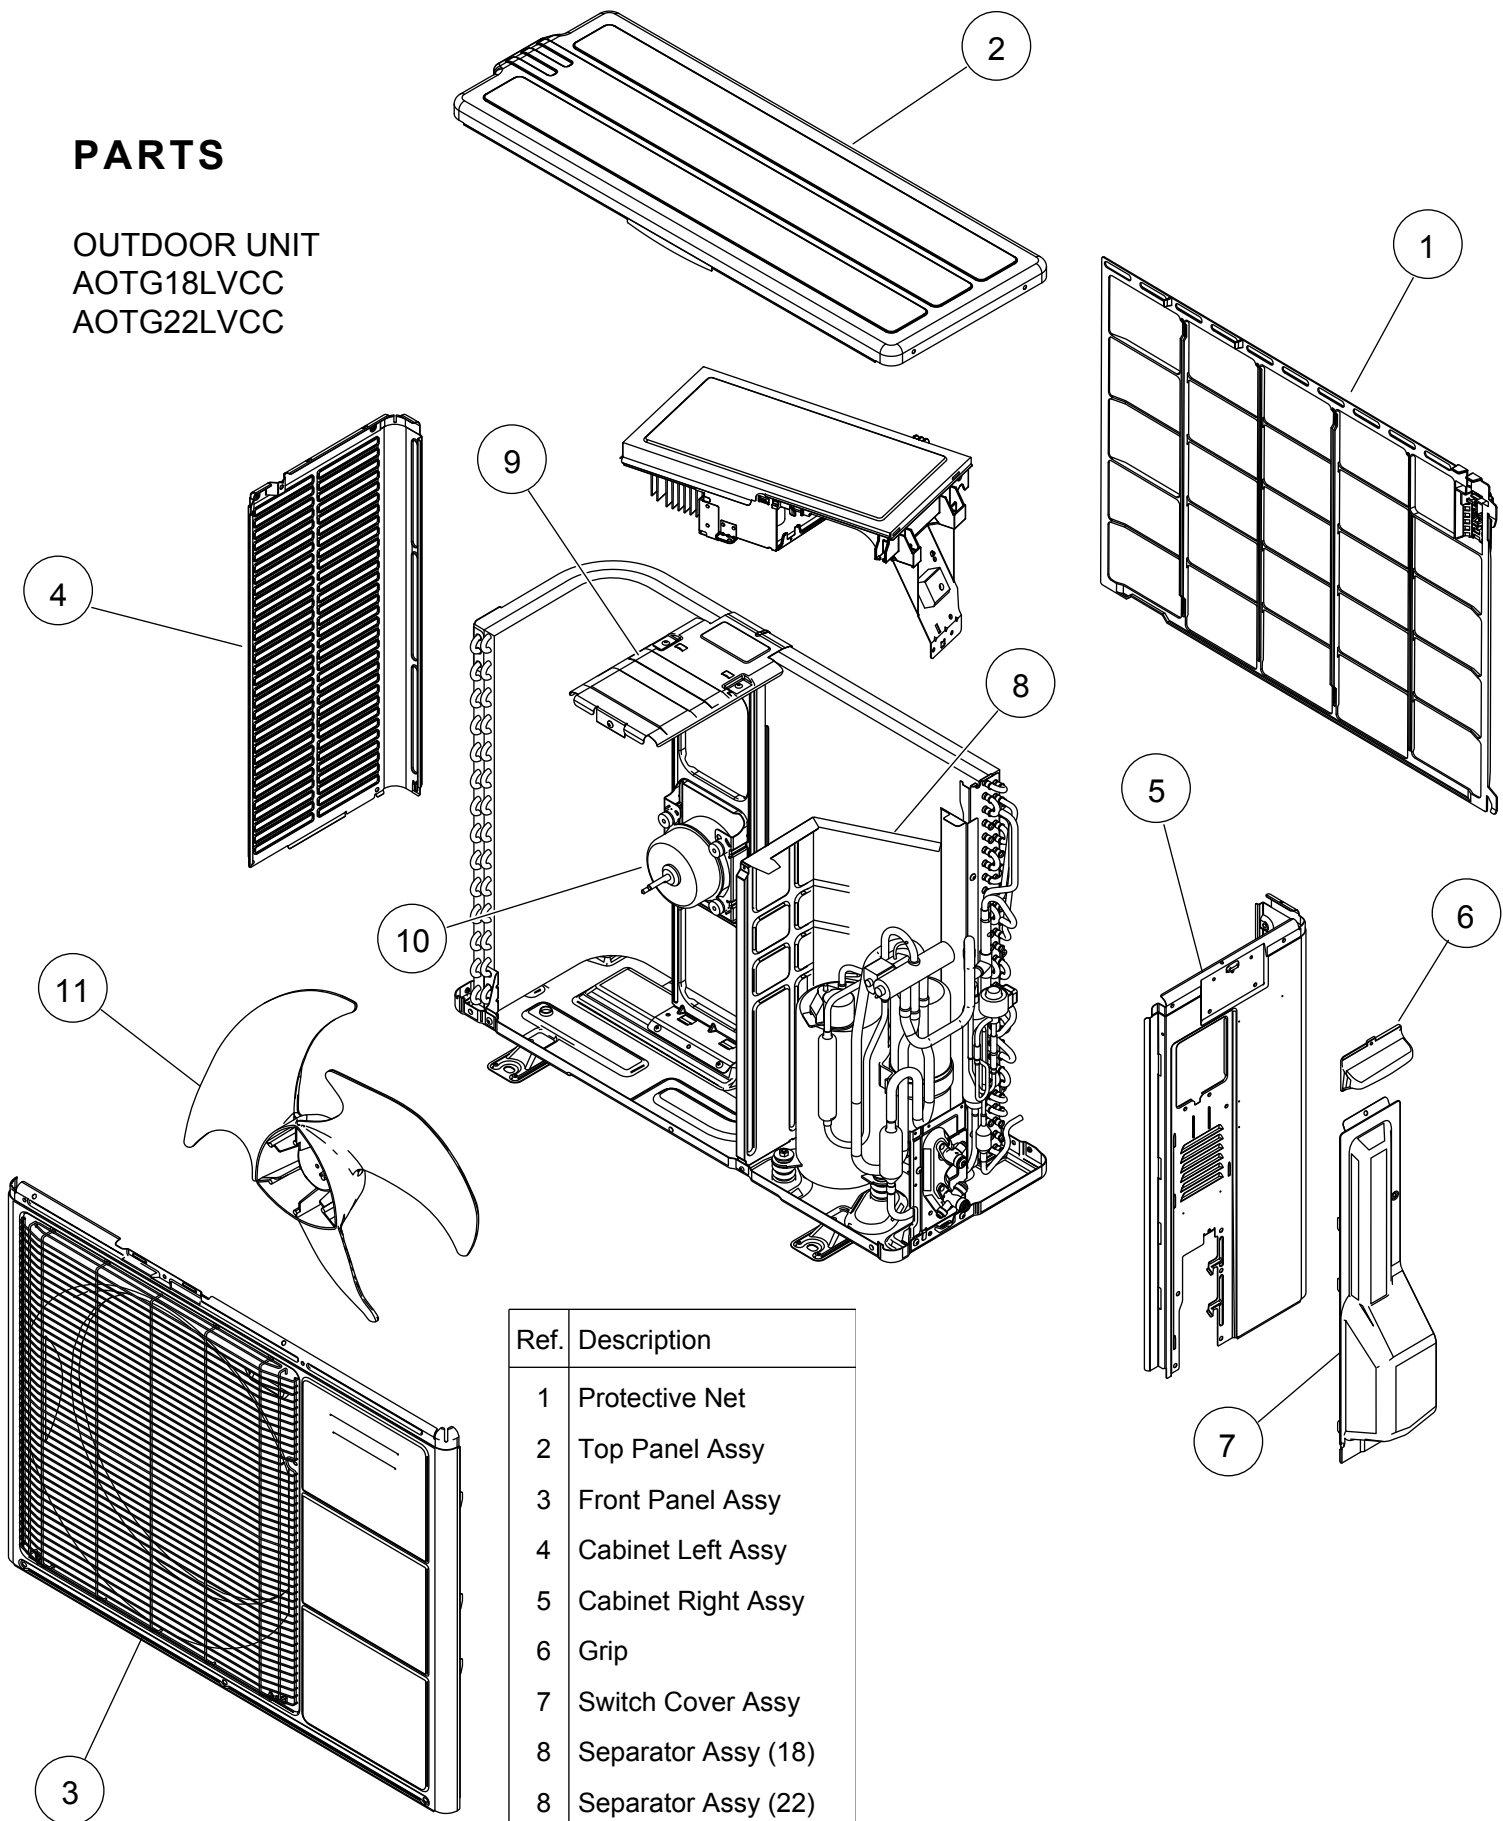


Ref.	Description
1	Protective Net
2	Top Panel Assy
3	Front Panel Assy
4	Cabinet Left Assy
5	Cabinet Right Assy
6	Grip
7	Switch Cover Assy
8	Separator Assy (18)
8	Separator Assy (22)
9	Motor Bracket Assy (18)
9	Motor Bracket Assy (22)
10	Fan Motor
11	Propeller Fan
--	Emblem
--	Drain Assy

OUTDOOR UNIT
AOTG22LVCC

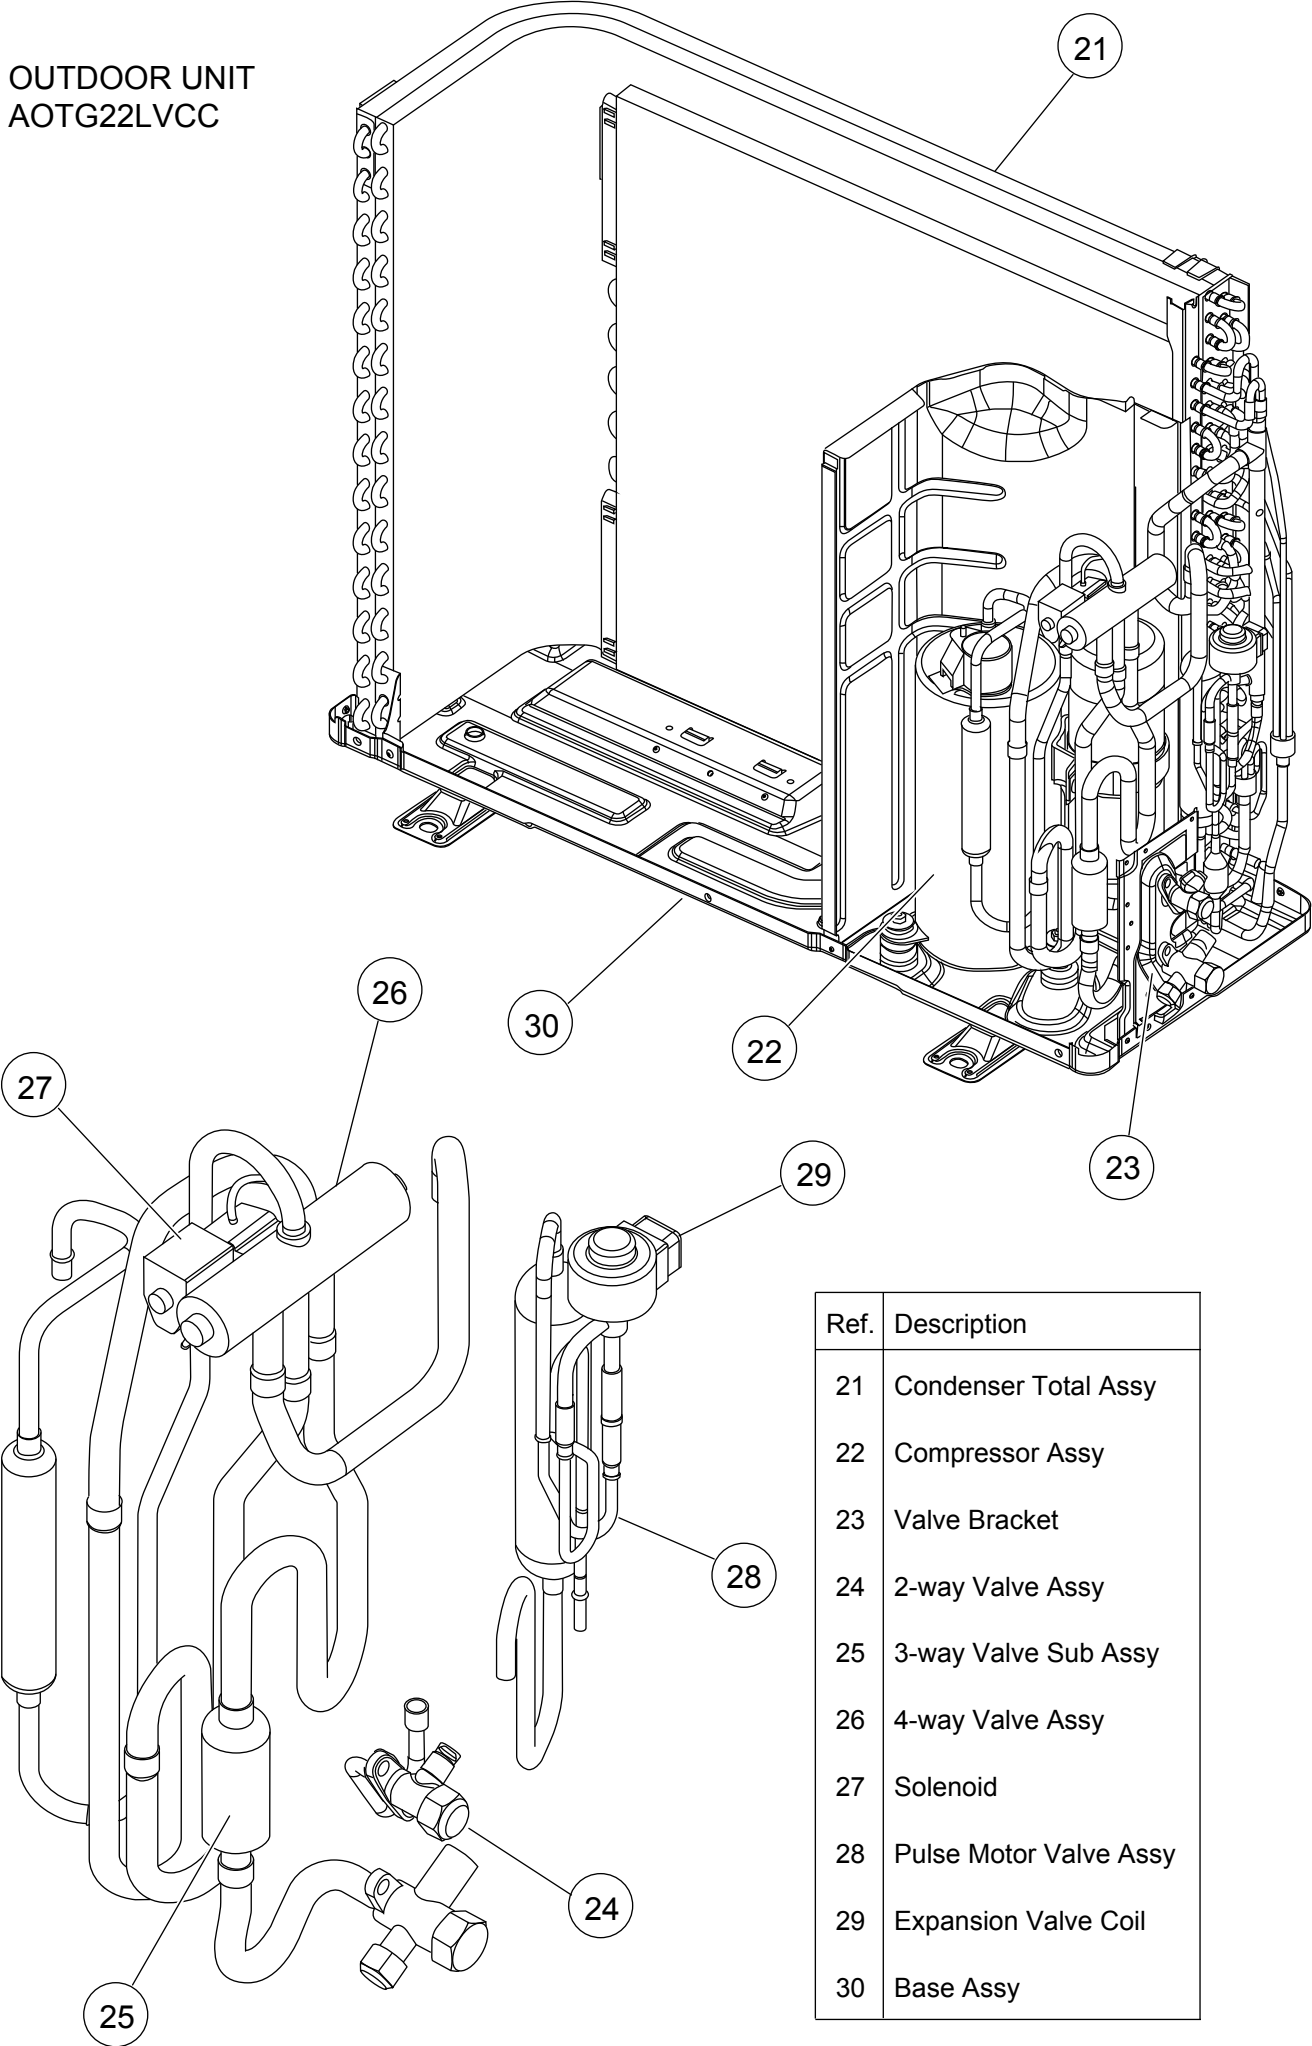

Ref.	Description
21	Condenser Total Assy
22	Compressor Assy
23	Valve Bracket
24	2-way Valve Assy
25	3-way Valve Sub Assy
26	4-way Valve Assy
27	Solenoid
28	Pulse Motor Valve Assy
29	Expansion Valve Coil
30	Base Assy

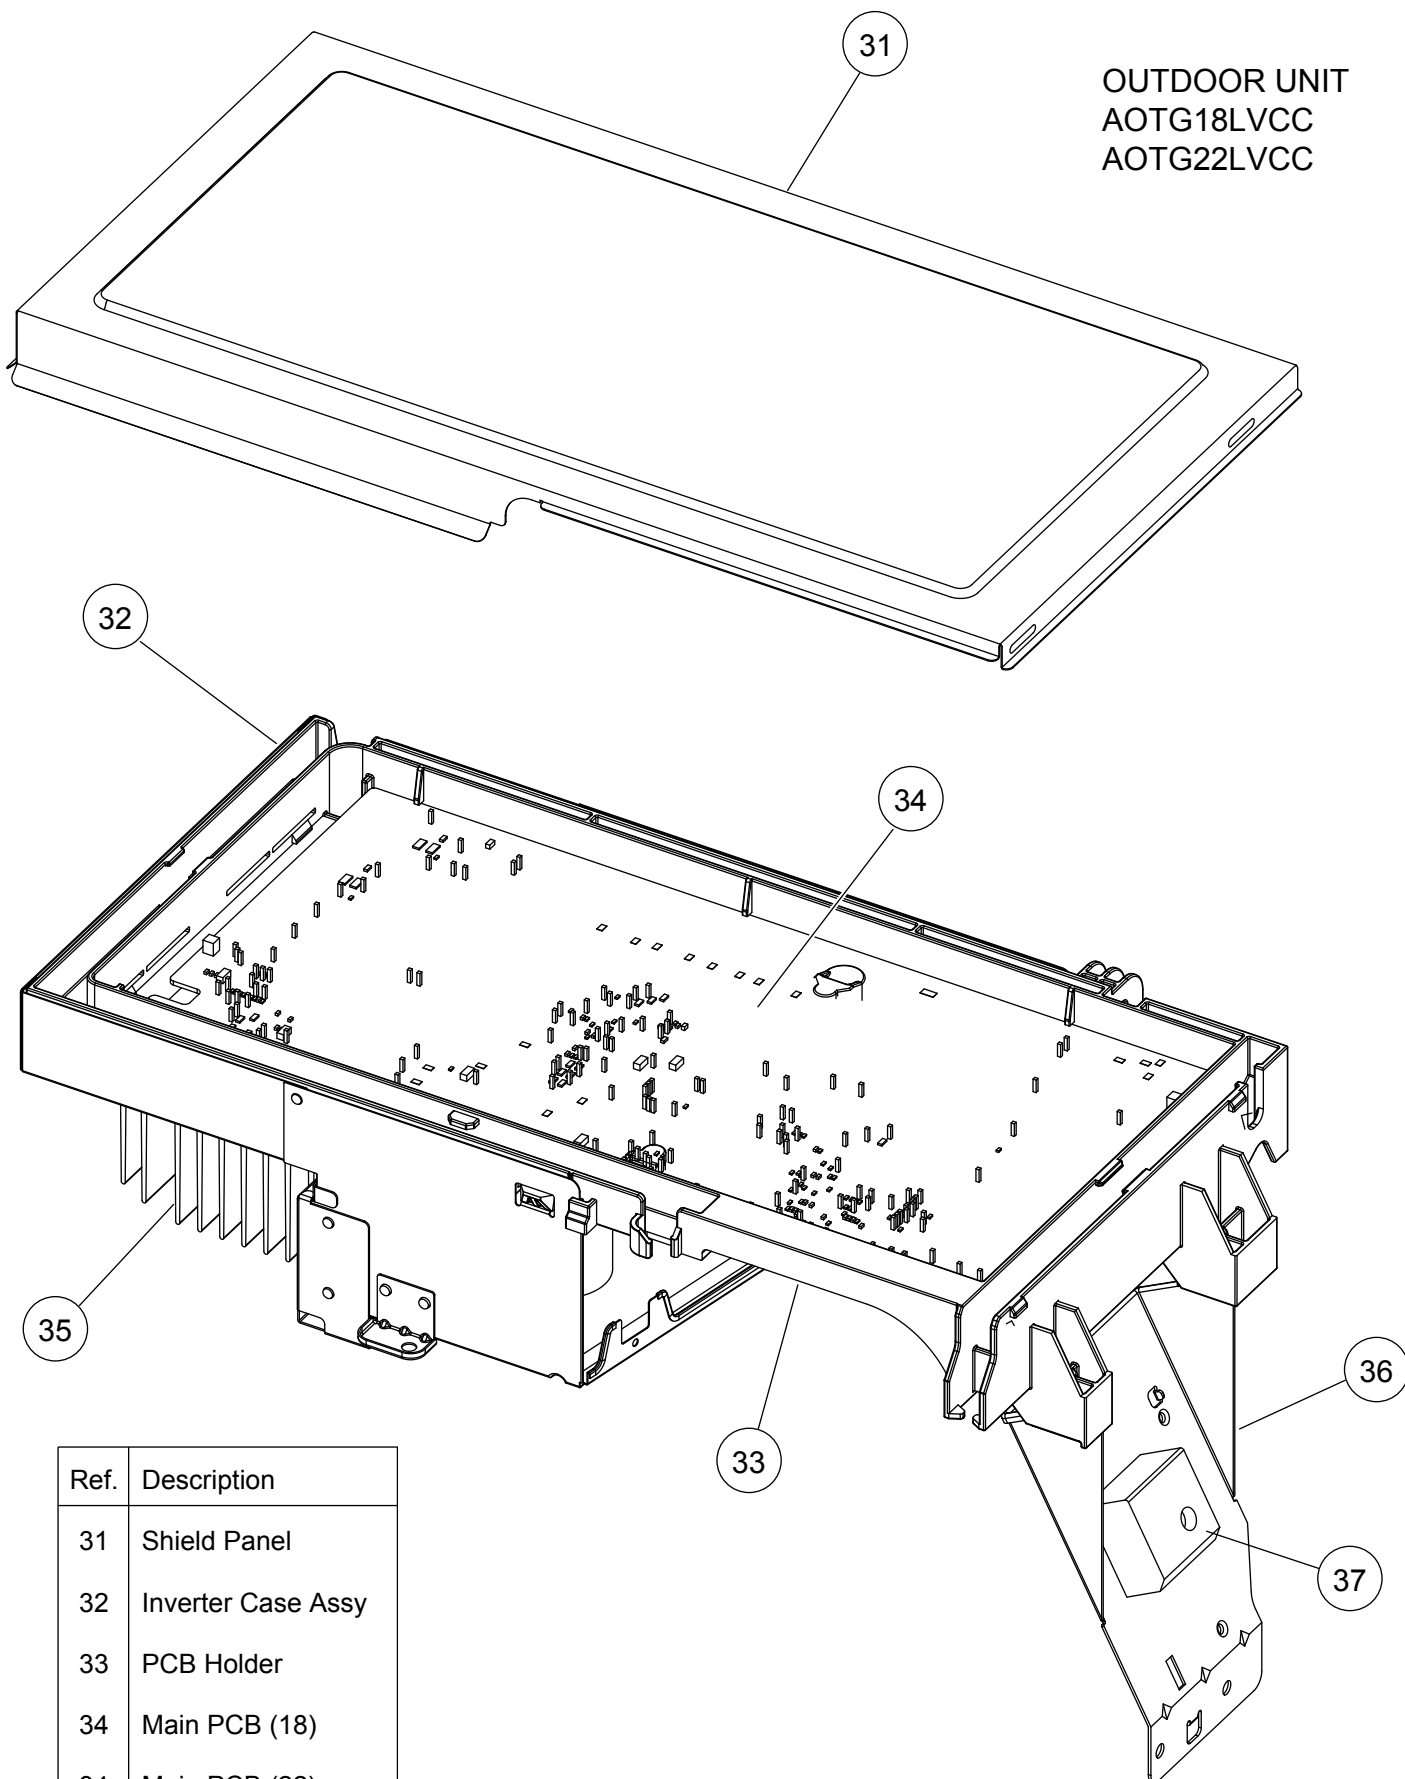

Ref.	Description
31	Shield Panel
32	Inverter Case Assy
33	PCB Holder
34	Main PCB (18)
34	Main PCB (22)
35	Heat Sink
36	Terminal Bracket
37	Terminal 6P
--	Outdoor Thermistor
--	Thermistor Assy

1205G4084