

SPLIT TYPE
ROOM AIR CONDITIONER
WALL MOUNTED TYPE


SERVICE MANUAL

Indoor unit	Outdoor unit
ASTG14LUCB	AOTG14LUCB




PARTS

INDOOR UNIT

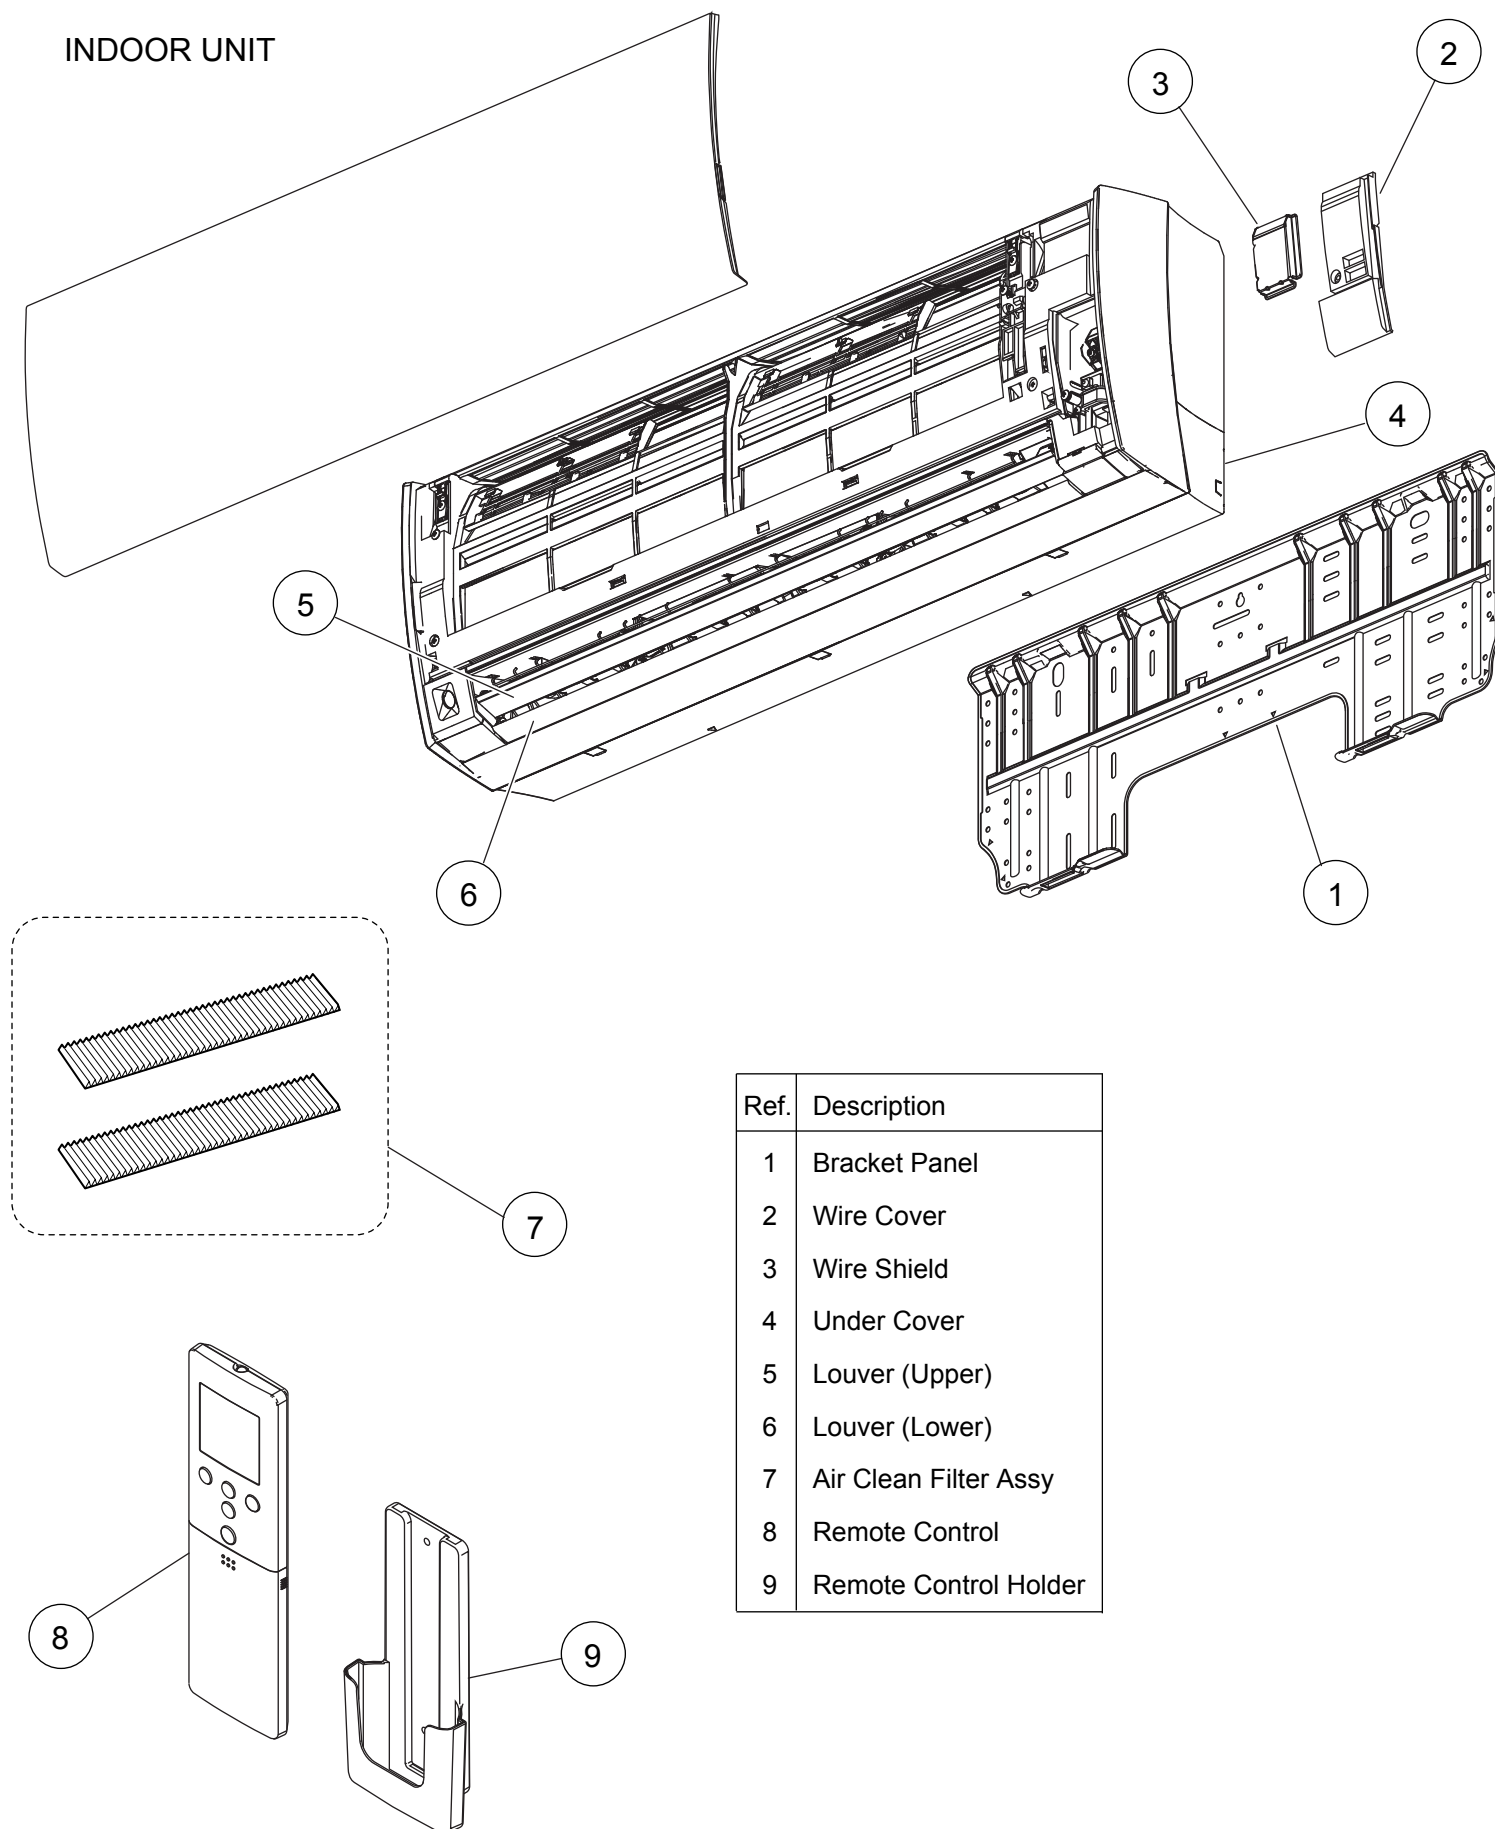


Ref.	Description
1	Bracket Panel
2	Wire Cover
3	Wire Shield
4	Under Cover
5	Louver (Upper)
6	Louver (Lower)
7	Air Clean Filter Assy
8	Remote Control
9	Remote Control Holder

INDOOR UNIT
Front panel

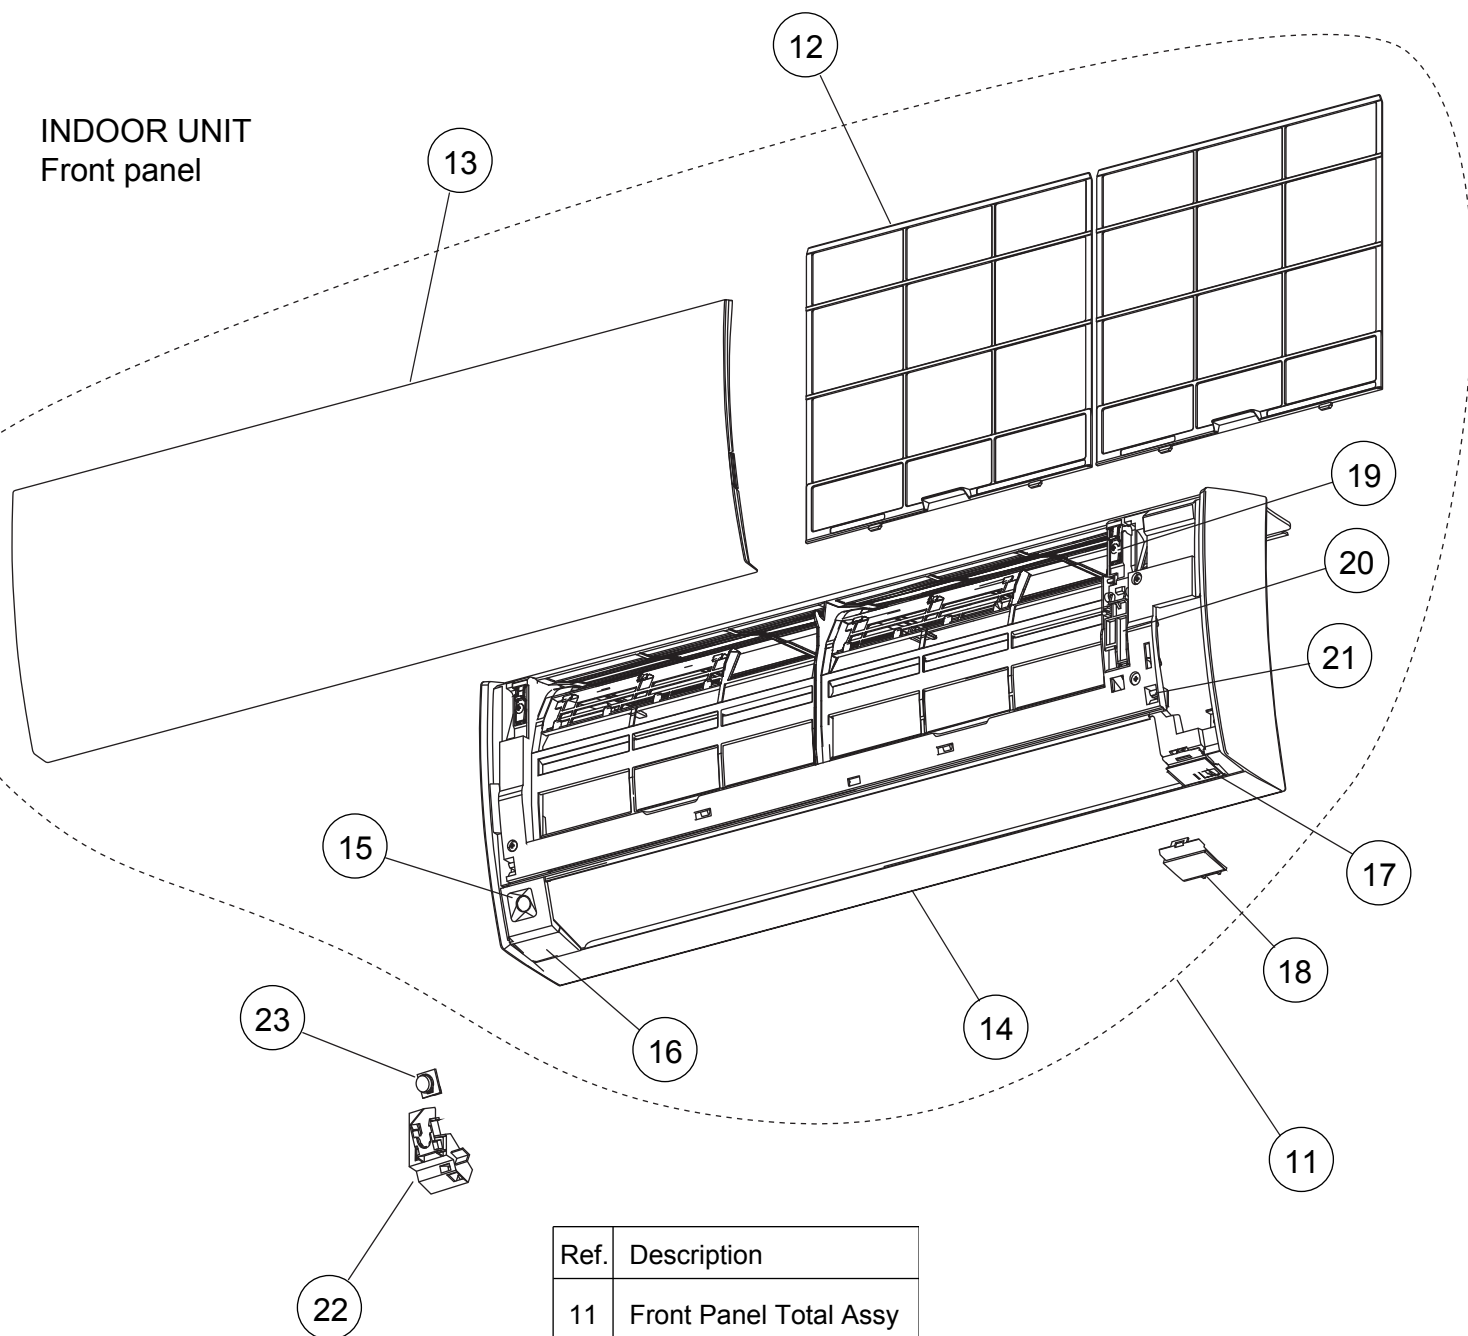


Ref.	Description
11	Front Panel Total Assy
12	Air Filter
13	Intake Grille Assy
14	Front Panel
15	Front Panel Cover T
16	Display Plate Holder L
17	Display Plate Holder R
18	Display Plate R
19	Arm Cover
20	Grille Stay
21	Grille Clasper B
22	Motion LED Display Case
23	Pyroelectric Sensor

INDOOR UNIT
Evaporator

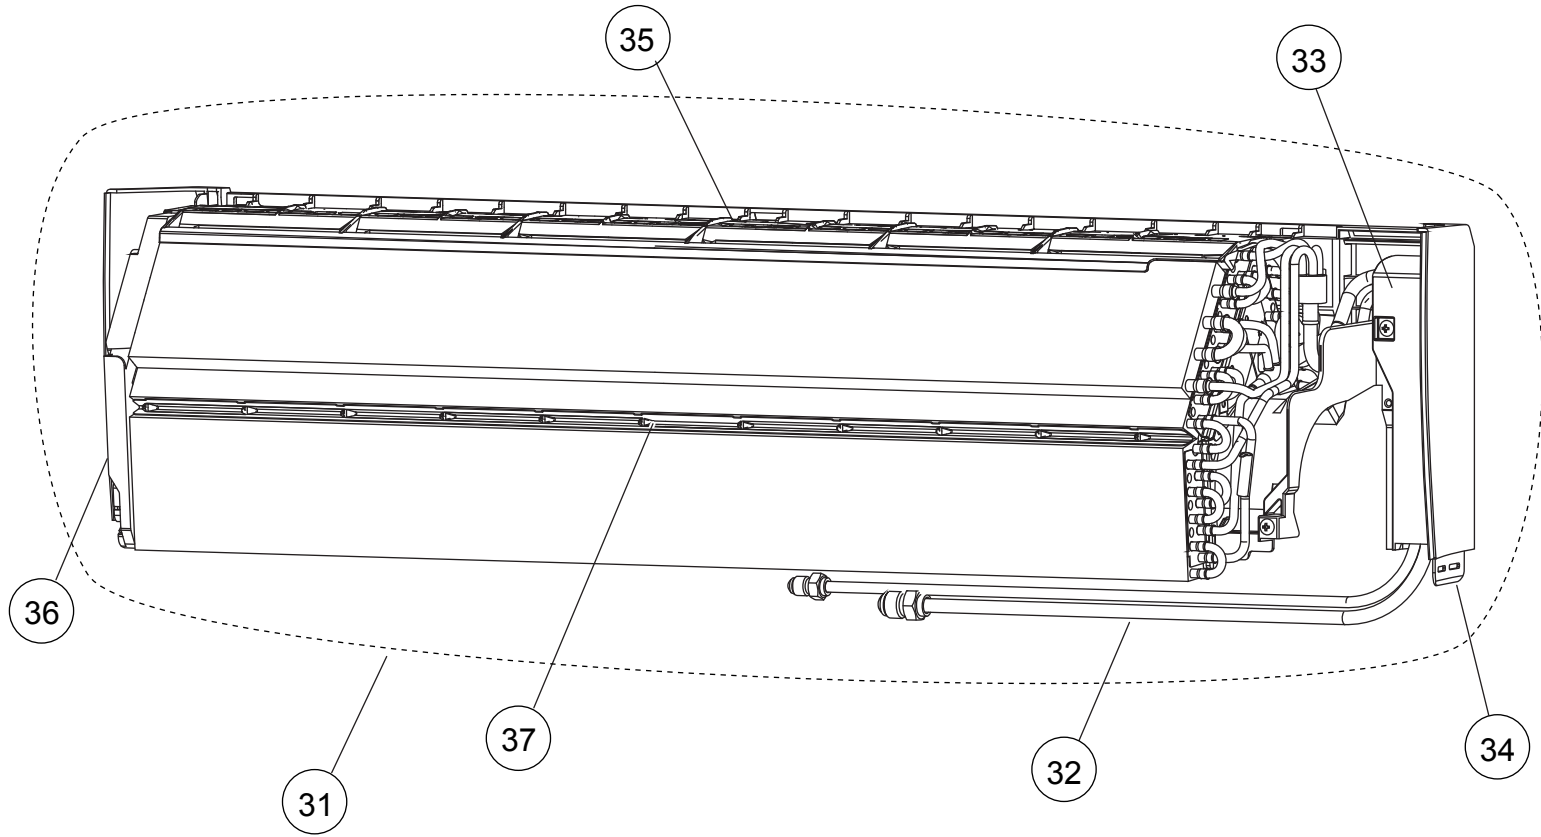


Ref.	Description
31	Evaporator Total Assy
32	Joint Pipe Assy
33	Joint Pipe Holder
34	Base
35	Filter Guide
36	Evaporator Holder L
37	Air Seal

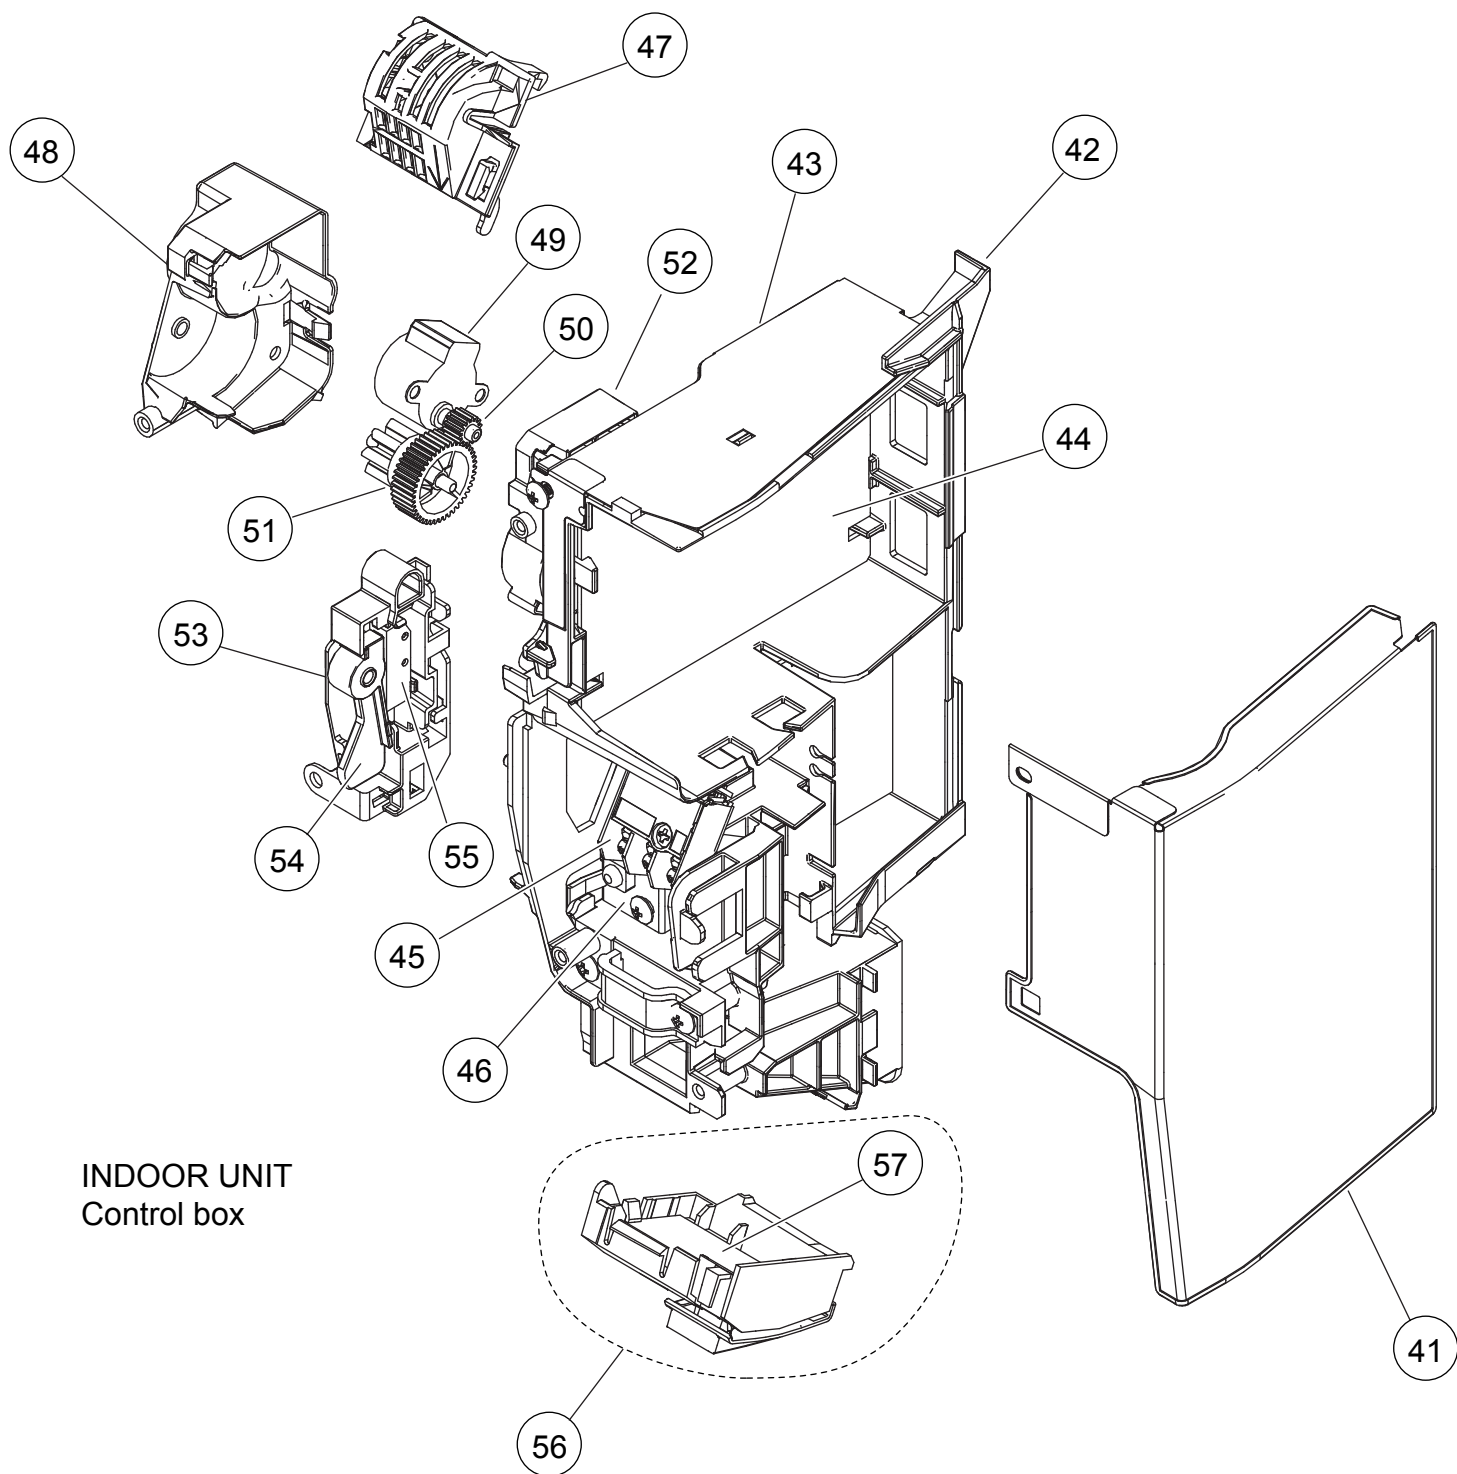

Ref.	Description
41	Cover Shield A
42	Control Box
43	Box Shield Assy
44	Main PCB
45	Terminal
46	Earth Terminal
47	Room Thermistor Holder
48	Gear Cover
49	Step Motor

Ref.	Description
50	Gear B
51	Panel Gear
52	Gear Case
53	Switch Case
54	Grille Key Top
55	Micro Switch
56	Display Assy
57	Display PCB
--	Thermistor Assy

INDOOR UNIT
Casing assy

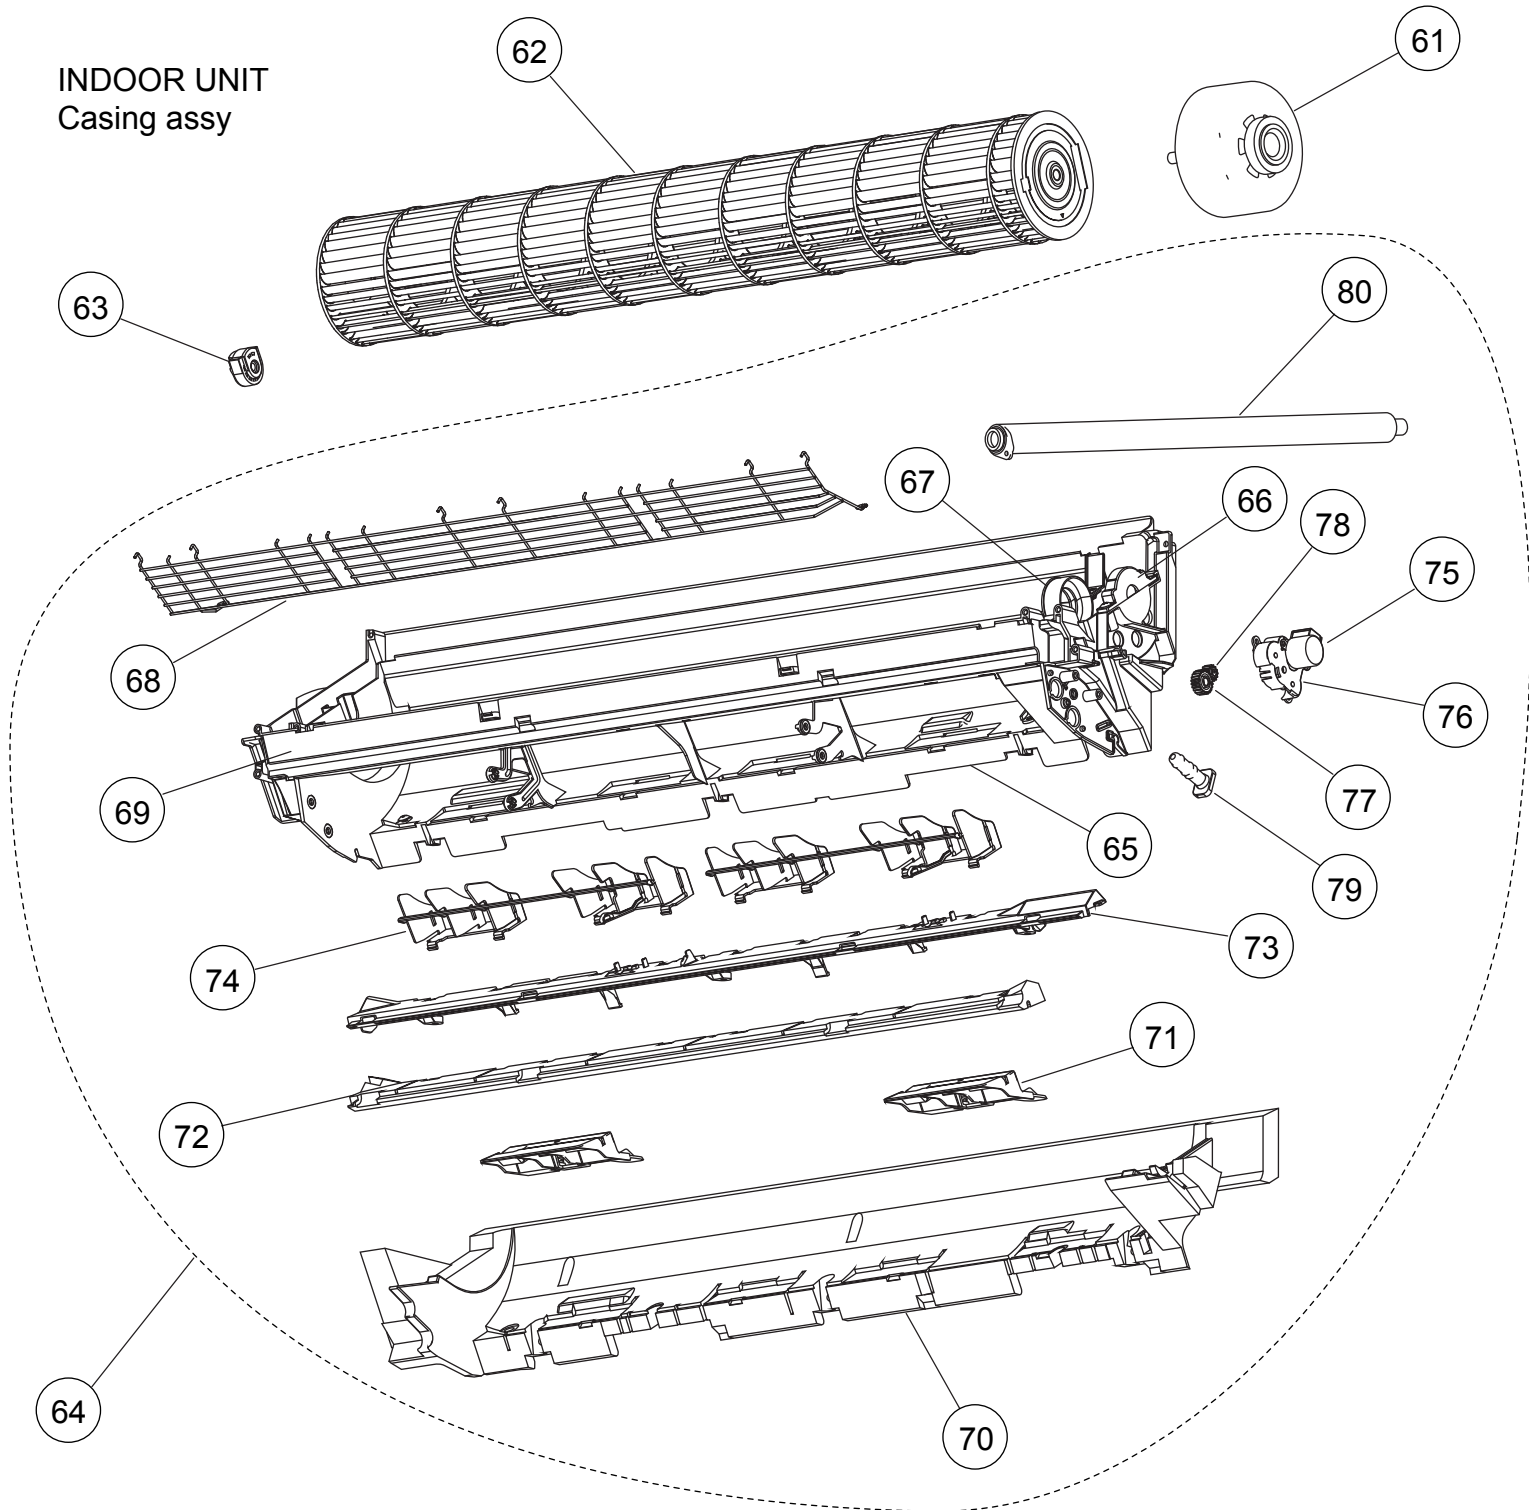

Ref.	Description
61	Fan Motor
62	Crossflow Fan Assy
63	Bearing C Assy
64	Casing Assy
65	Casing
66	Motor Cover
67	Motor Cover
68	Fan Guard
69	Casing Cover F
70	Casing Cover B

Ref.	Description
71	Pipe Bracket
72	Panel Cover
73	Louver Holder
74	R and L Louver
75	Motor Step
76	Louver Gear Holder
77	Louver Gear
78	Gear A
79	Drain Cap
80	Drain Hose Assy