

SPLIT TYPE
ROOM AIR CONDITIONER
WALL MOUNTED TYPE

SERVICE MANUAL



Indoor unit


ASTG09LVCA

ASTG12LVCA


ASTG18LVCA

PARTS


INDOOR UNIT

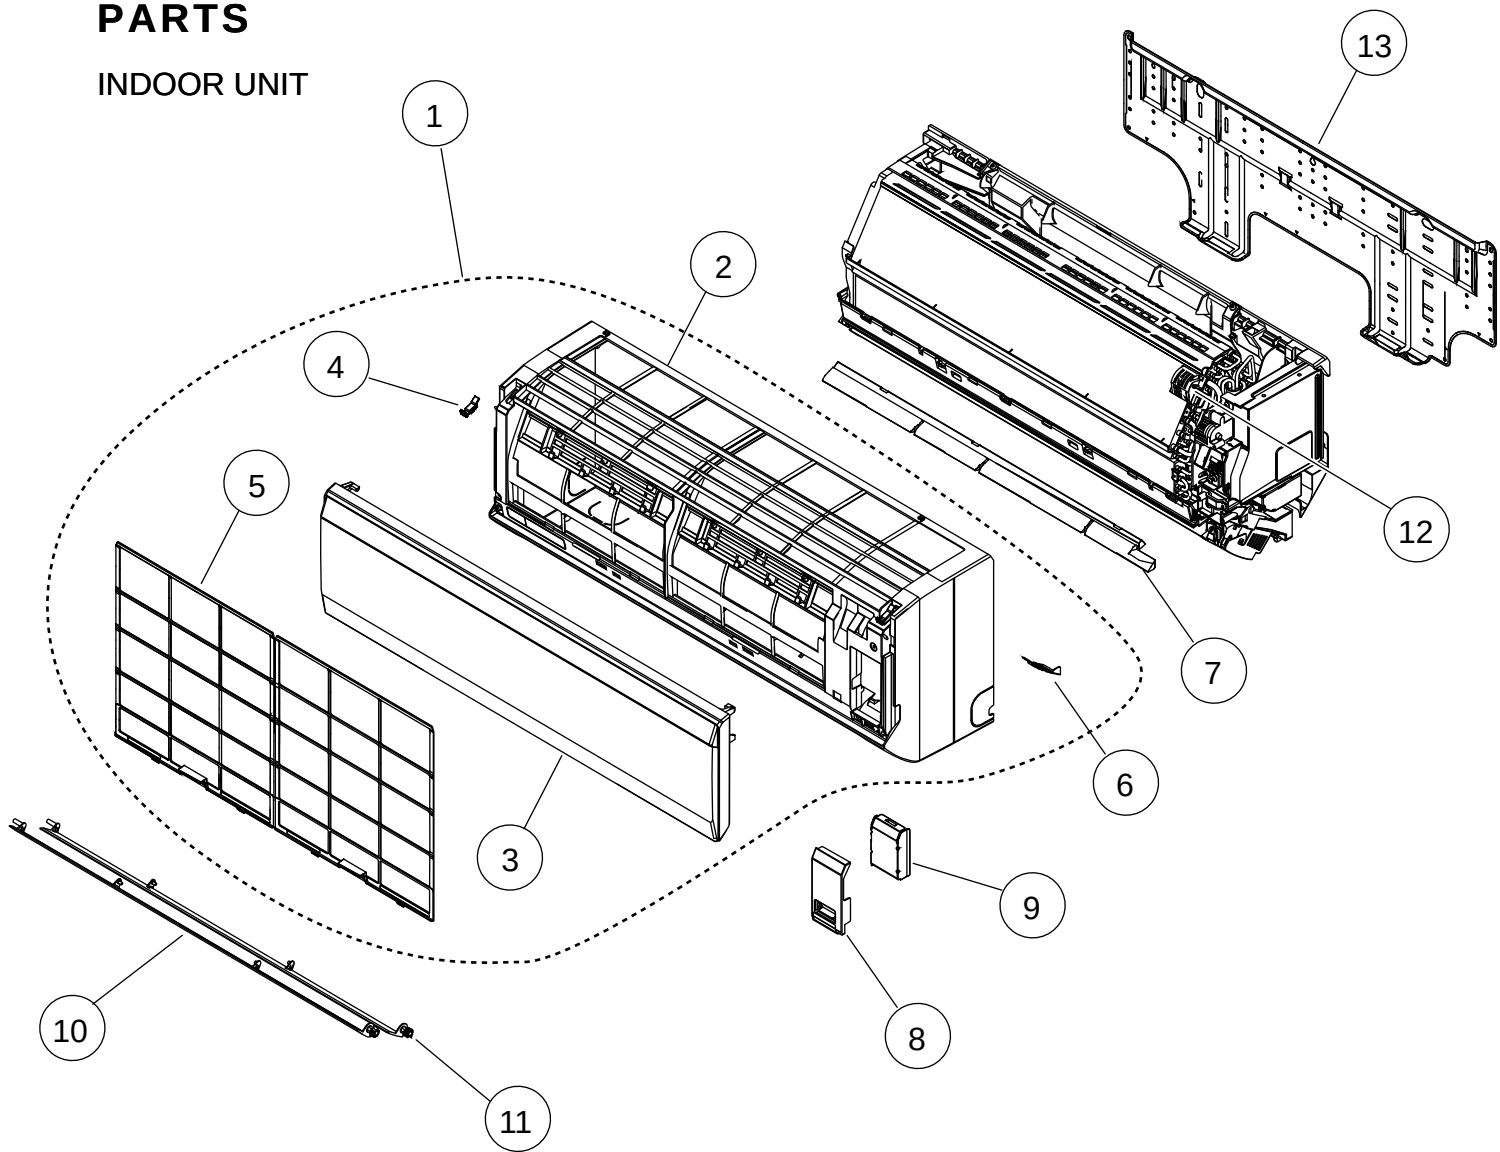


Ref	Description
1	Front Panel Total Assy
2	Front Panel
3	Intake Grille Assy
4	Clamper Grille
5	Air Filter
6	Receiver Window
7	Panel Cover
8	Wire Cover
9	Wire Shield
10	Louver U
11	Louver Z
12	Room thermistor Holder
13	Bracket Panel
14	Remote Control
15	Remote Control Holder
--	Air Clean Filter Assy

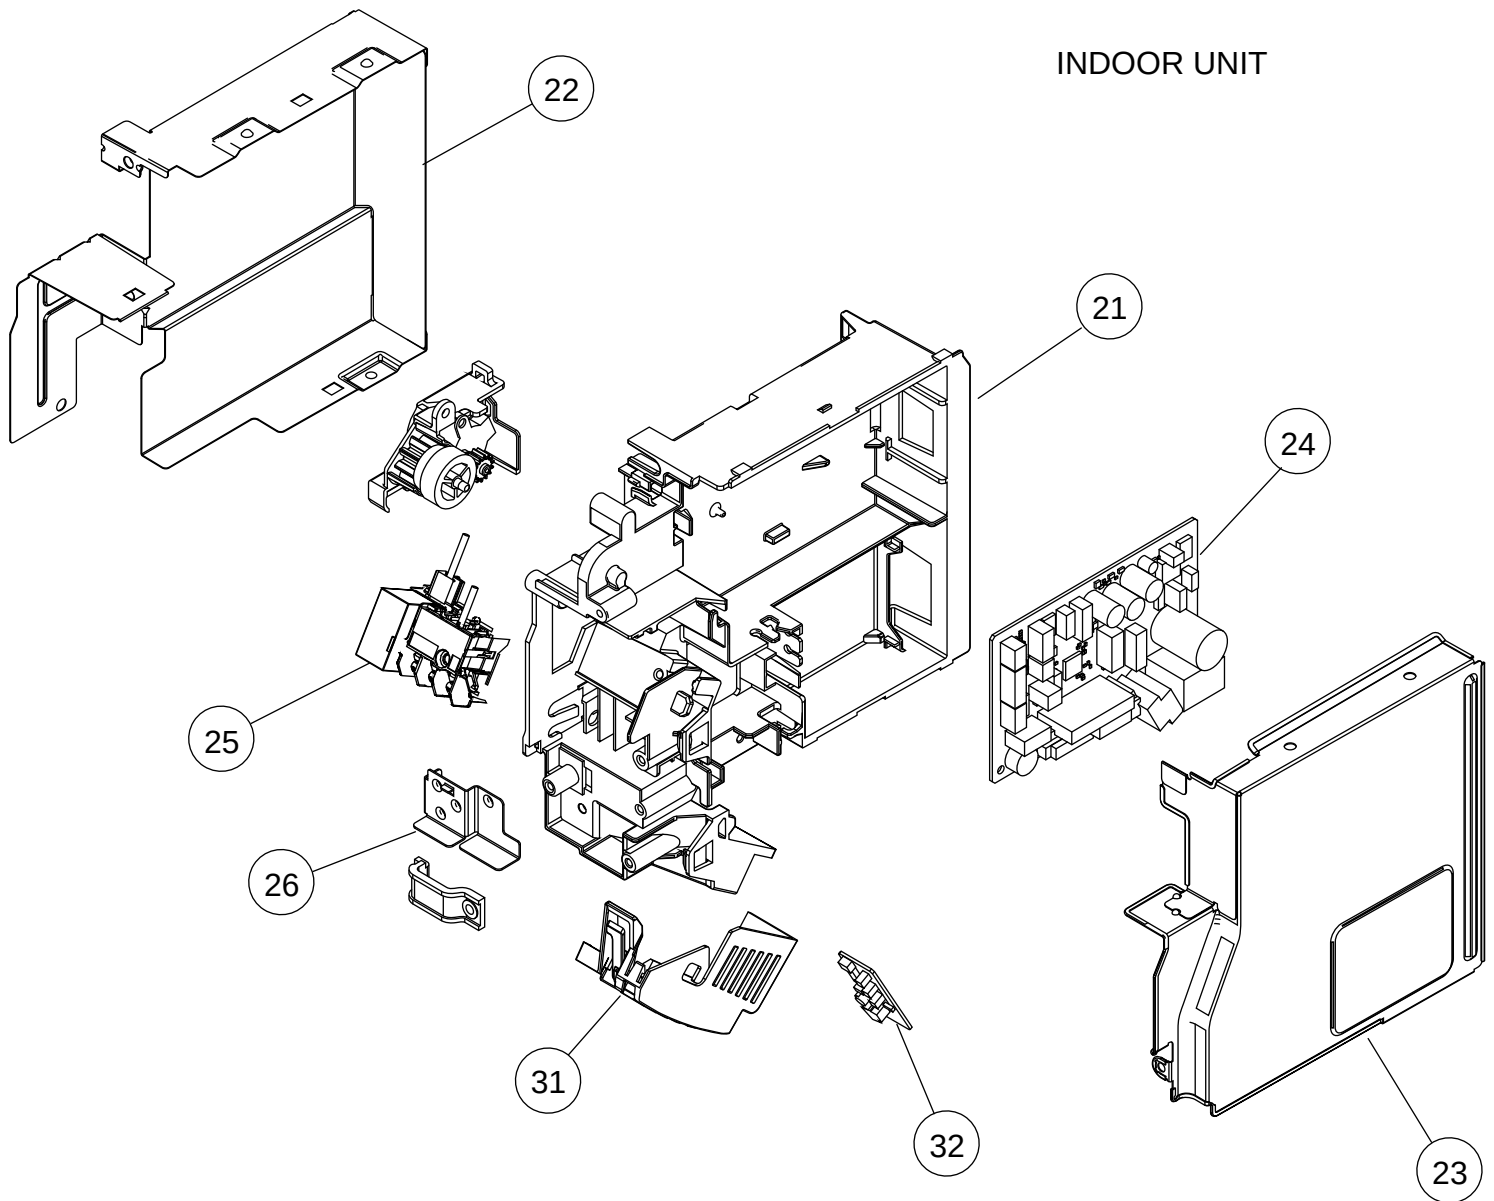

Ref	Description
21	Control Box
22	Box Shield Assy
23	Cover Shield
24	Controller PCB Assy (09)
24	Controller PCB Assy (12)
24	Controller PCB Assy (18)
25	Terminal
26	Earth Terminal
27	Gear Cover
28	Step Motor
29	Panel Gear
30	Gear A
31	Display Case
32	Display PCB Assy
--	Thermistor Assy

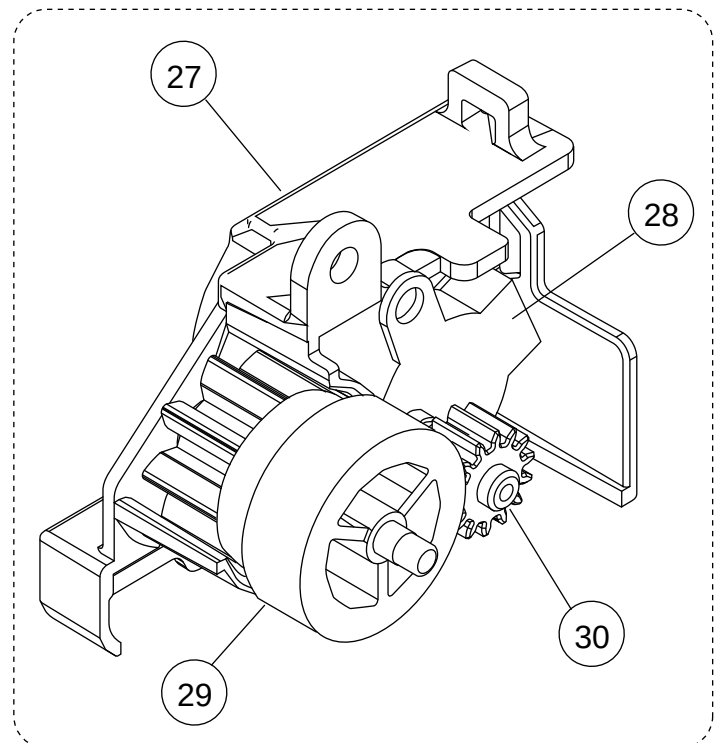


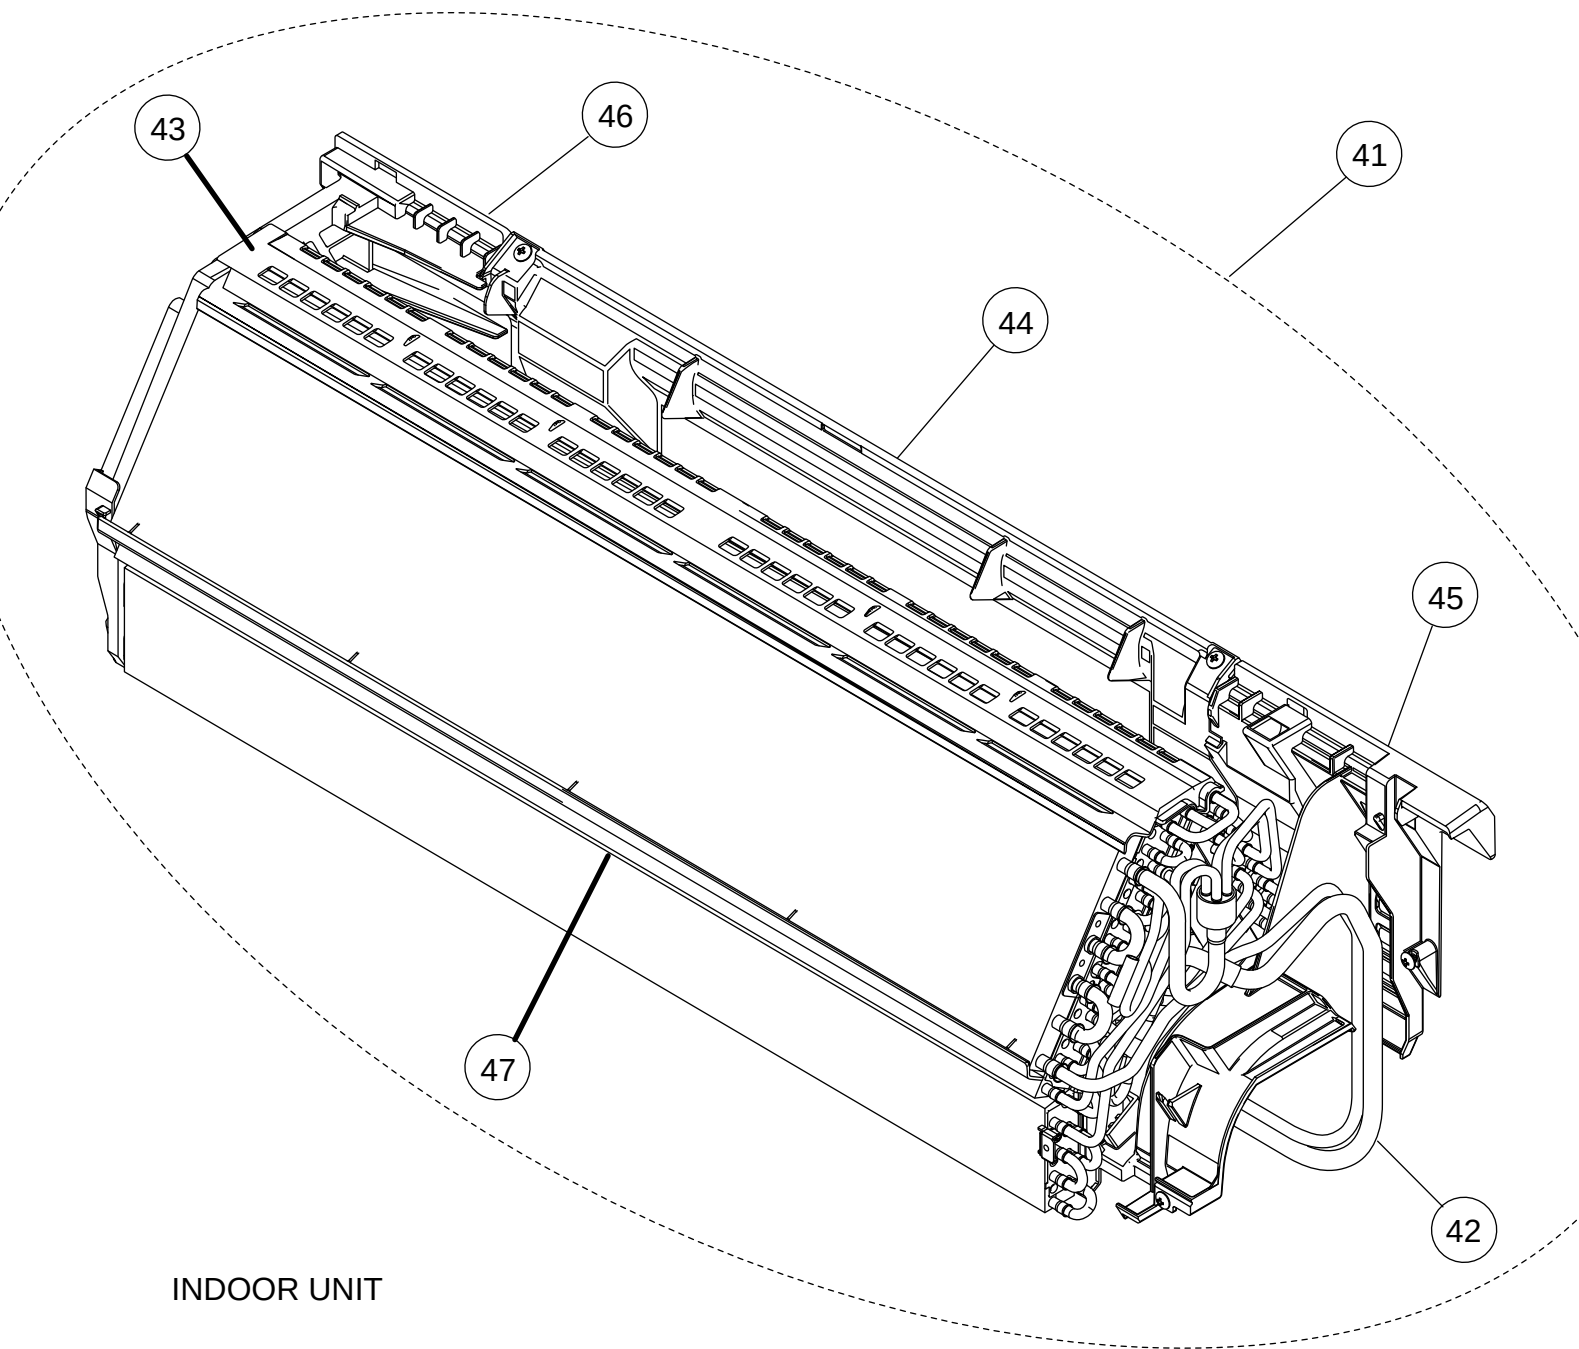

INDOOR UNIT



Ref	Description
41	Evaporator Total Assy (09, 12)
41	Evaporator Total Assy (18)
42	Joint Pipe Assy (09, 12)
42	Joint Pipe Assy (18)
43	Filter Guide
44	Rear Bracket
45	Evaporator Holder R
46	Evaporator Holder L
47	Water Seal B

INDOOR UNIT

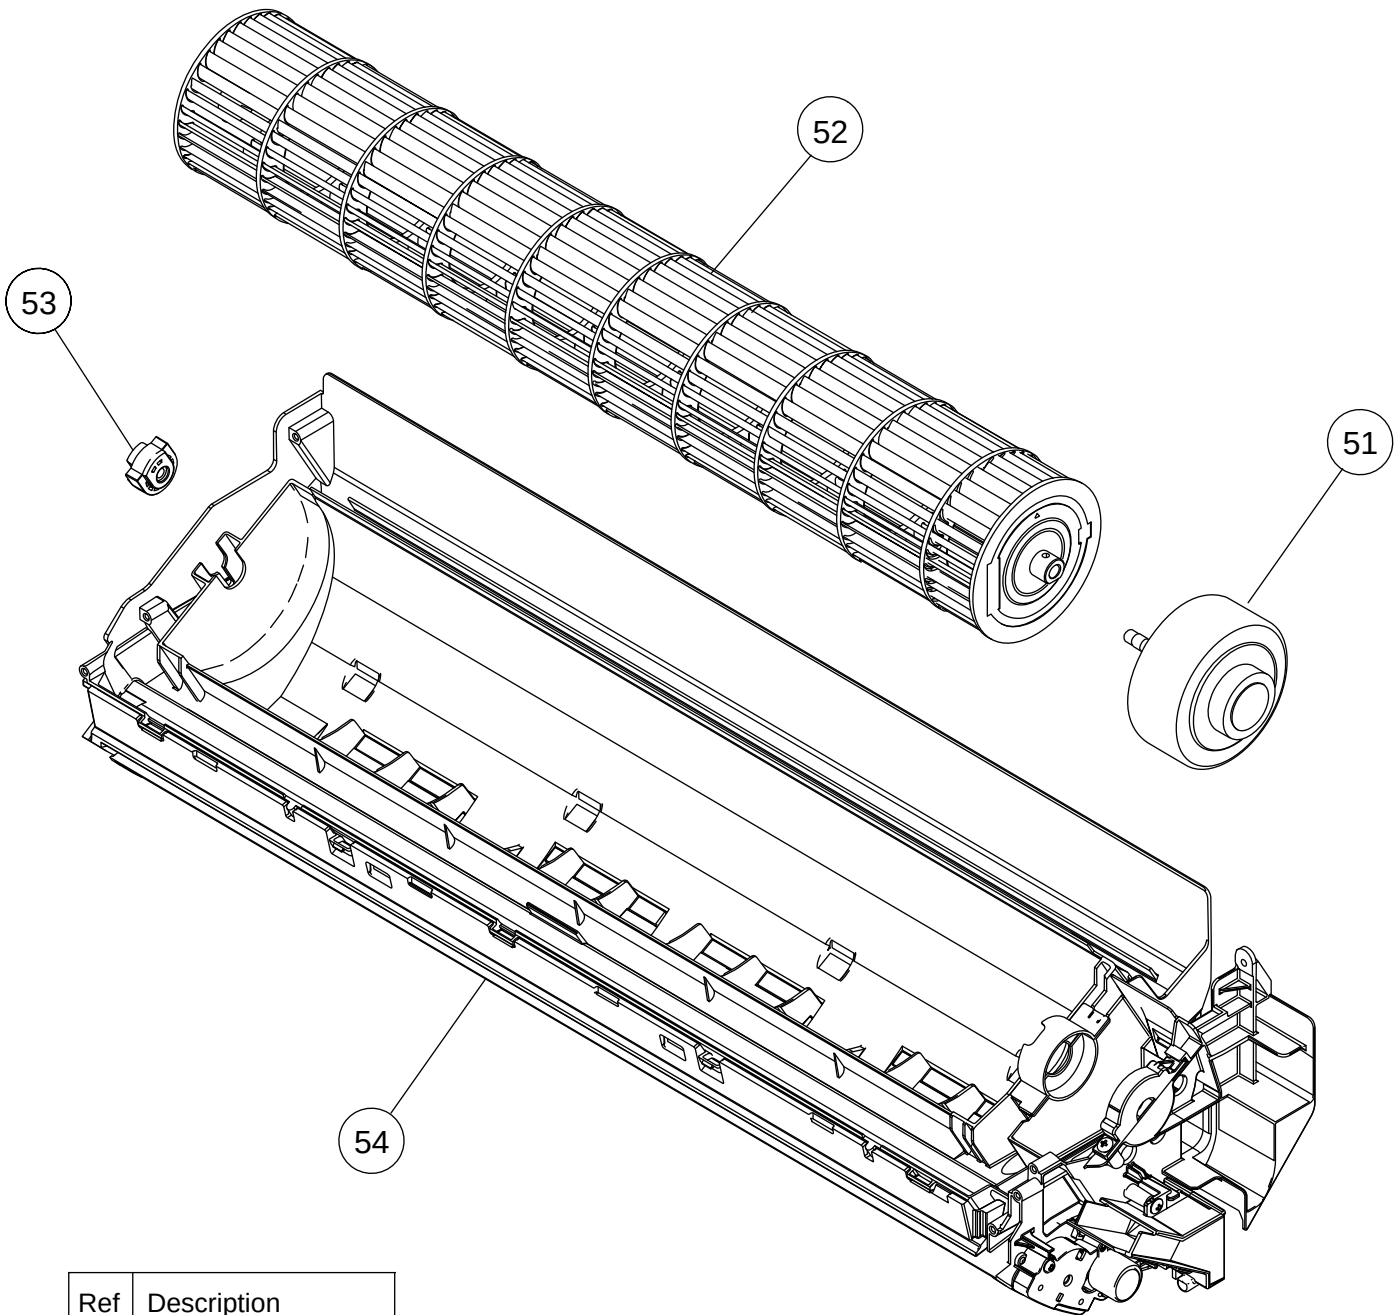

Ref	Description
51	Fan Motor
52	Crossflow Fan Assy
53	Bearing C Assy
54	Casing Assy





INDOOR UNIT
Casing assy

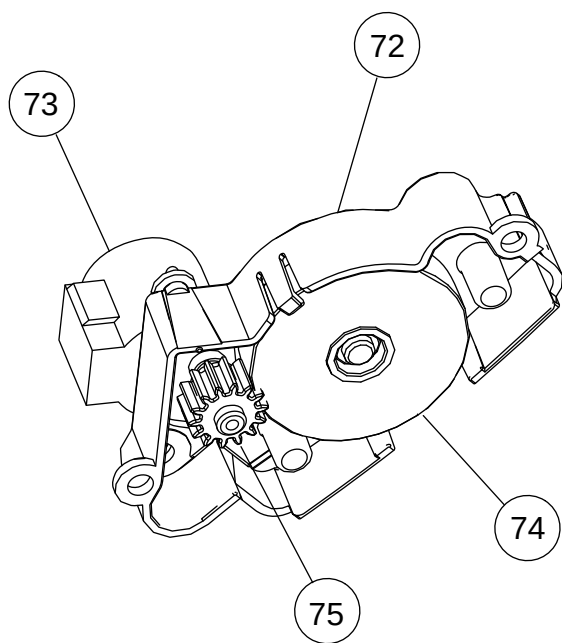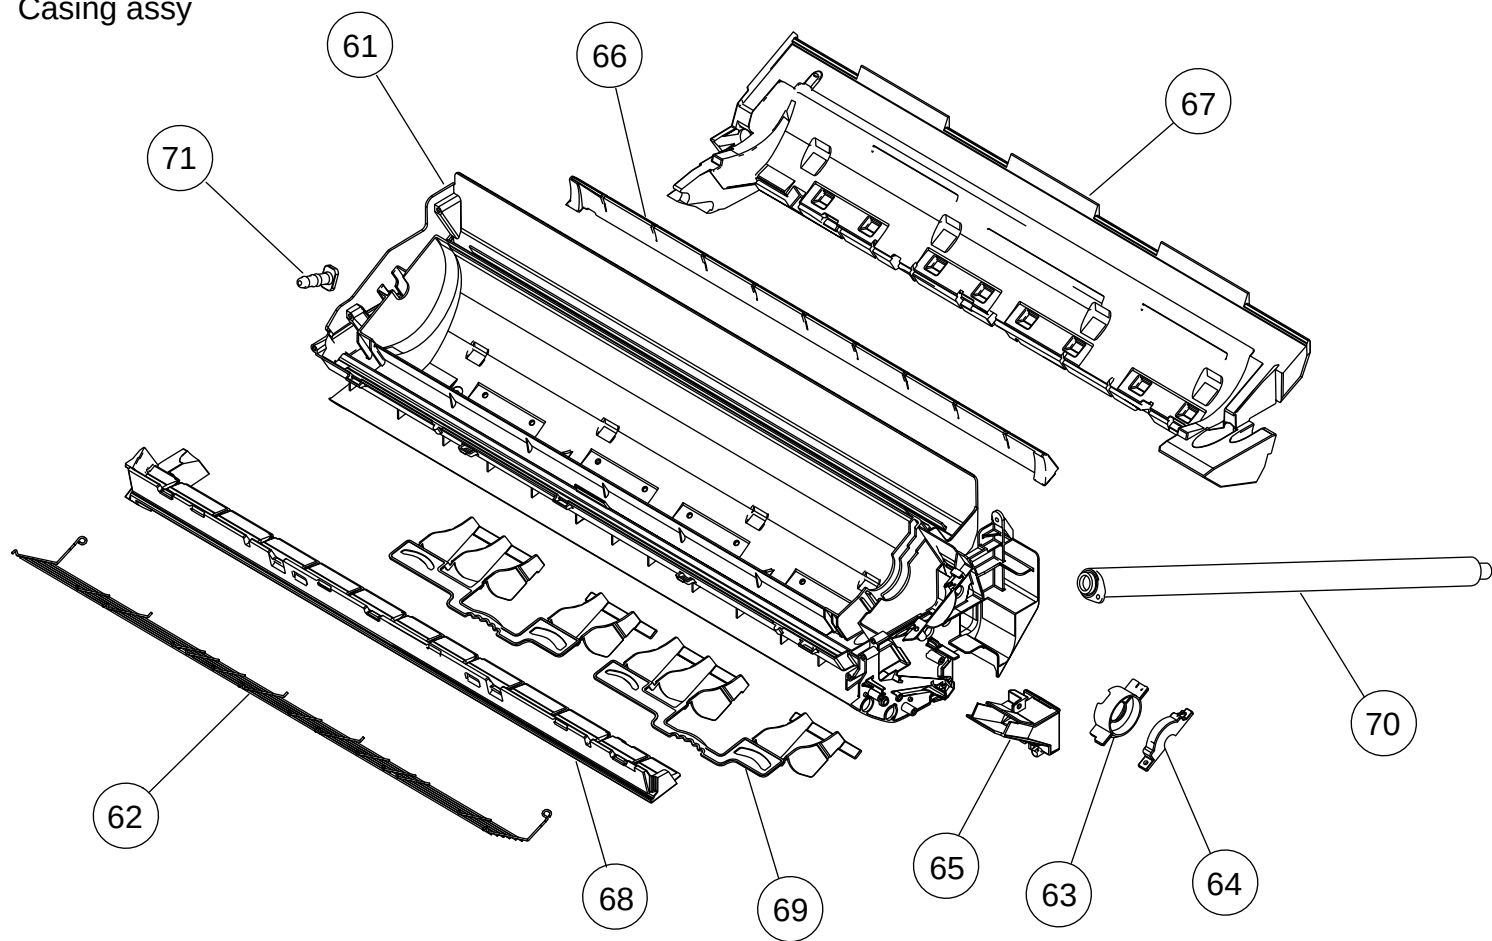

Ref	Description
61	Casing
62	Fan Guard
63	Motor Cover
64	Motor Cover
65	Cable Guide
66	Casing Cover U
67	Casing Cover B
68	Casing Cover F
69	R AND L Louver
70	Drain Hose Assy
71	Drain Cap
72	Louver Gear Holder
73	Motor Step
74	Louver Gear
75	Gear A

ACCESSORIES

   INDOOR UNIT

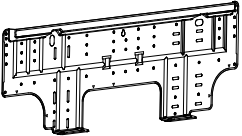Name and Shape	Q'ty
Wall hook bracket 	1
Remote control 	1
Battery 	2
Remote control holder 	1
Cloth tape 	1
Tapping screw (big) 	8
Tapping screw (small) 	2
Air cleaning filter 	2

1008G3828