




Single Wall Oven General Assembly Diagram

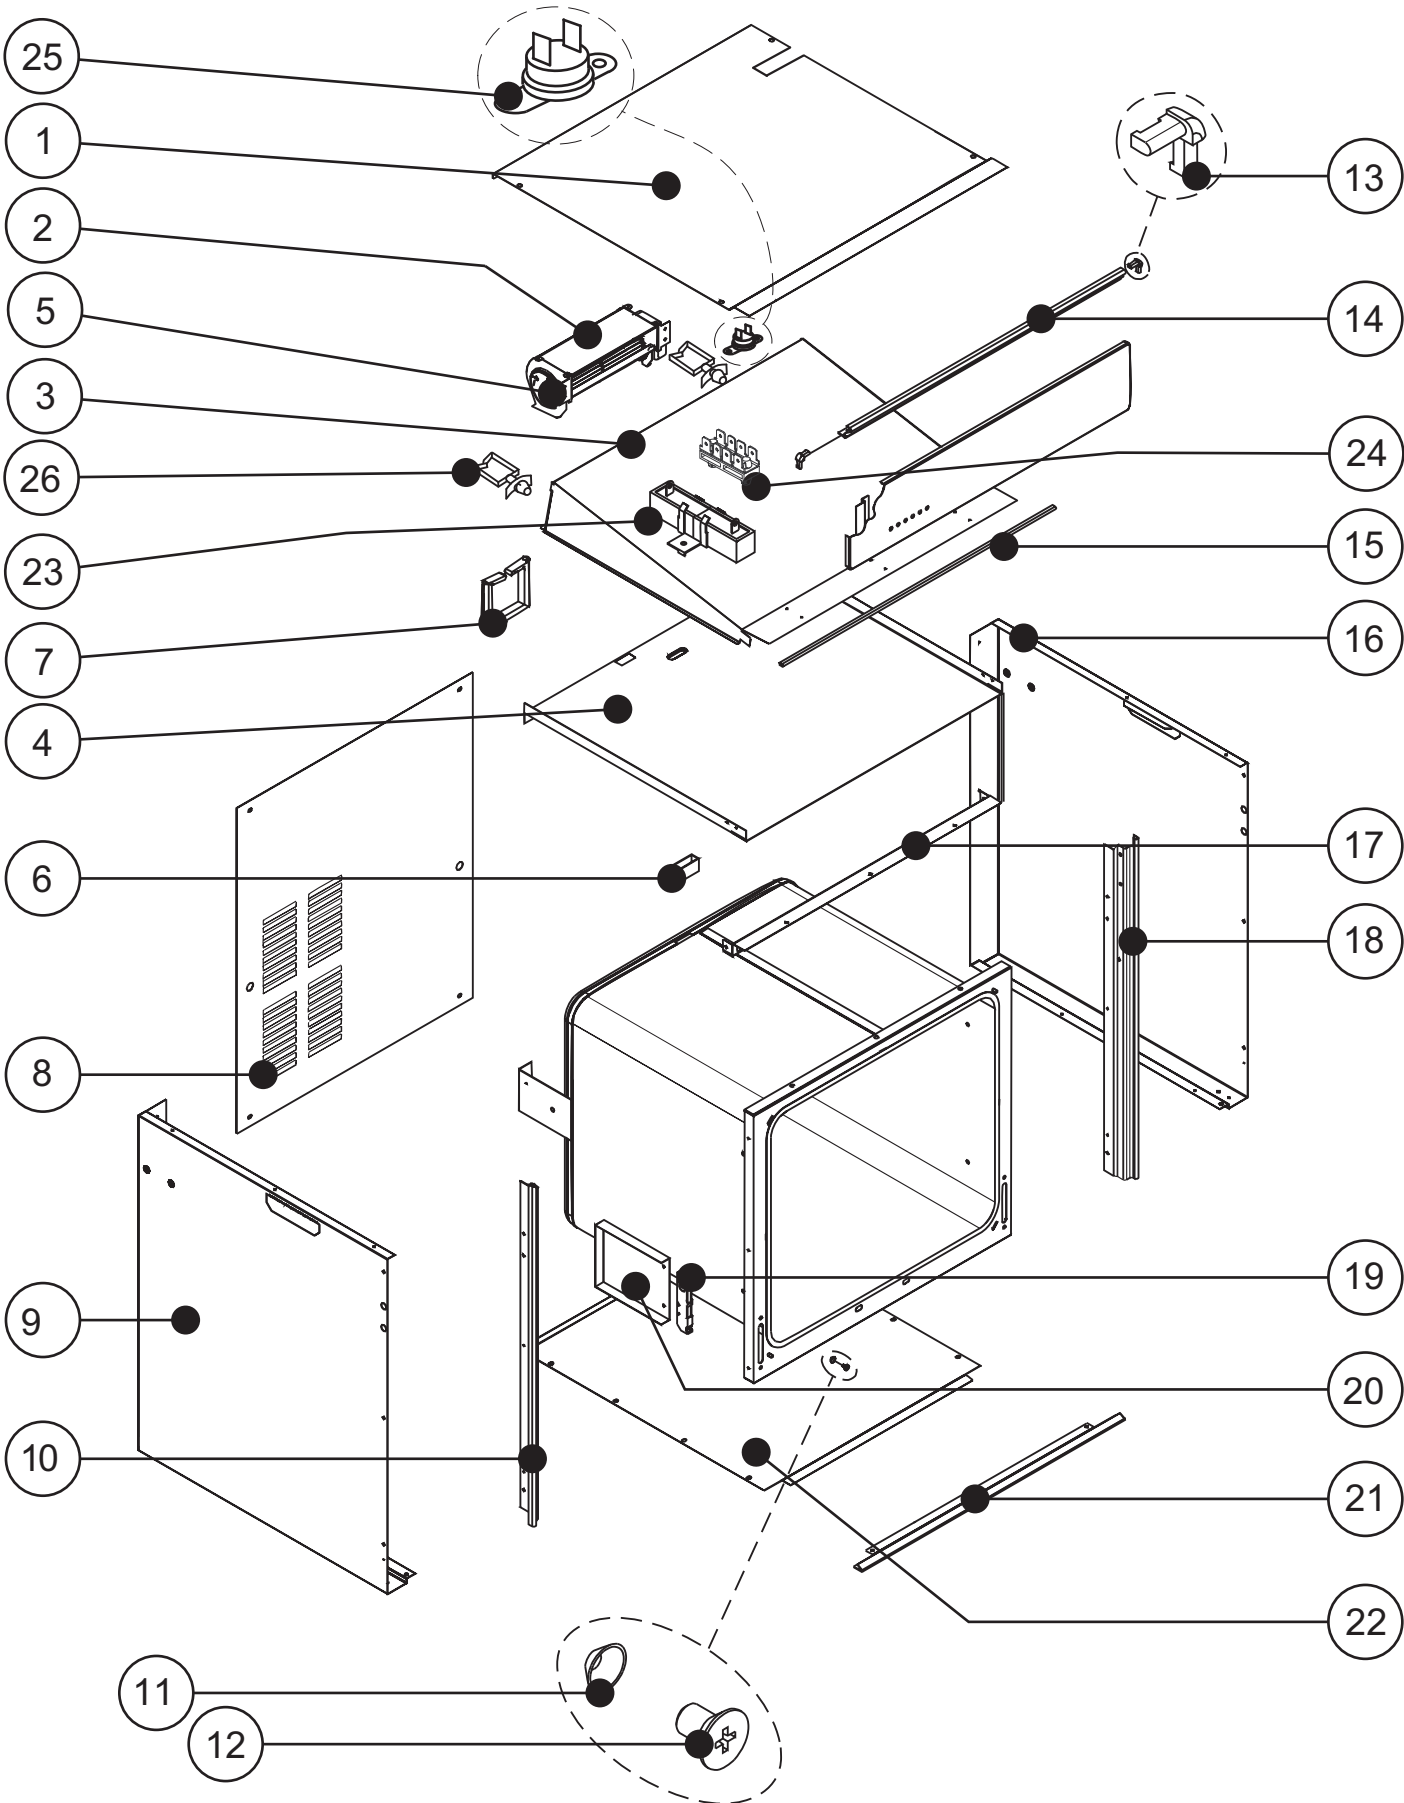

Double Wall Oven General Assembly Diagram

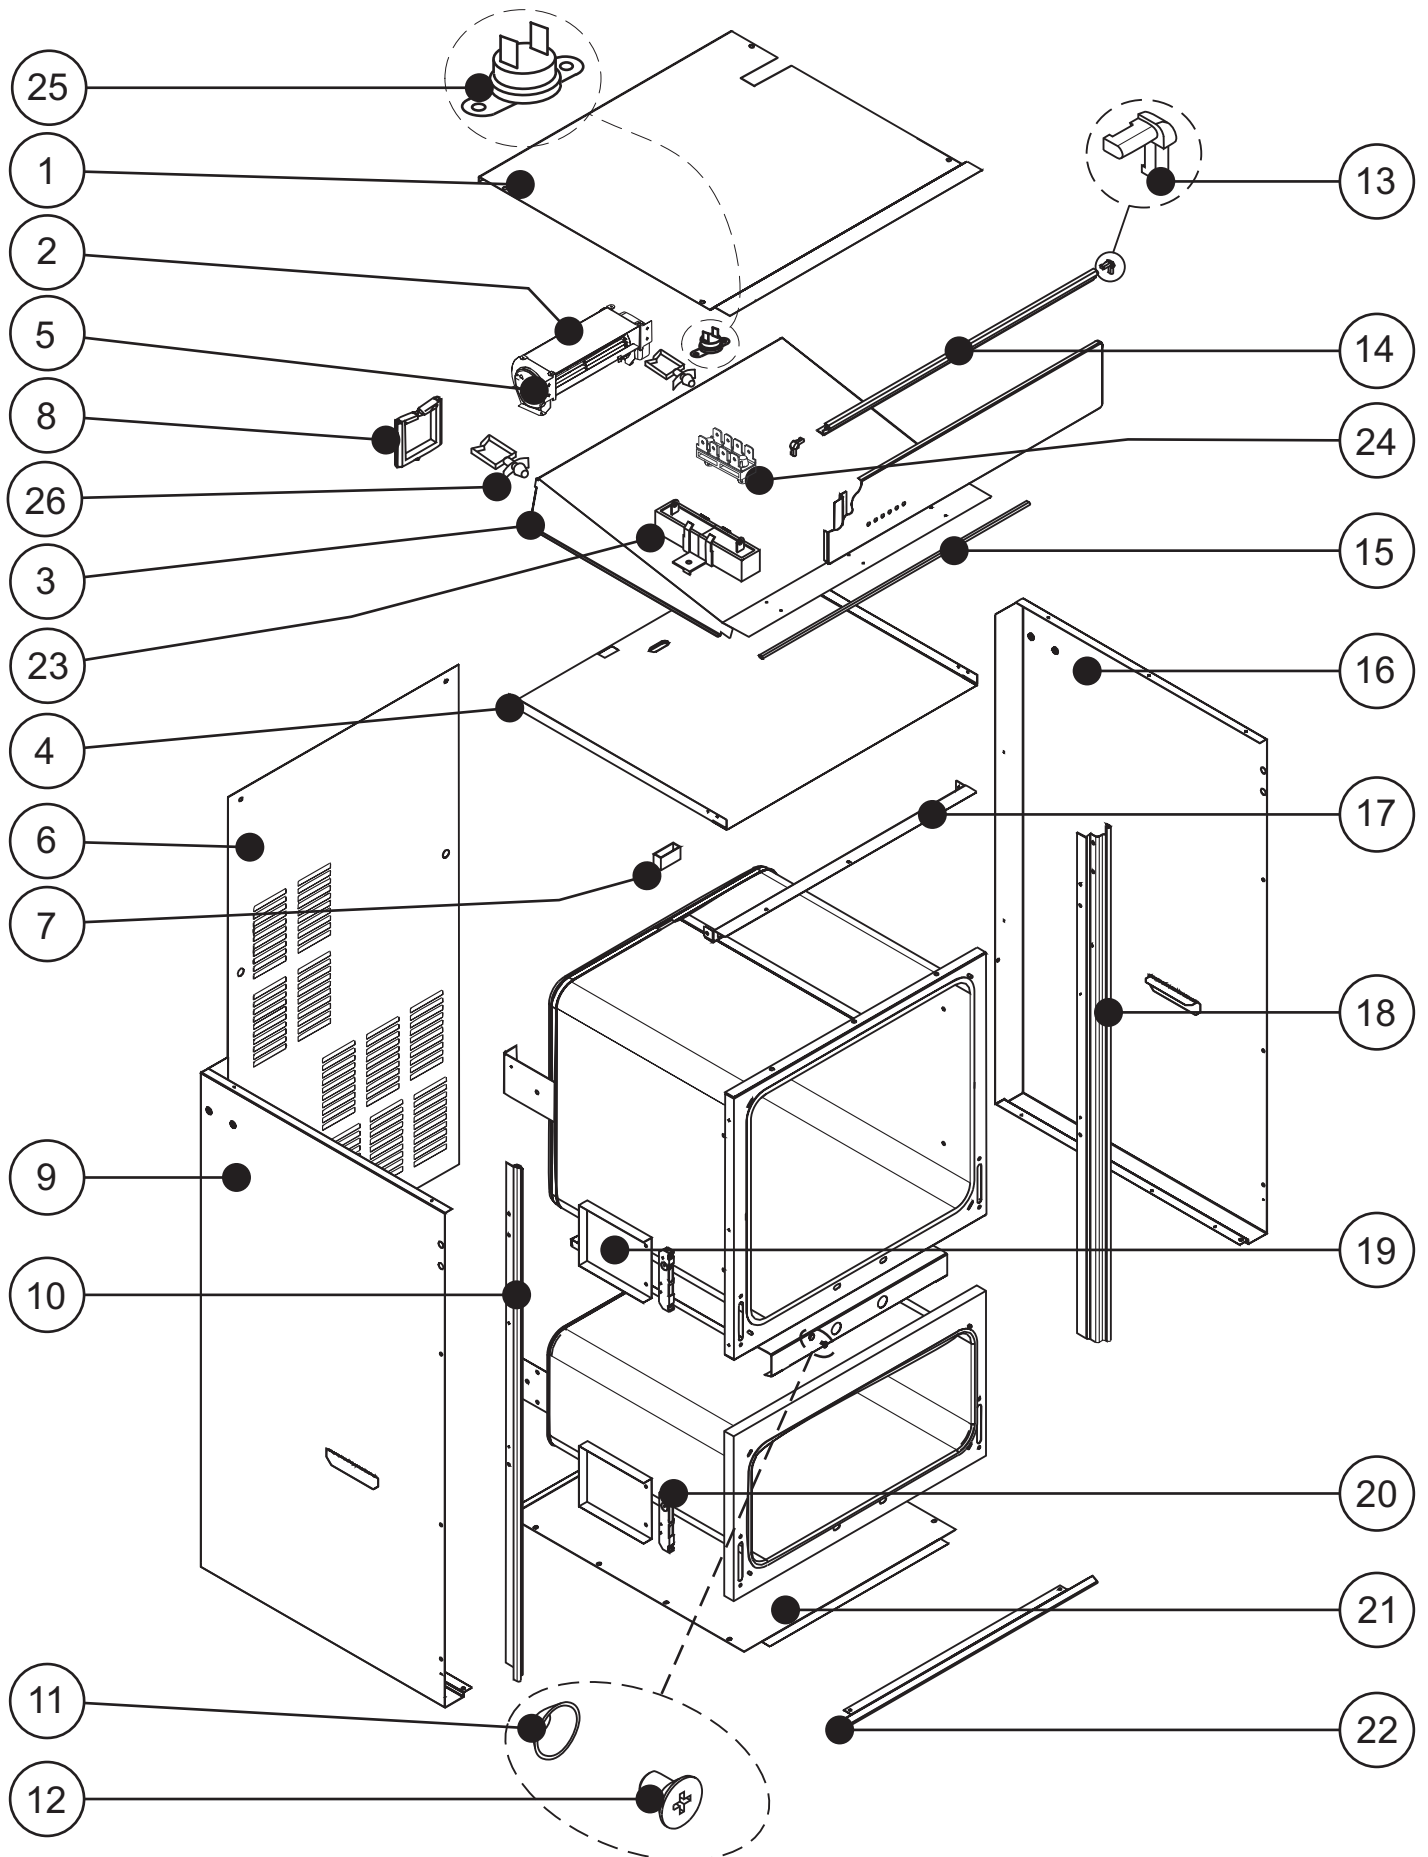


Oven Assembly; Main Oven

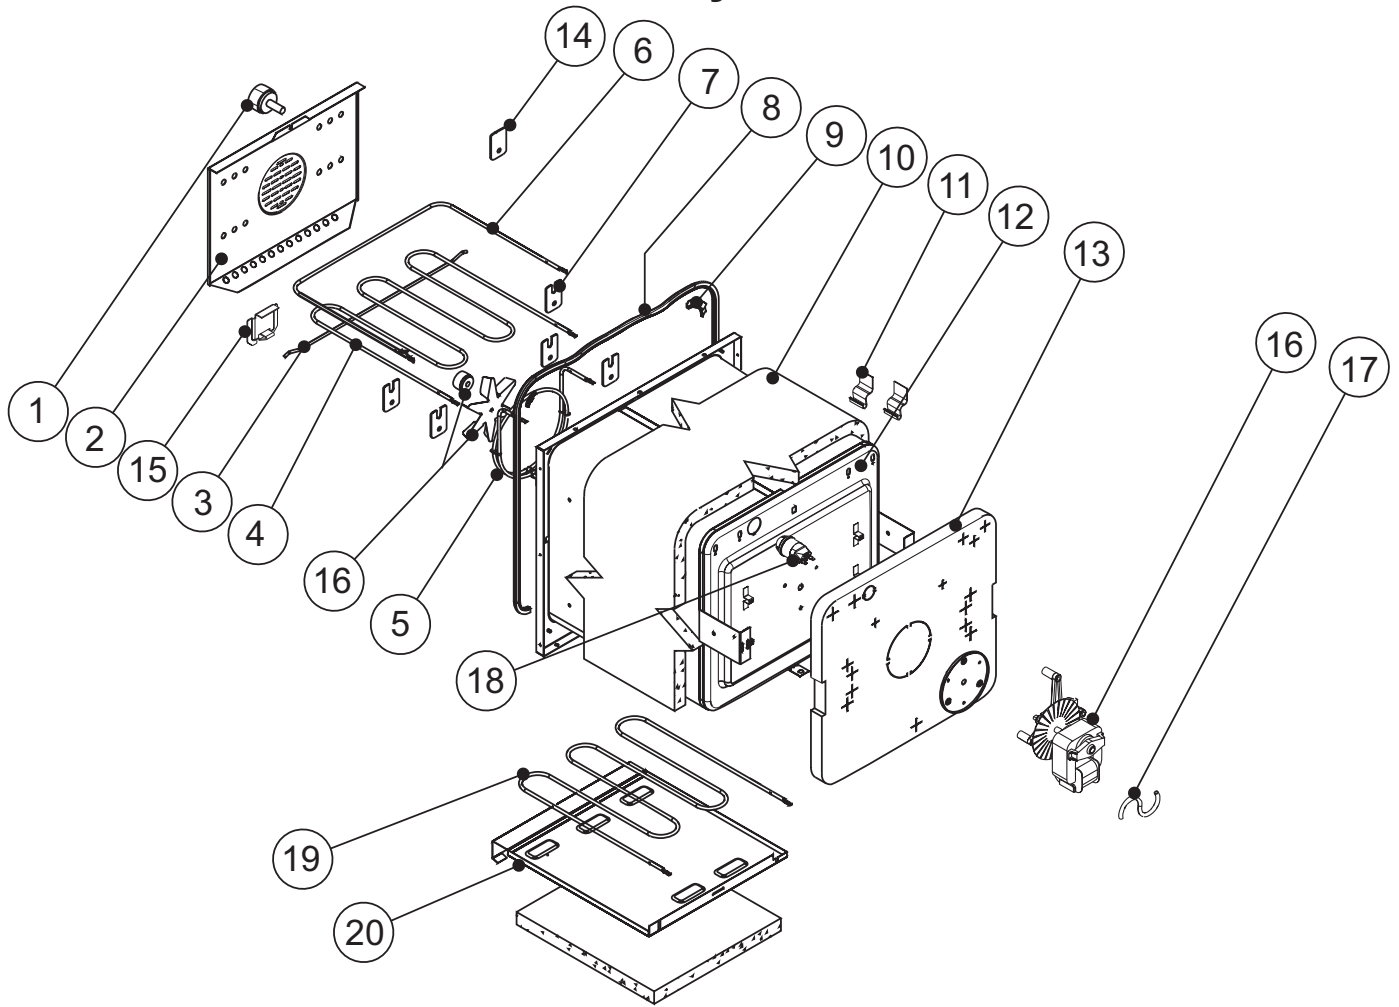


& ES5372 - 15 Watt (Optional)


Oven Assembly; 2nd Oven

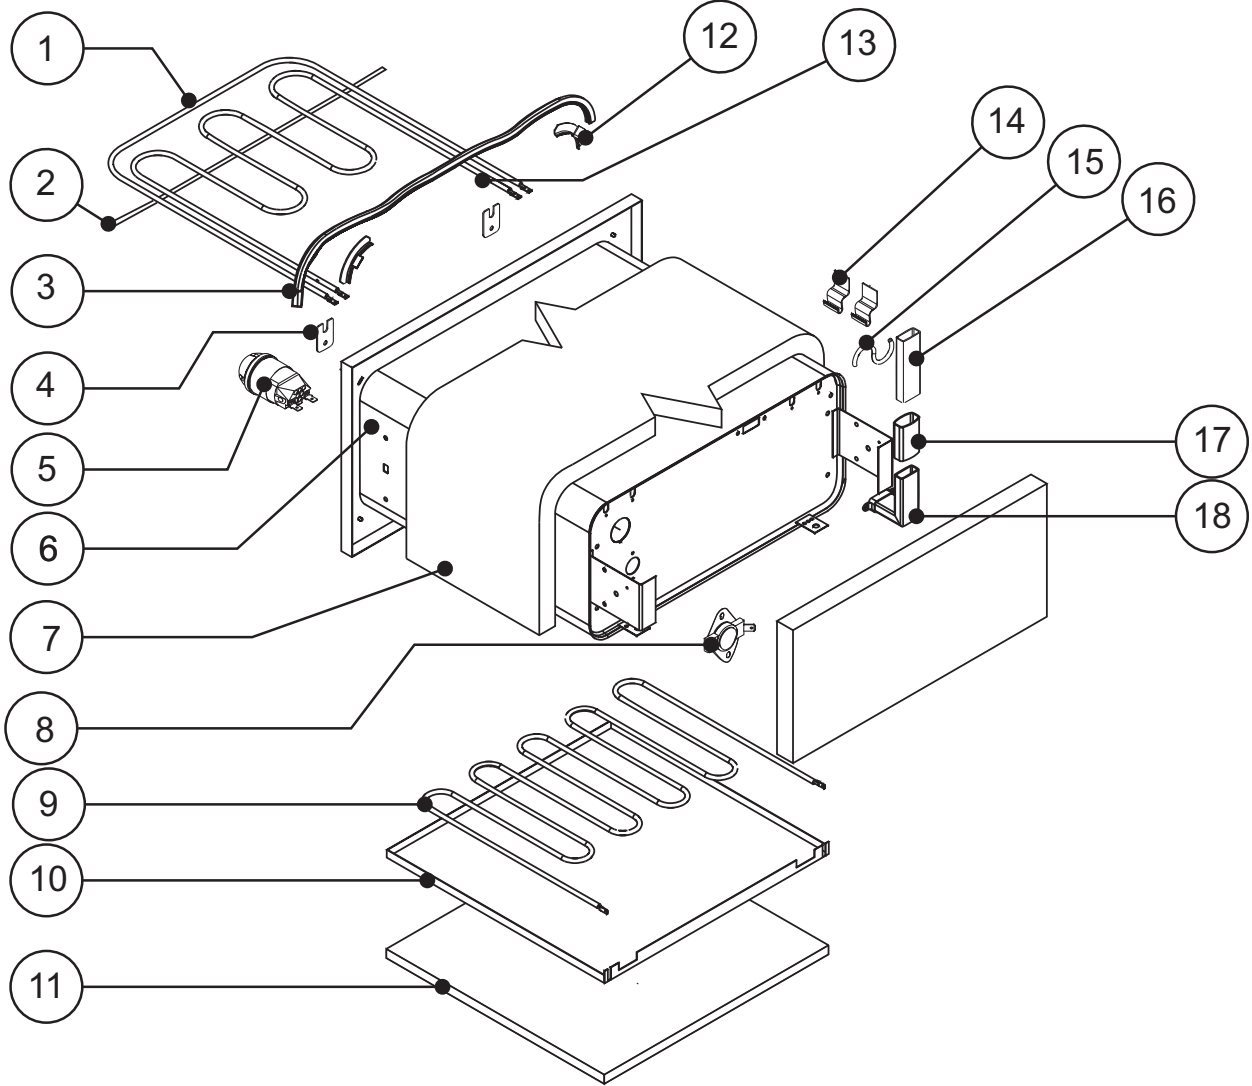

Switch Panel Assembly EW050

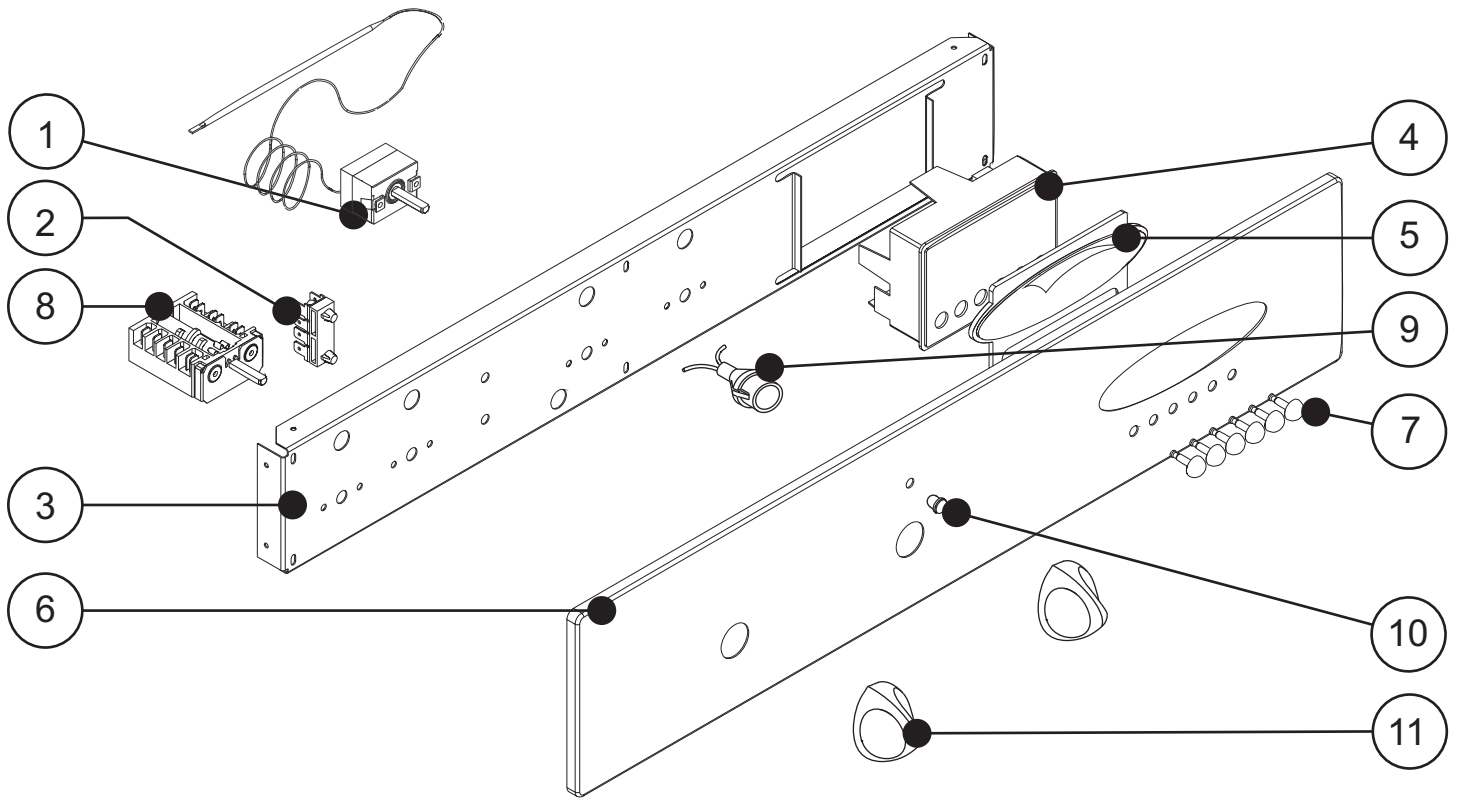


Switch Panel Assembly EW100

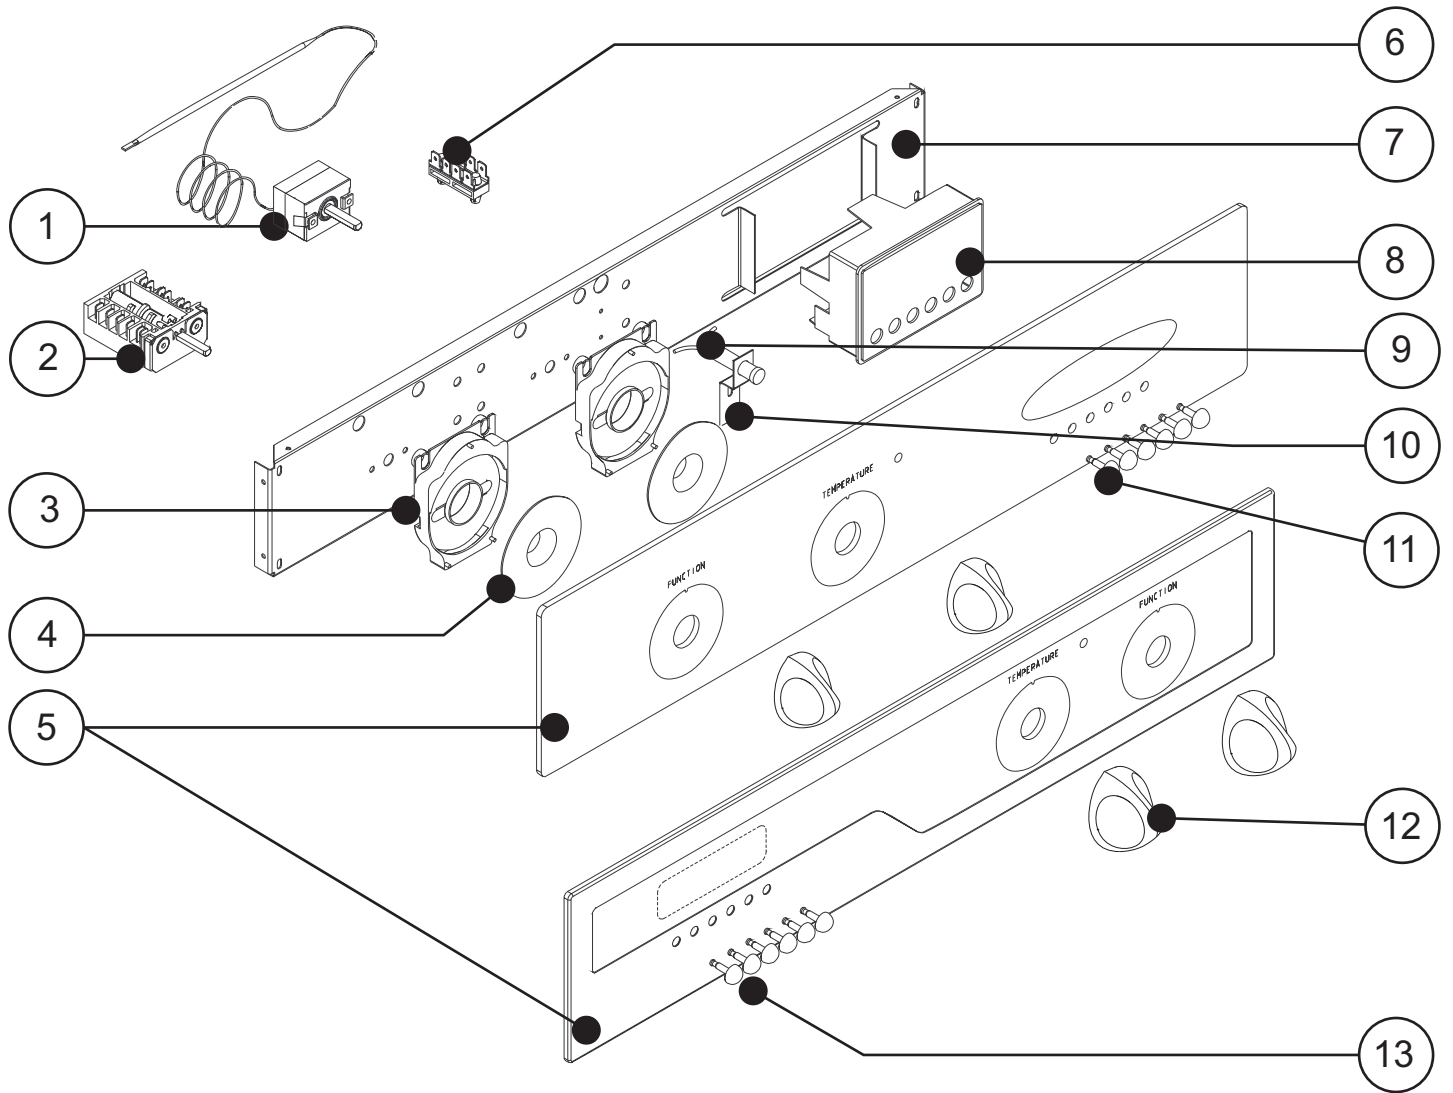


EW100SC


Switch Panel Assembly EW250

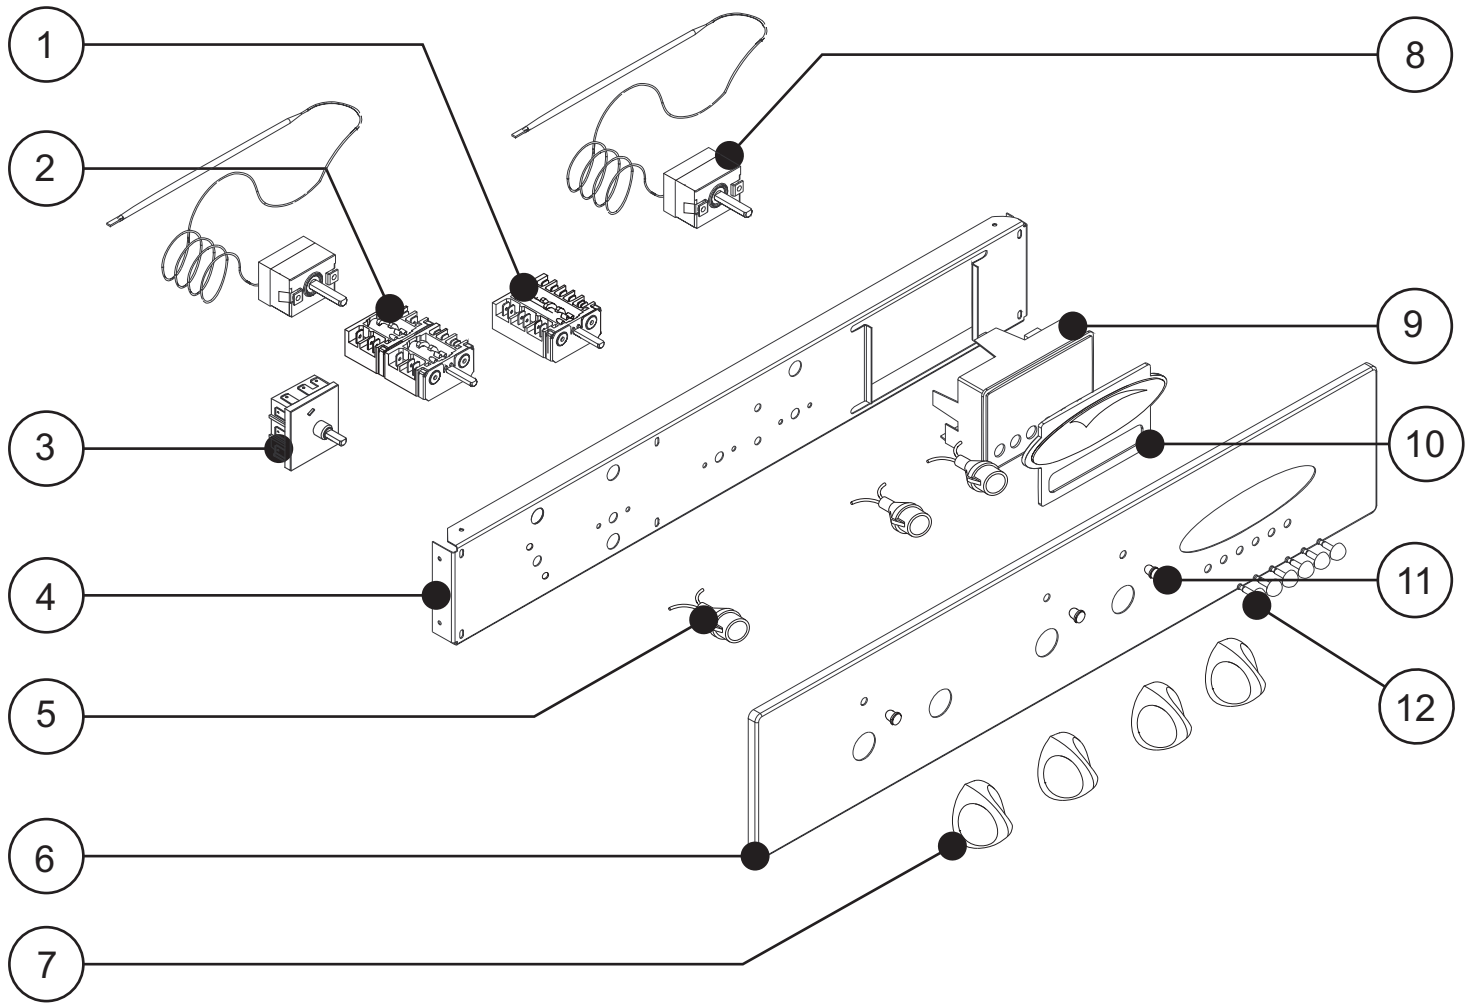


Switch Panel Assembly EW300SC

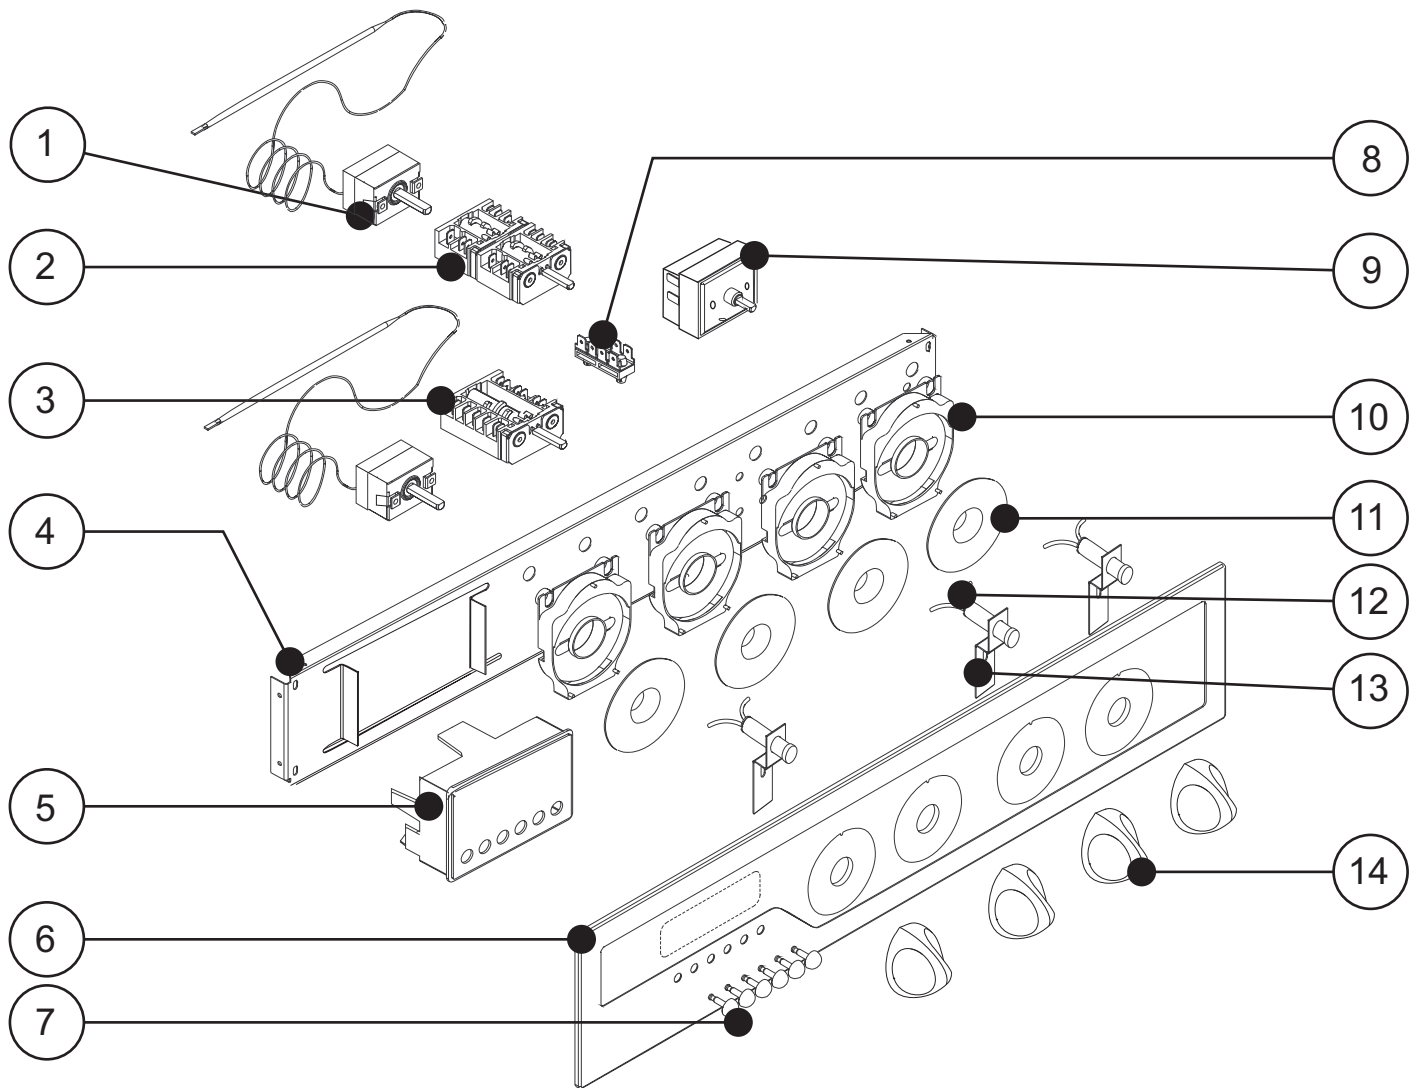

Door Assembly EW050,EW100,EW250 & EW300

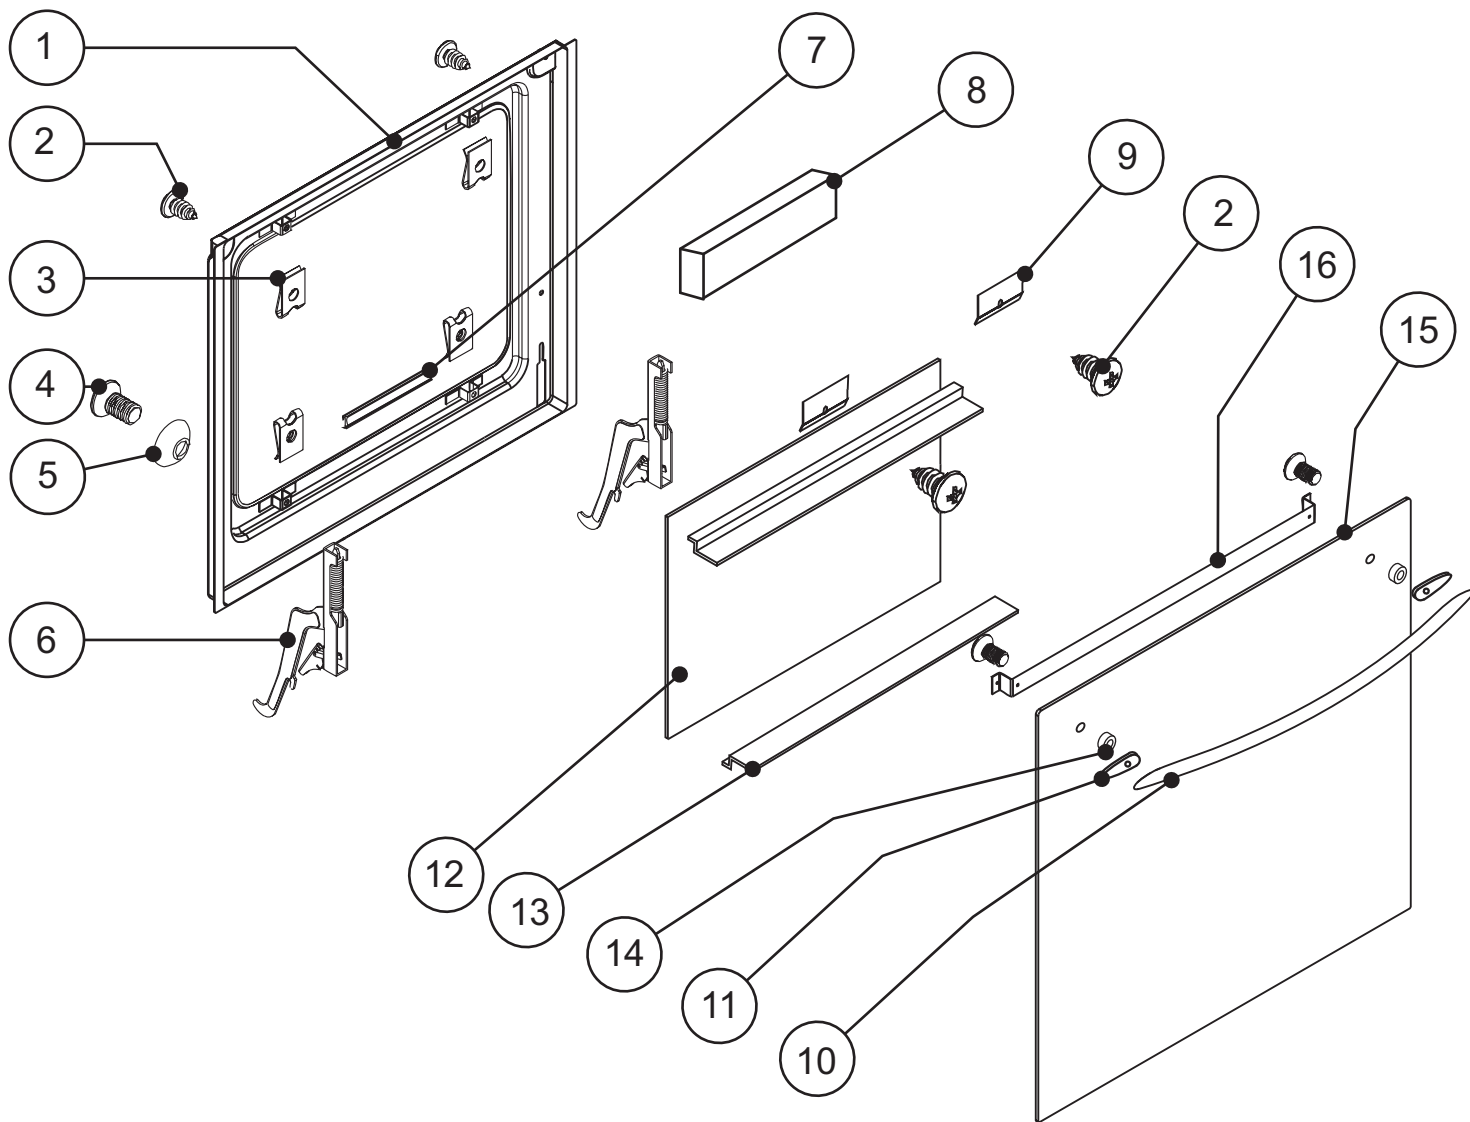

Door Assembly 2nd Oven EW250 & EW300

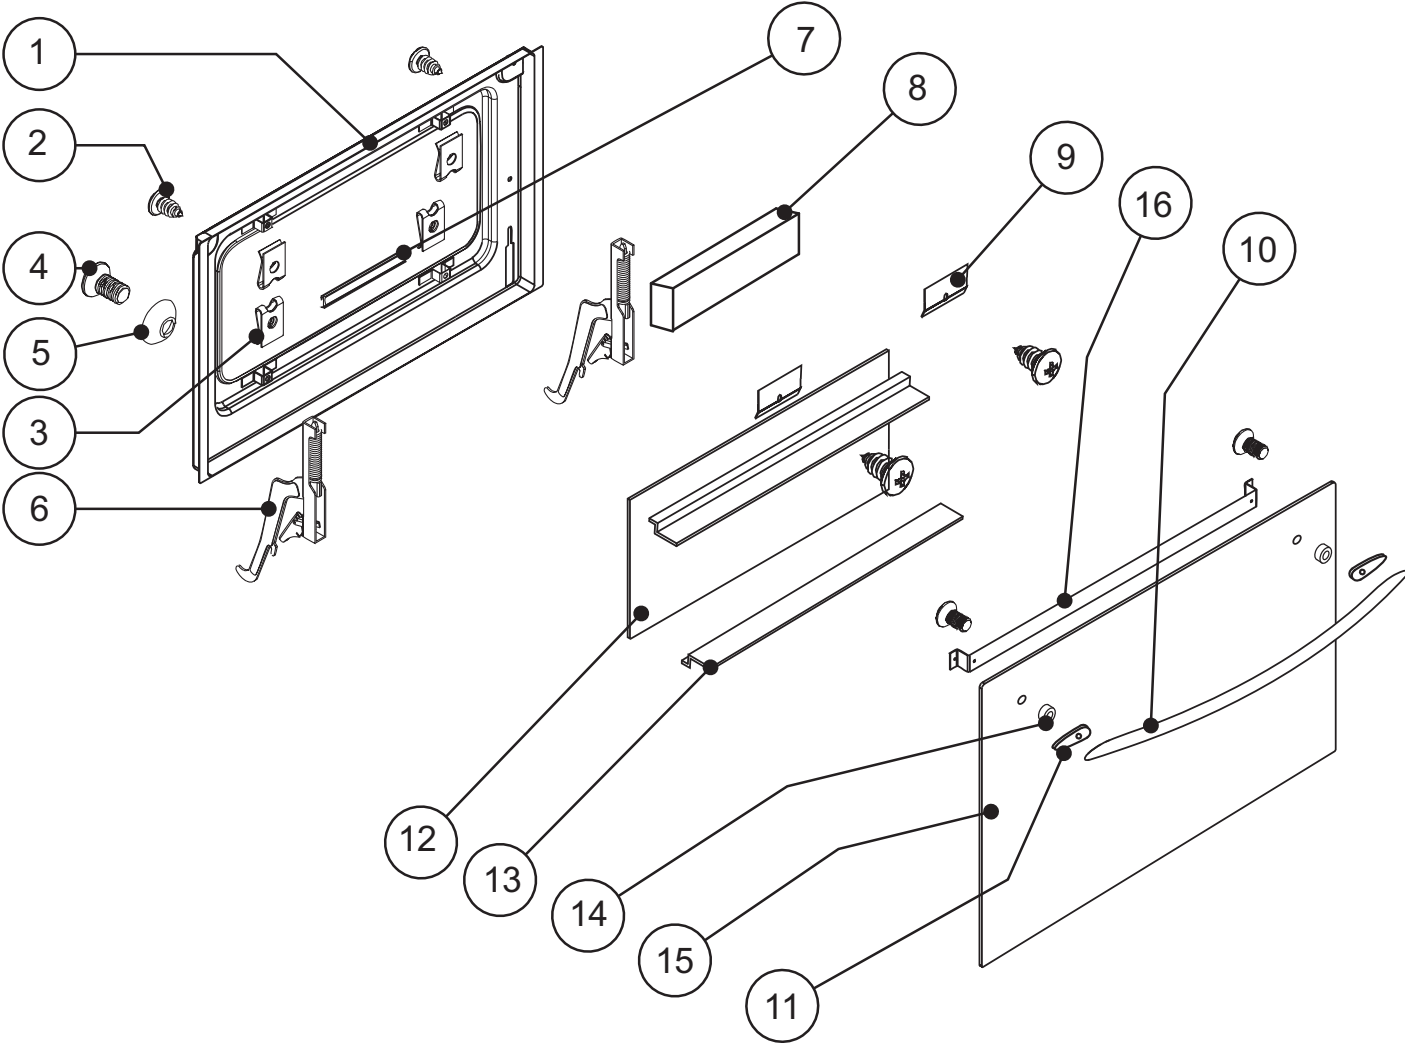

Accessories

