



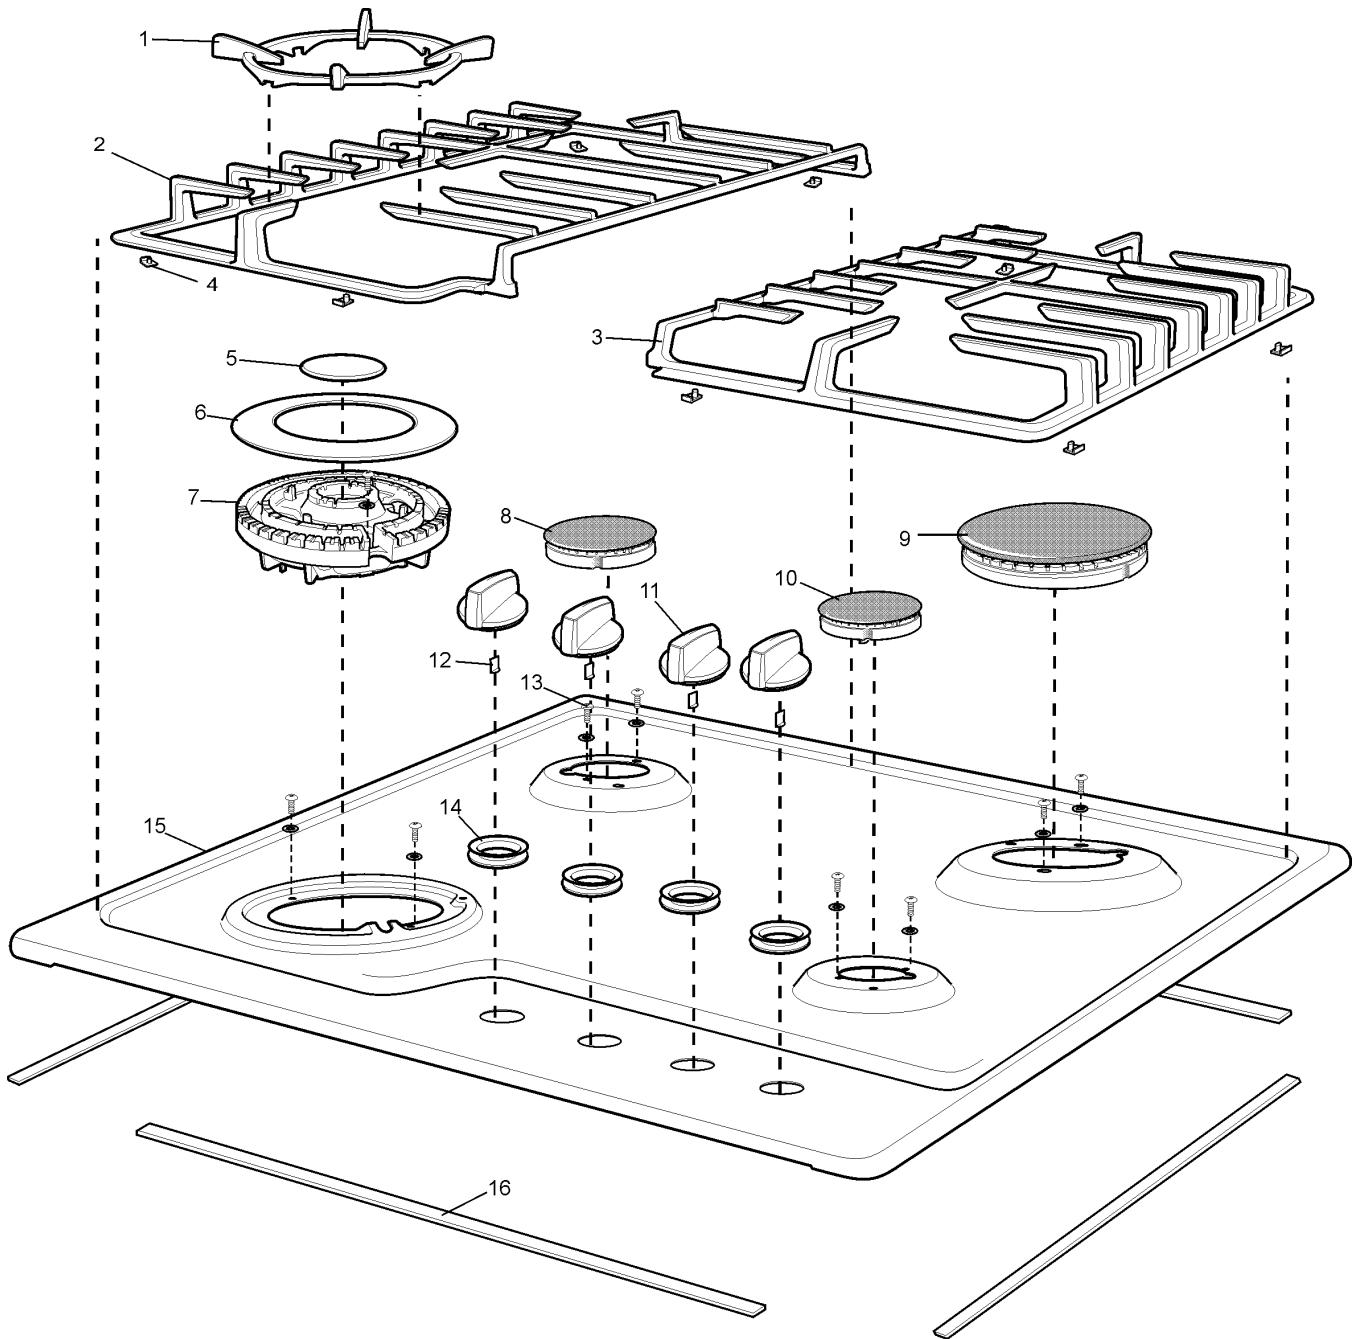

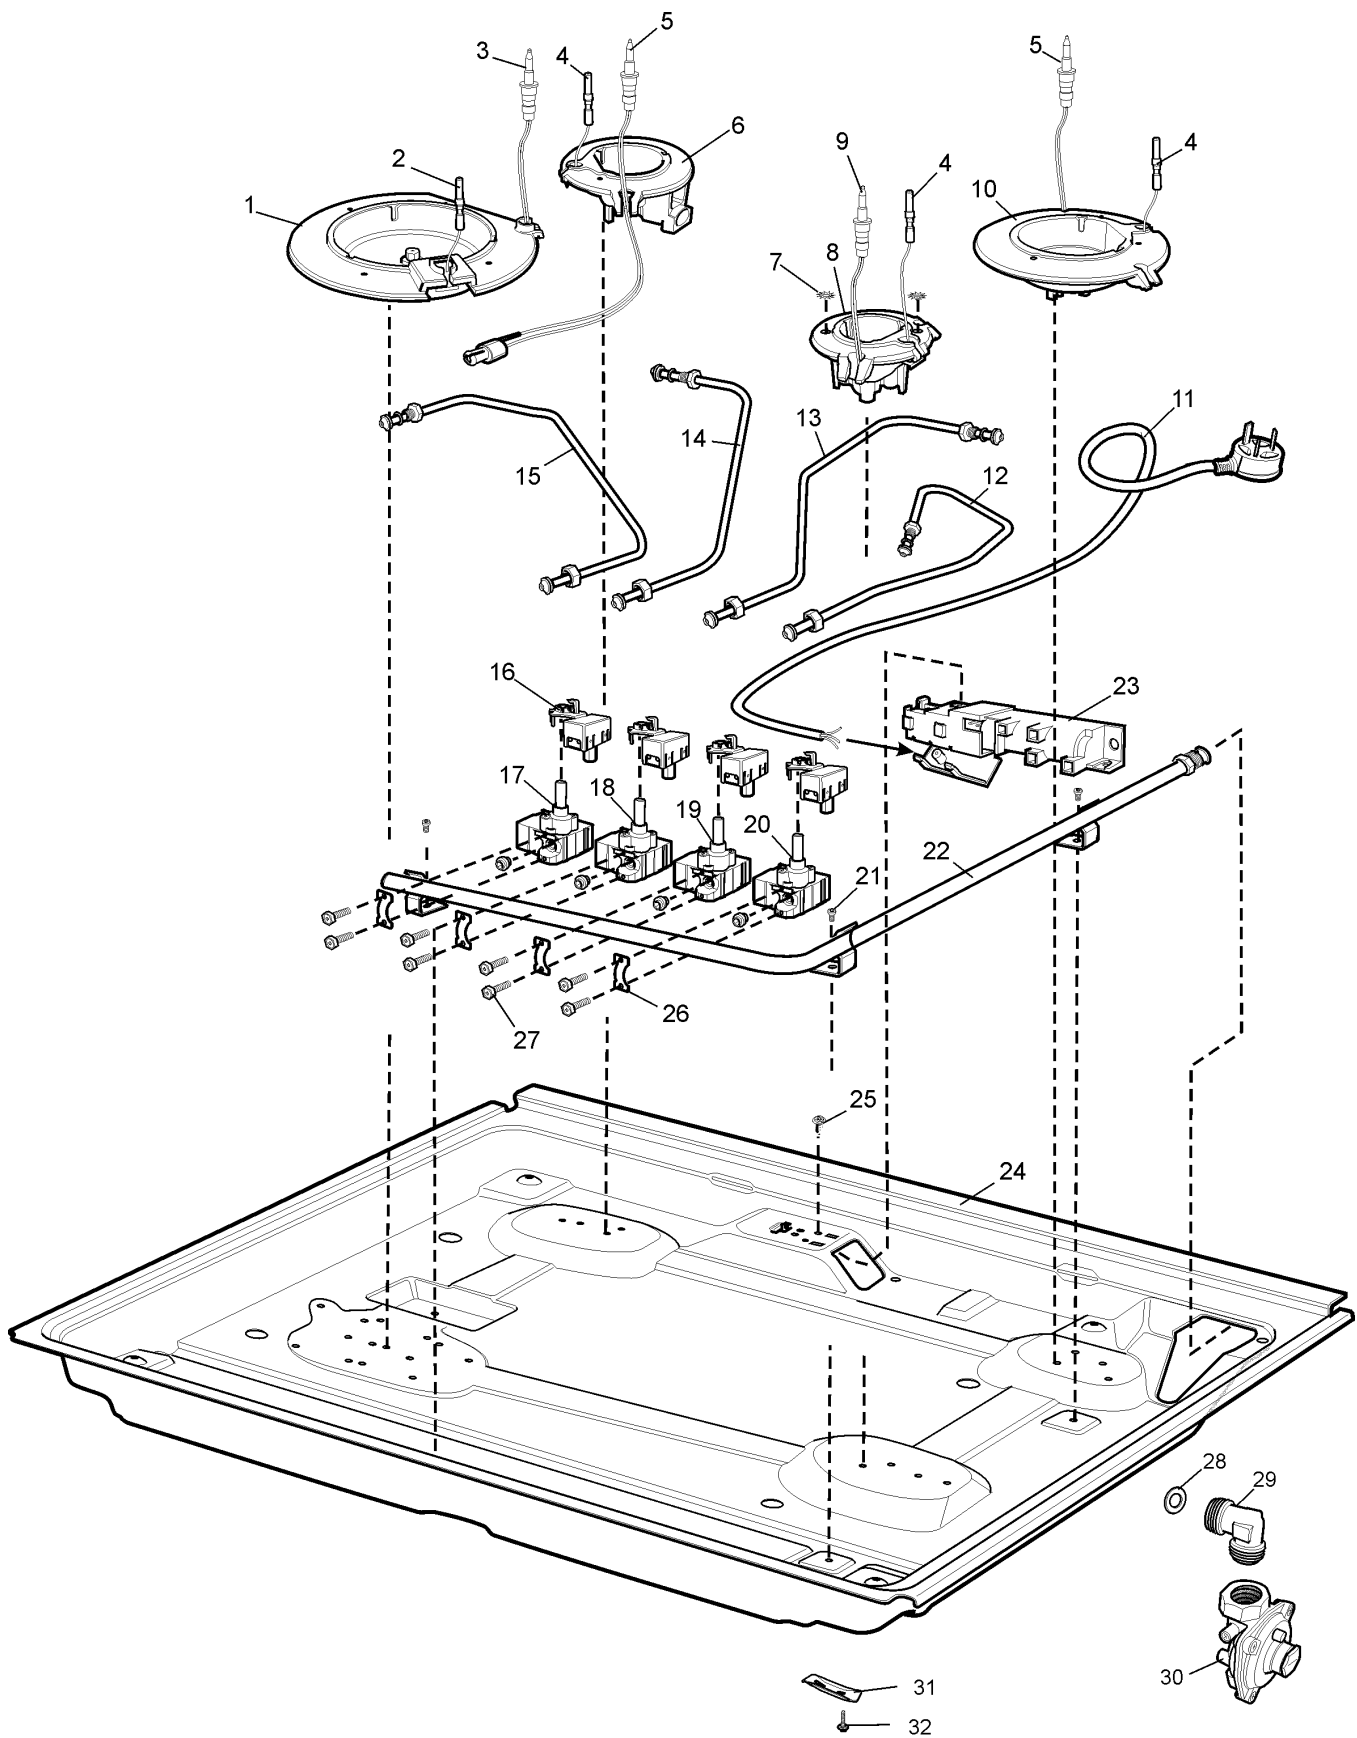

Gas Conversion – Important

NOTE: THIS KIT MUST BE FITTED BY A LICENSED GAS FITTER.
A CERTIFICATE OF COMPLIANCE MUST BE SUPPLIED TO BE KEPT BY THE CUSTOMER.

Please follow the procedure below if a conversion to LPG or NG is required.

- 1. Remove the hotplate burners to access the hotplate injectors.
- 2. Replace the injectors with the appropriate injectors. (see table below).
- 3. Unscrew the hex nut from the regulator. The hex nut, brass washer and nylon insert will disengage from the regulator as an assembly.
- 4. Unclip the nylon insert from the nut assembly by rotating the insert 1/4 turn and pulling it free. (Figure 2)
- 5. Correctly orientate the insert and clip back into position. (Figure 3)
- 6. Refit the hex nut assembly to the regulator ensuring that it is fully screwed down.
- 7. Turn on the gas supply and at each new connection, check for leaks using soapy water.

- 8. The operation of the regulator can be confirmed by connecting a manometer to the pressure test point located on the side of the regulator body. (Fig 1) With the appliance operating check the outlet pressure. (see table below)
 - When all burners of the appliance are operating at maximum,
 - When the smallest burner of the appliance is operating at minimum.
- 9. One by one, turn the knobs to minimum and adjust the bypass screw (accessible when the knob is removed) until a small stable flame results. Turn the knob to maximum and then back to minimum to ensure that the correct minimum flame is maintained.
- 10. Attach the correct sticker to the cooker, near the gas supply inlet. (Remove or cover the old sticker)

Burner Type	Natural Gas (Nominal test point pressure: 1.00kPa)	LPG (Nominal test point pressure: 2.60kPa)
Small	1.00	0.55
Medium	1.35	0.70
Fish	1.45	0.78
Large	1.60	0.90
Wok	1.75	1.00

