



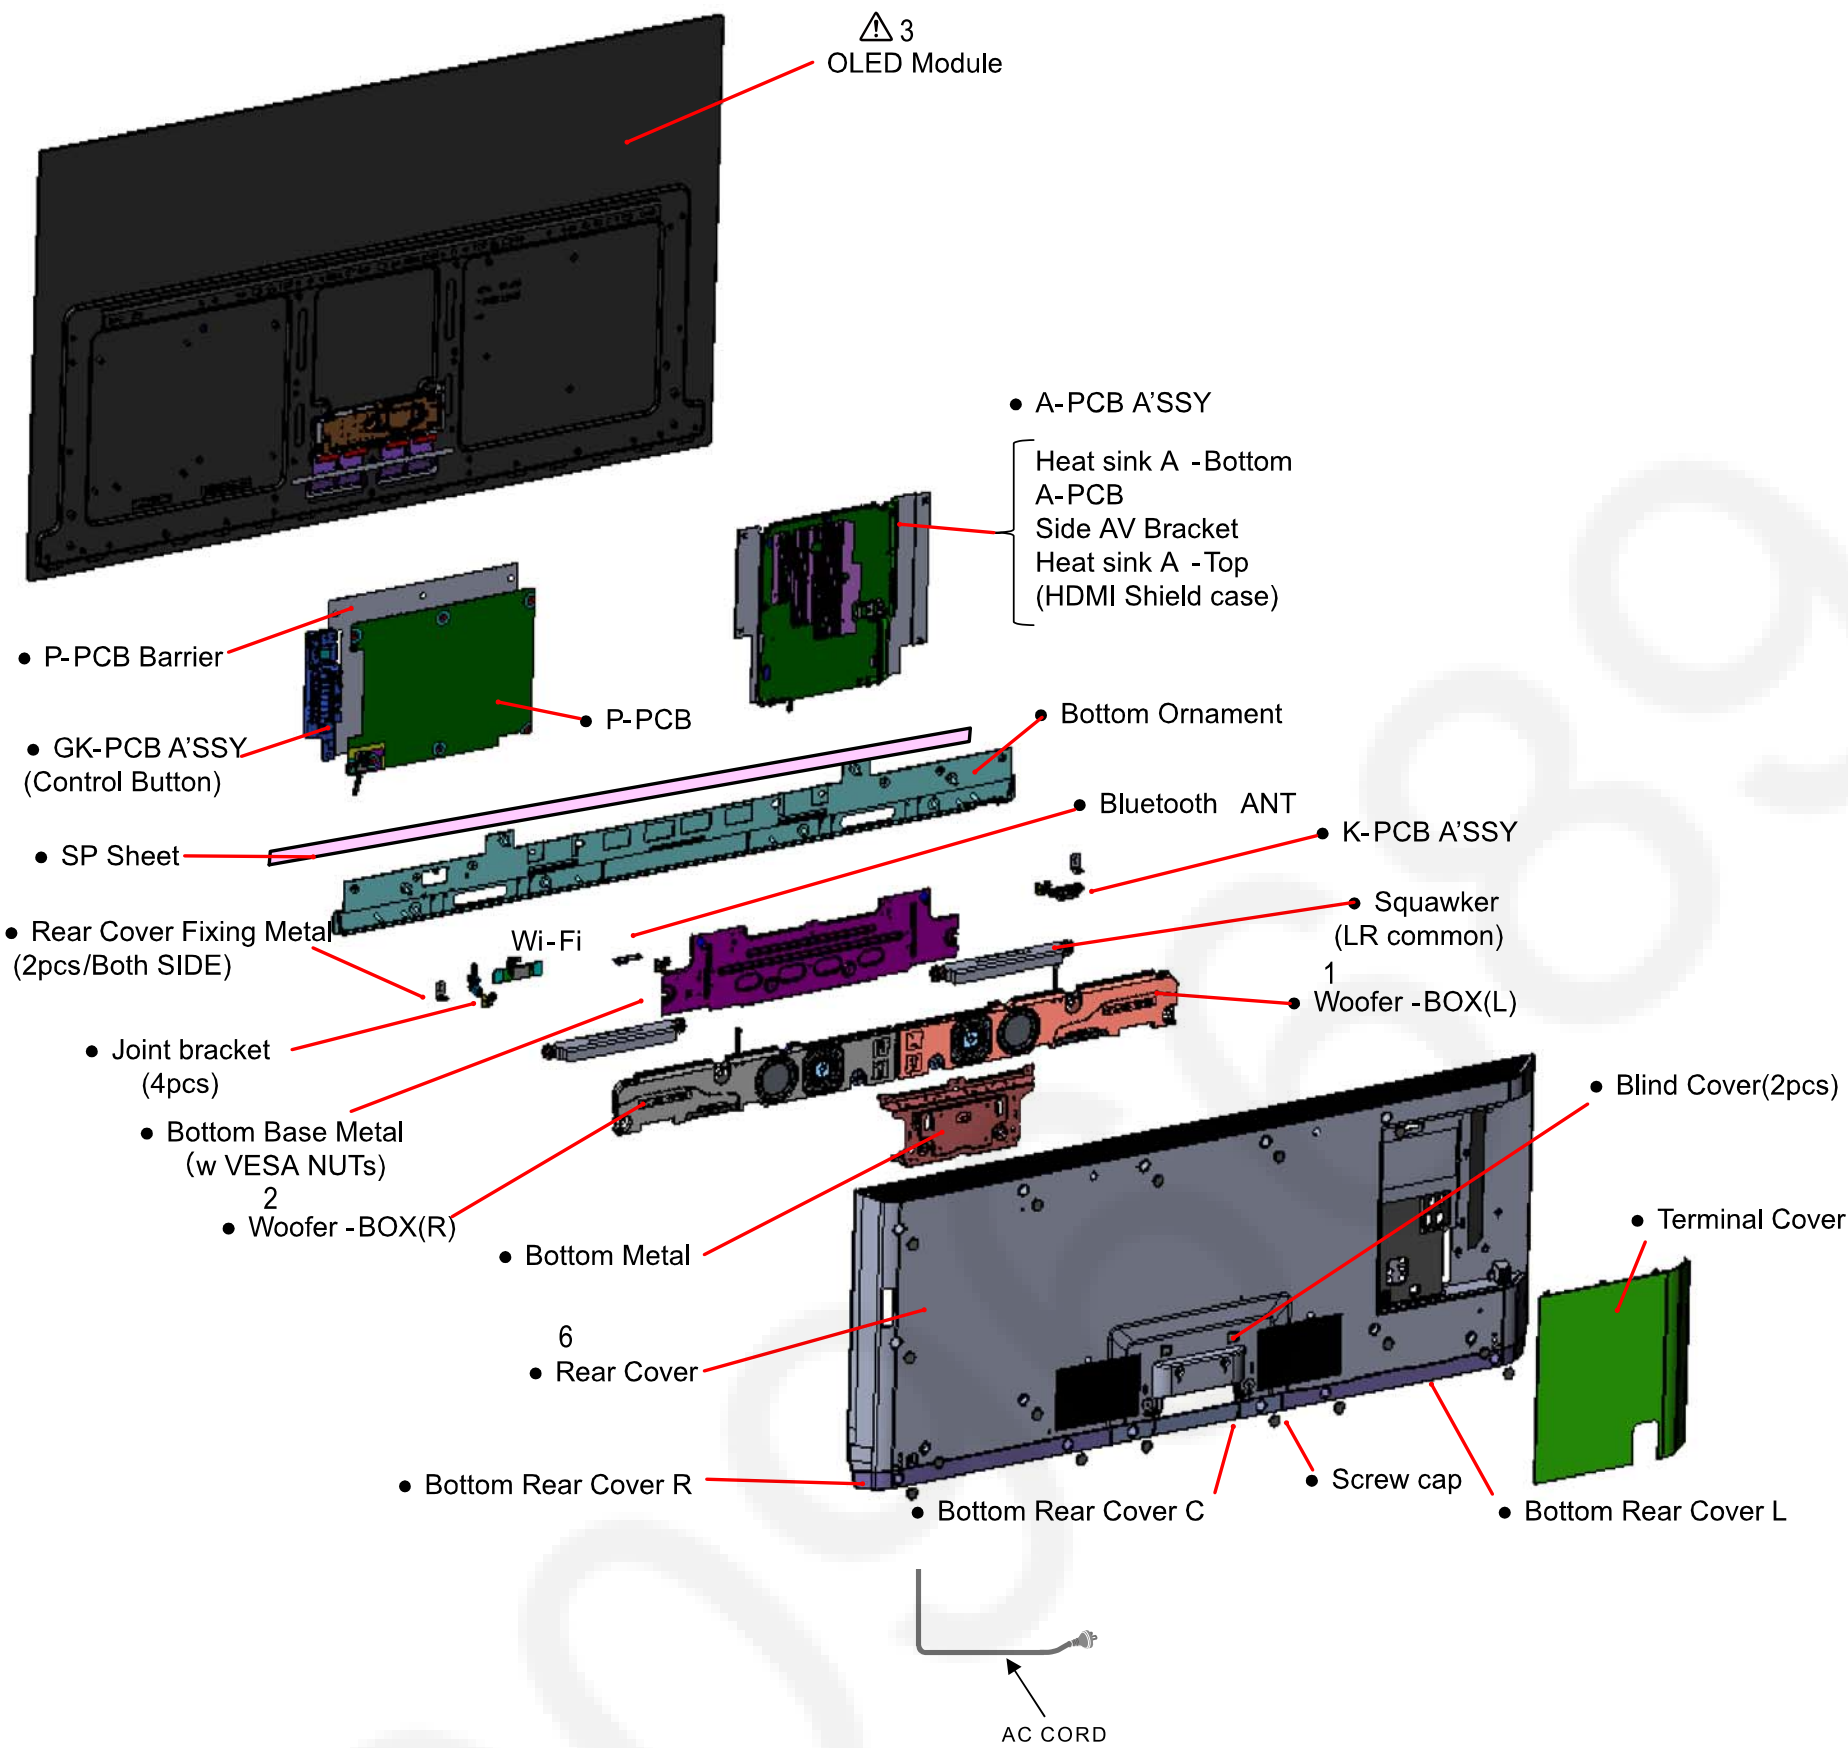


ASSEMBLY CONTENTS :
1. Please refer this page for internal assembly

No.	Description	Qty	UOM	Remarks
01	CUSHION_TOP_L	1	PC	
02	CUSHION_TOP_R	1	PC	
03	CUSHION_FRONT	1	PC	
04	CUSHION_REAR	1	PC	
05	CUSHION_SIDE_L	1	PC	
06	CUSHION_SIDE_R	1	PC	
07	CUSHION_BOTTOM_LR	1	PC	
08	CUSHION_BOTTOM_C	1	PC	
09	PEDESTAL_ASSY	1	PC	
10	REMOTE_TRANSMITTER	1	PC	
11	PEDESTAL_COVER_ASSY-19P1	1	PC	
12	ACCESSORIES_ASSY	1	PC	FANBAG

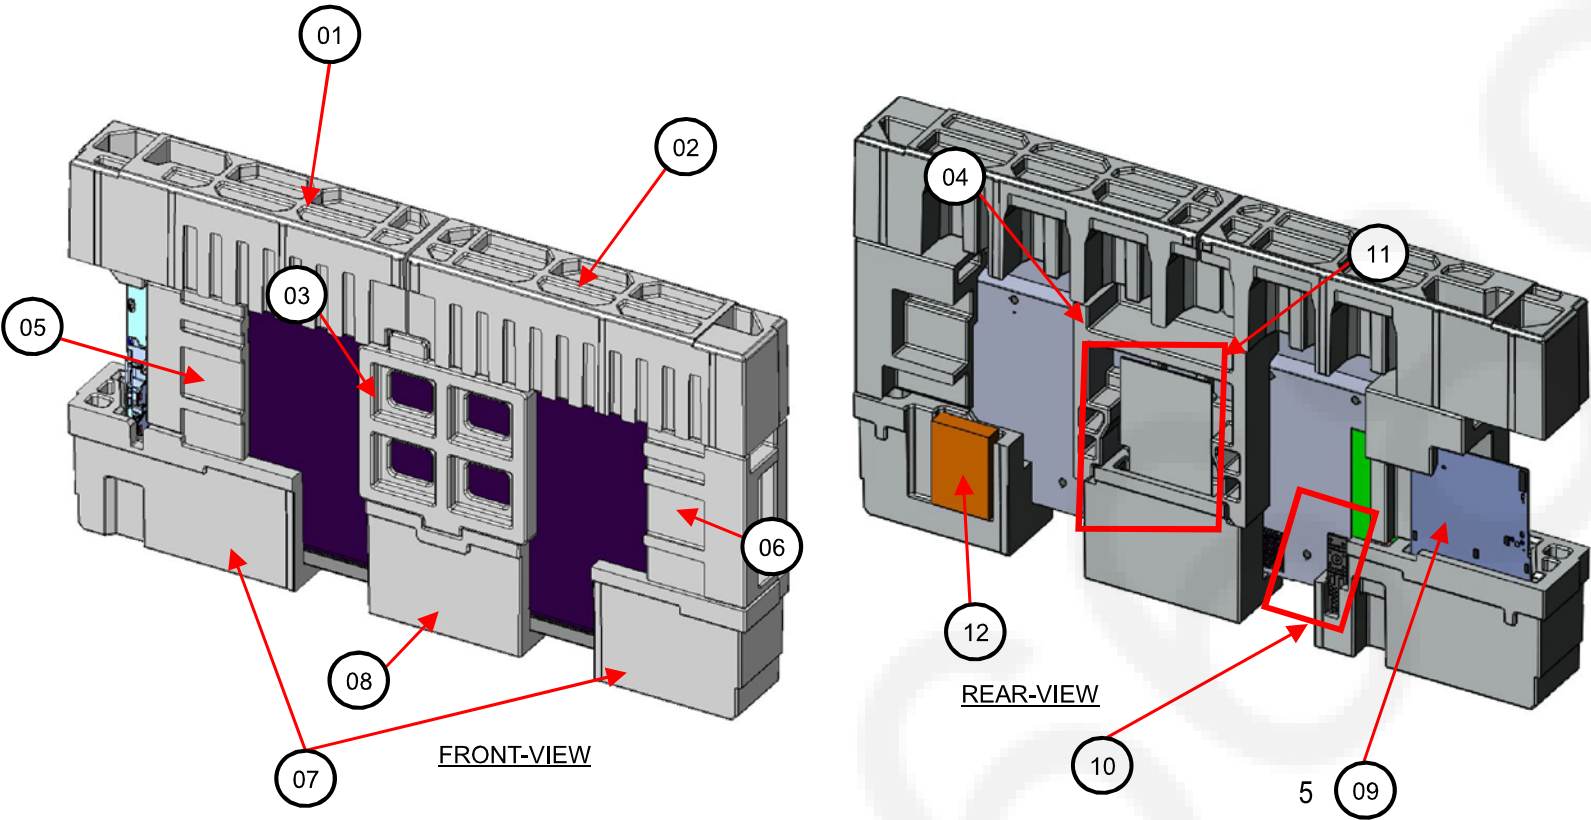


ASSEMBLY CONTENTS :
1. Follow this assembly spec. for cushion bottom left and right

No.	Description	Qty	UOM	Remarks
01	CUSHION_BOTTOM_LR	1	PC	
02	CUSHION_BOTTOM_C	1	PC	
03	PP_TAPE	1.2	MT	

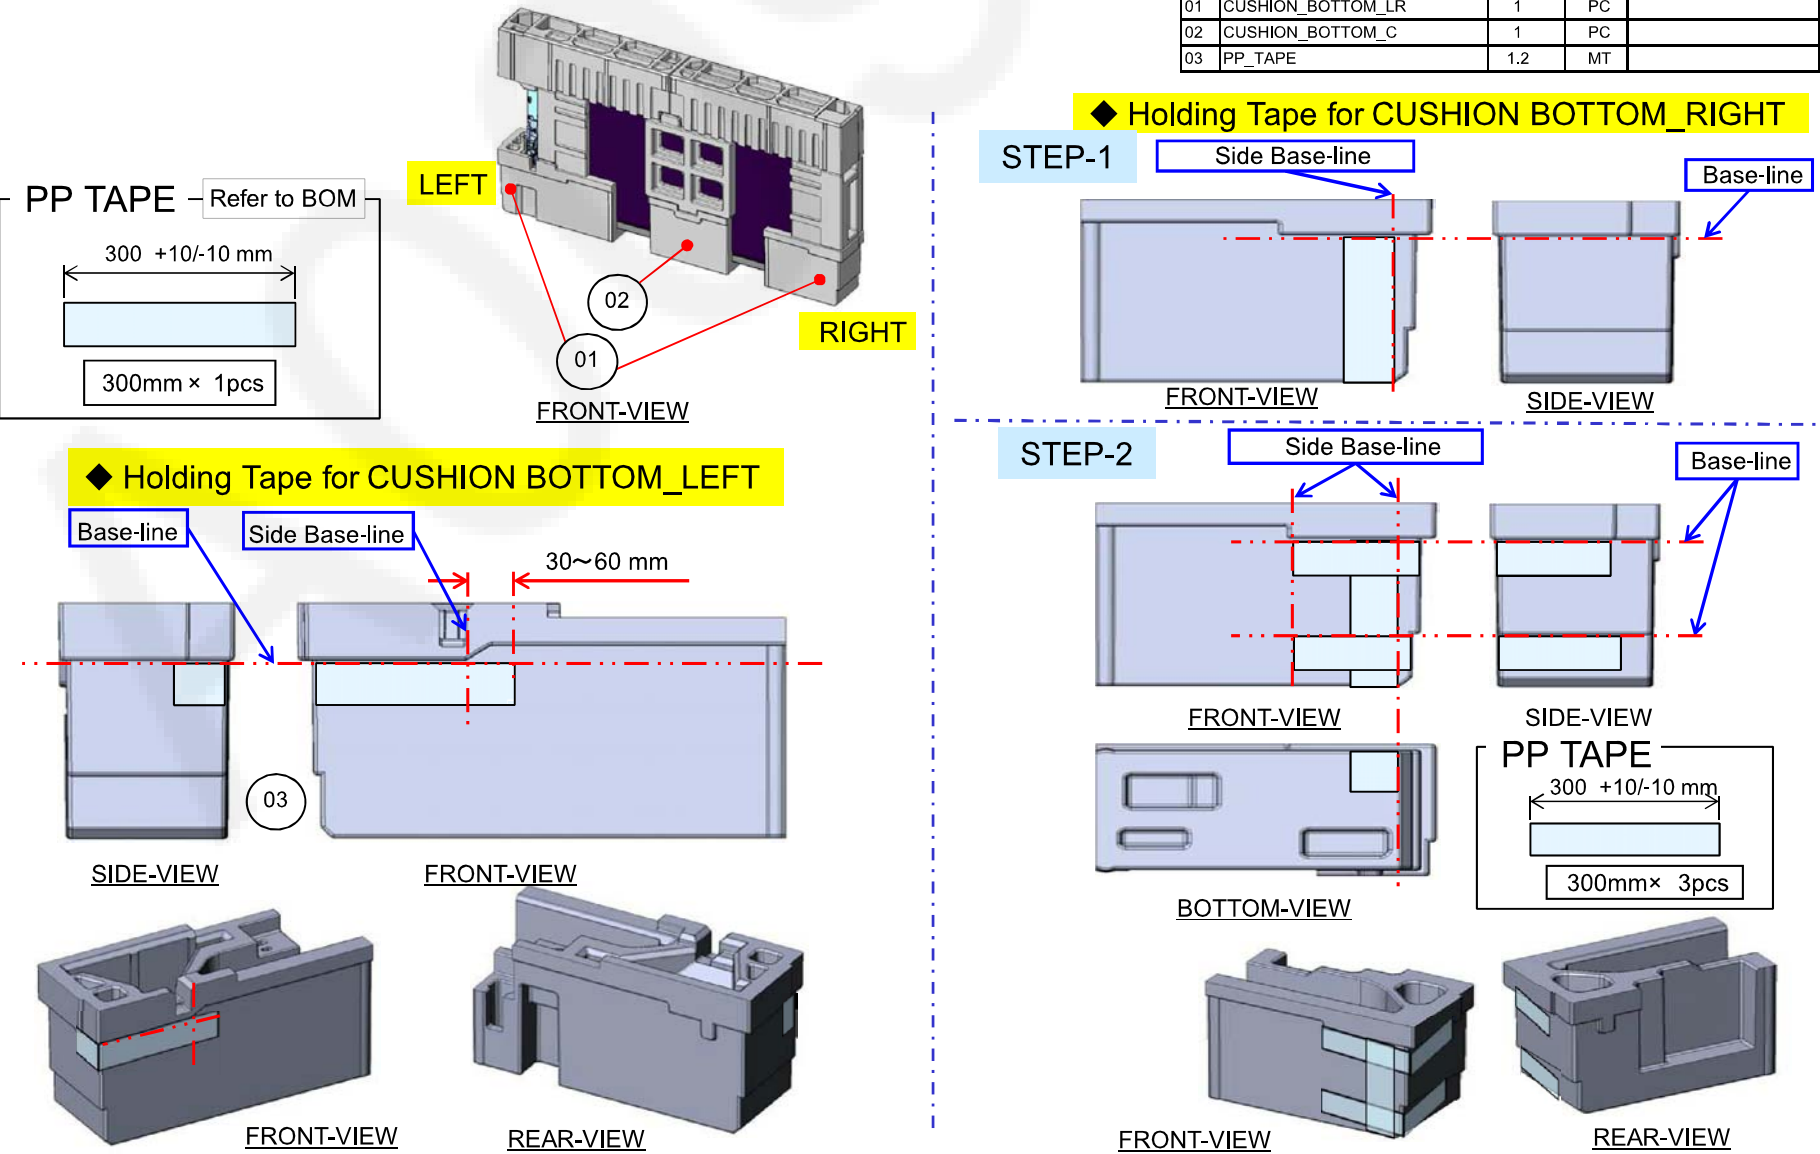

ASSEMBLY CONTENTS :
1. Follow the packaging process


No.	Description	Qty	UOM	Remarks
01	SET BAG	1	PC	

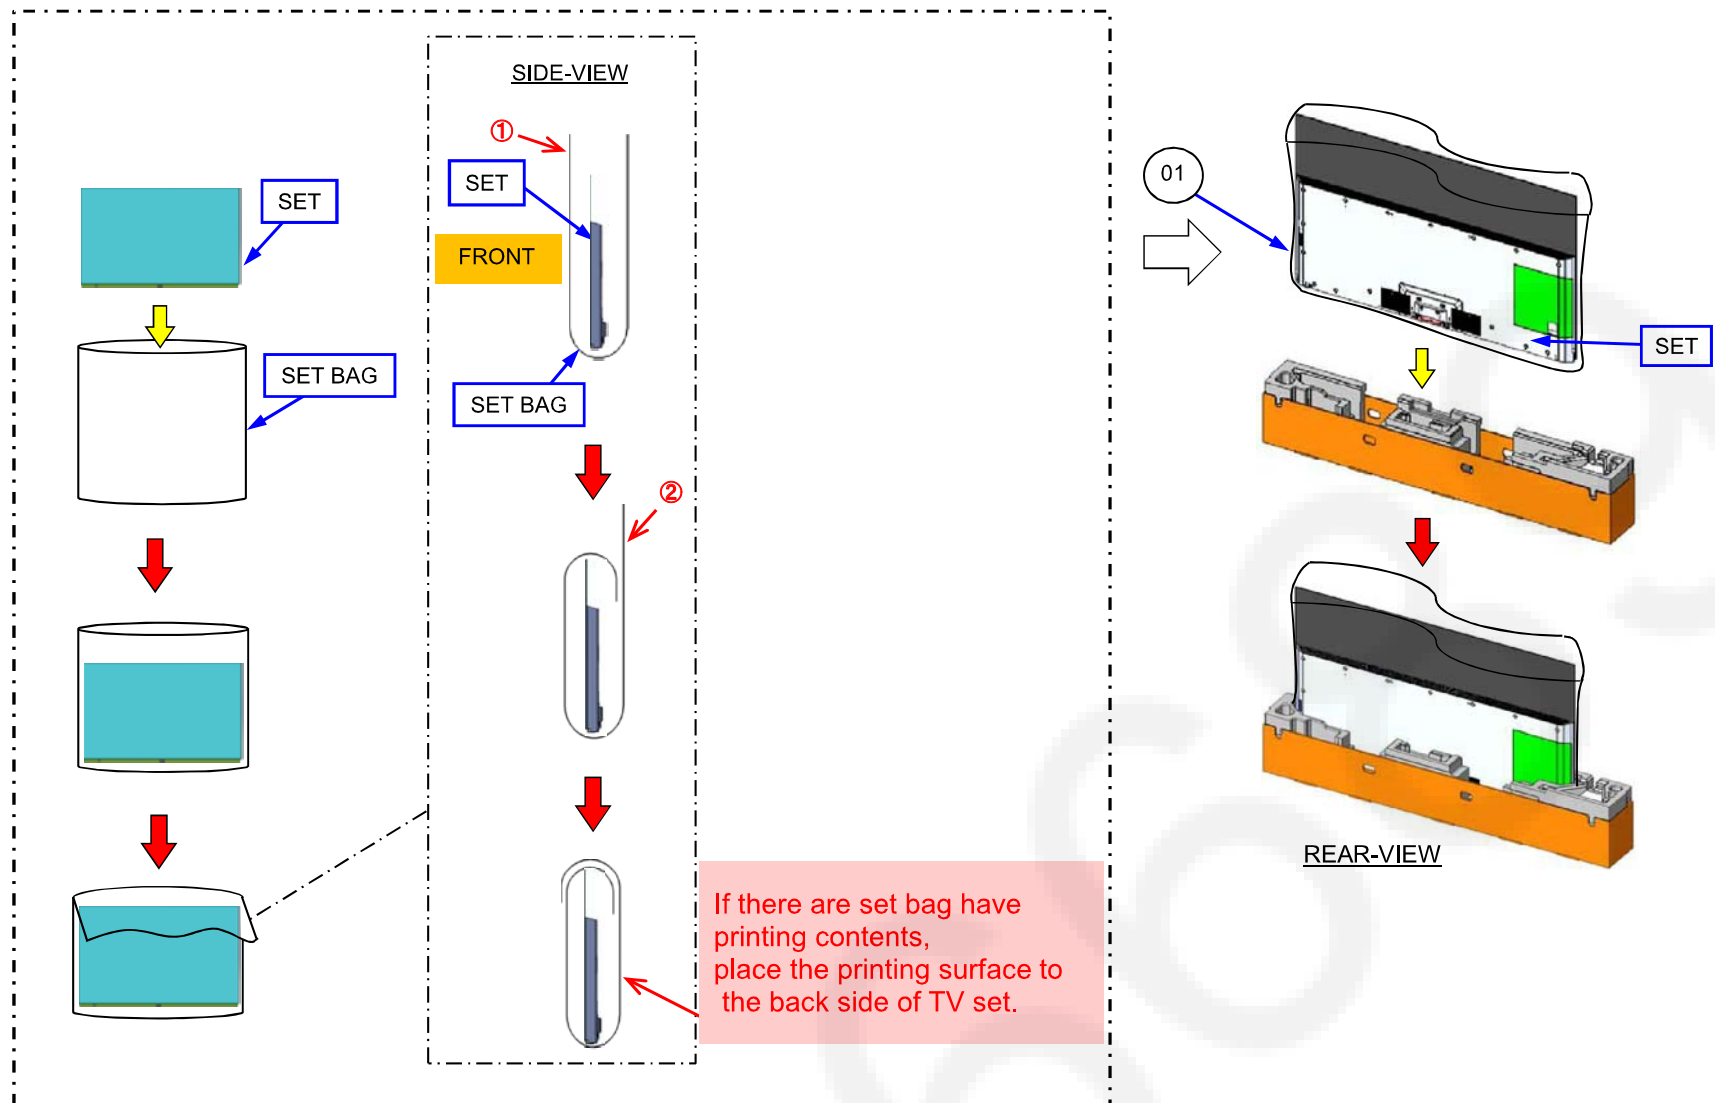

ASSEMBLY CONTENTS :

1. Follow the packaging process

No.	Description	Qty	UOM	Remarks
01	PEDESTAL_ASSY	1	PC	
02	REMOTE_TRANSMITTER	1	PC	
03	PEDESTAL_COVER_ASSY-19P1	1	PC	
04	ACCESSORIES_ASSY	1	PC	FANBAG

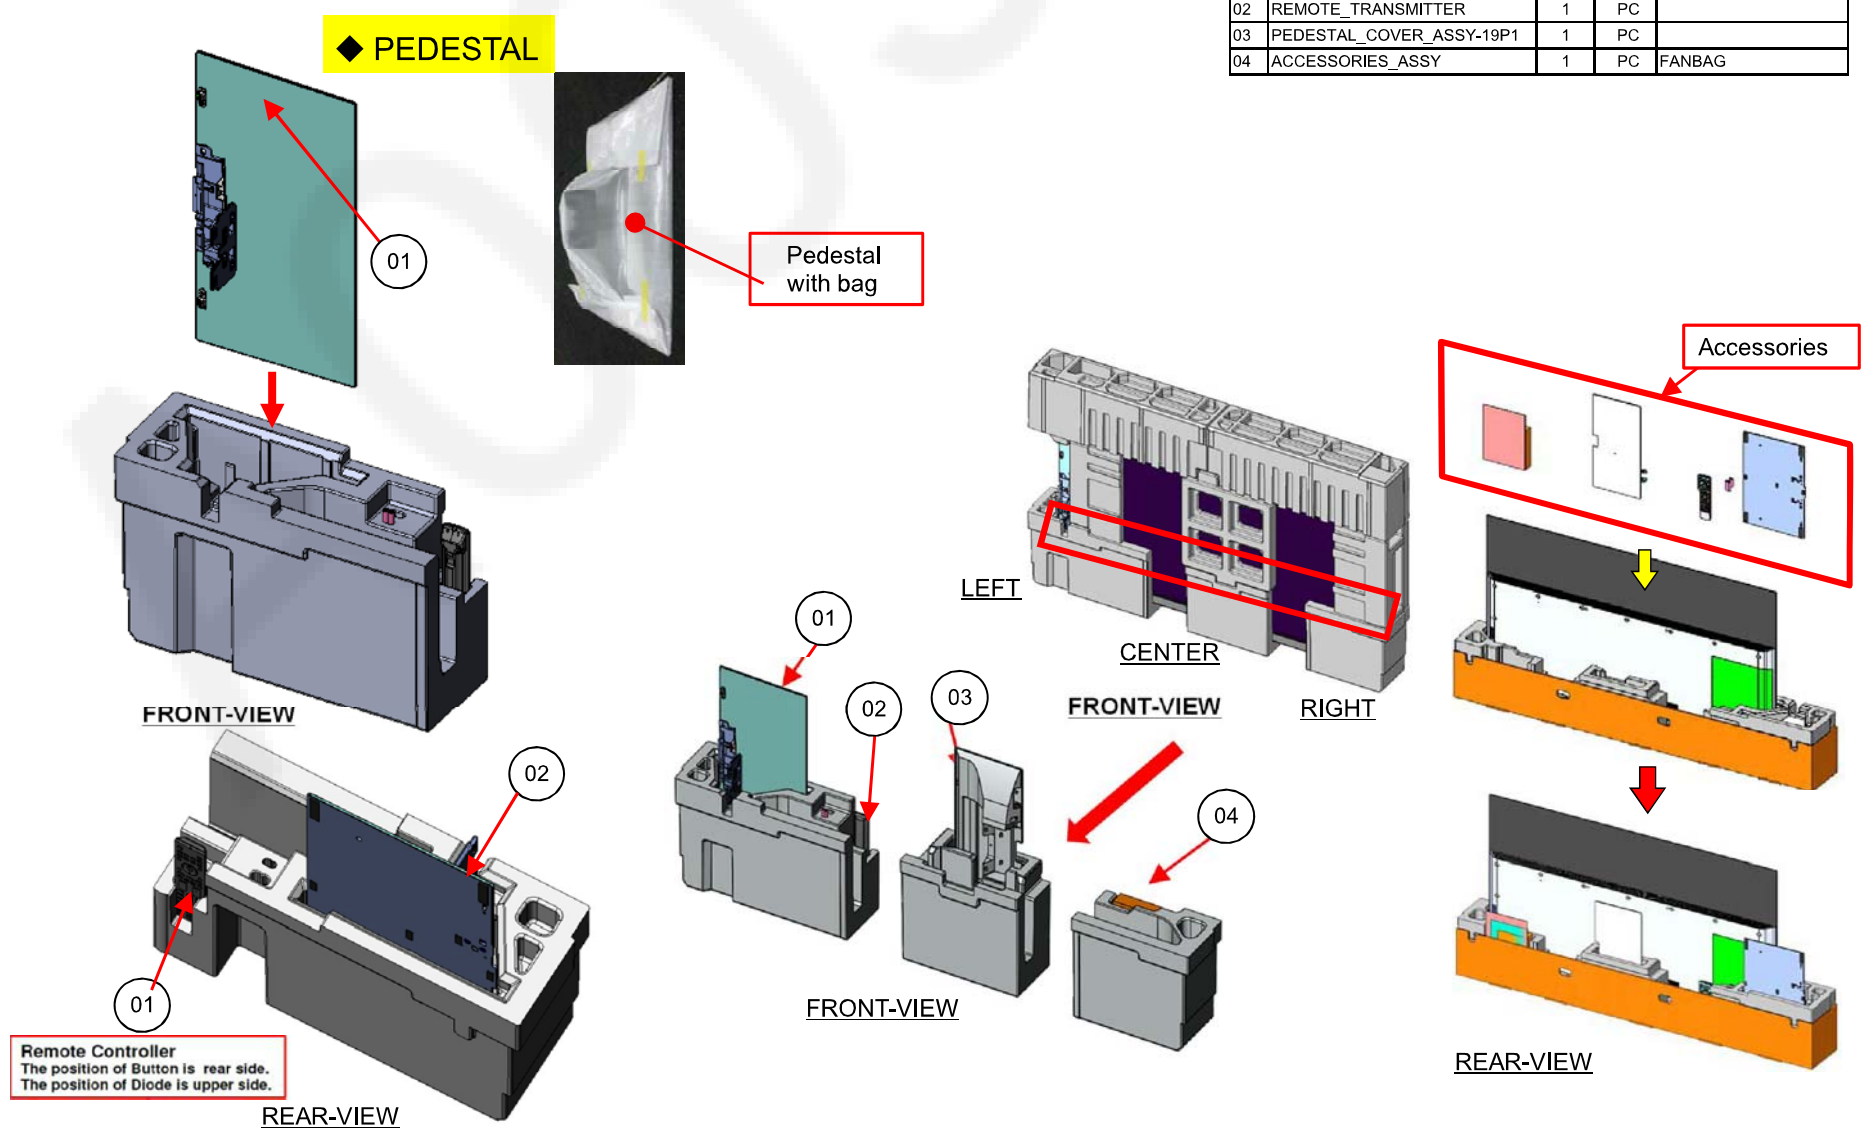

ASSEMBLY CONTENTS :
1. Follow packaging process

No.	Description	Qty	UOM	Remarks
01	CUSHION_SIDE_R	1	PC	
02	PP_TAPE	1.05	MT	

◆ Holding Tape for CUSHION SIDE_RIGHT

STEP-1

FRONT-VIEW

Base-line

BOTTOM-VIEW

REAR-VIEW

0~30 mm

Side Base-line

0~10 mm

PP TAPE -Refer to BOM-

350 +10/-10 mm

350mm × 1pcs

[Caution]
Don't overlap the set space

STEP-2

◆ Holding Tape for CUSHION SIDE_RIGHT

Base-line

Side Base-line

02

Base-line

FRONT-VIEW


SIDE-VIEW

REAR-VIEW

PP TAPE -Refer to BOM-

350 +10/-10 mm


350mm × 2pcs

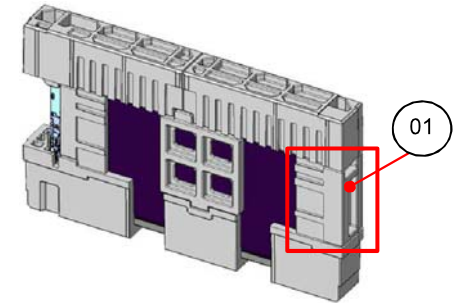

ASSEMBLY CONTENTS :

1. Fix the carton top(01) into carton bottom
2. Fix 4 PC Joint(02) into the carton hole.

No.	Description	Qty	UOM	Remarks
01	CUSHION_SIDE_L	1	PC	
02	CUSHION_SIDE_R	1	PC	
03	CUSHION_REAR	1	PC	
04	CARTON_TOP	1	PC	
05	PC_JOINT	4	PC	
06	CUSHION_FRONT	1	PC	

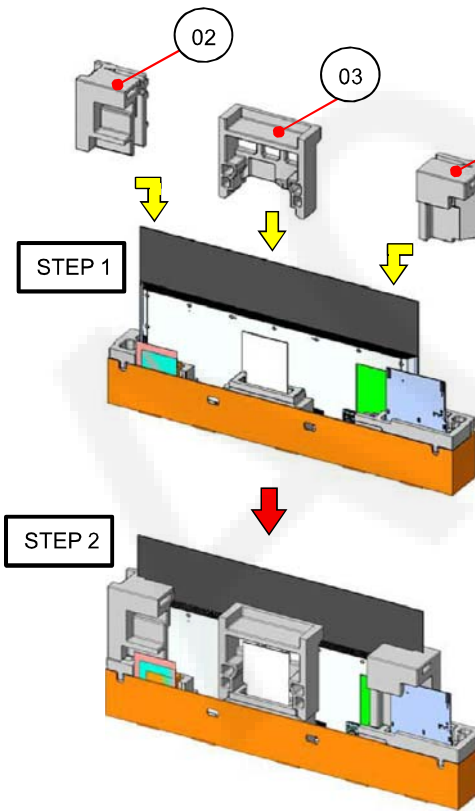


REAR-VIEW

STEP 3



REAR-VIEW

STEP 4

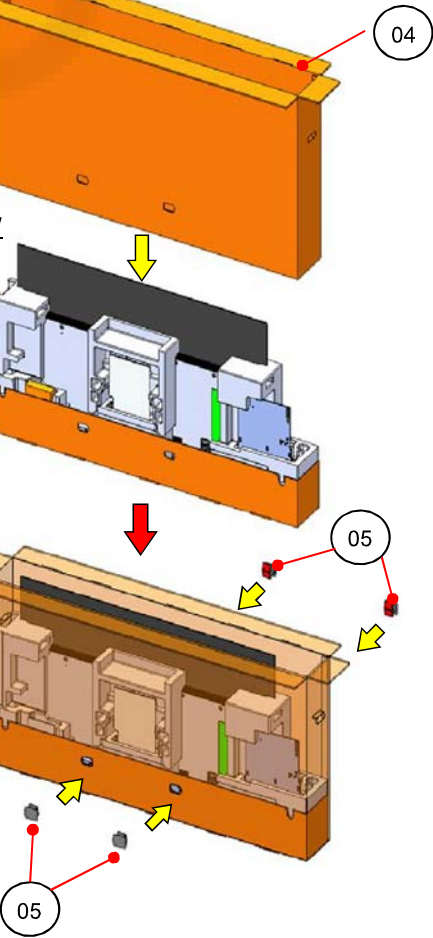

STEP 5

FRONT-VIEW

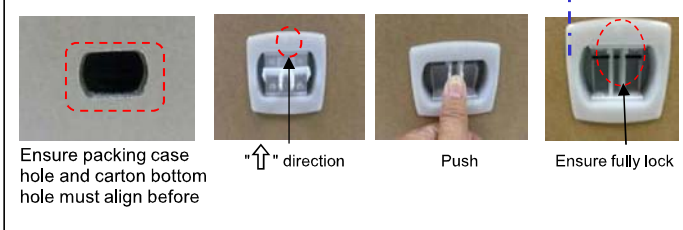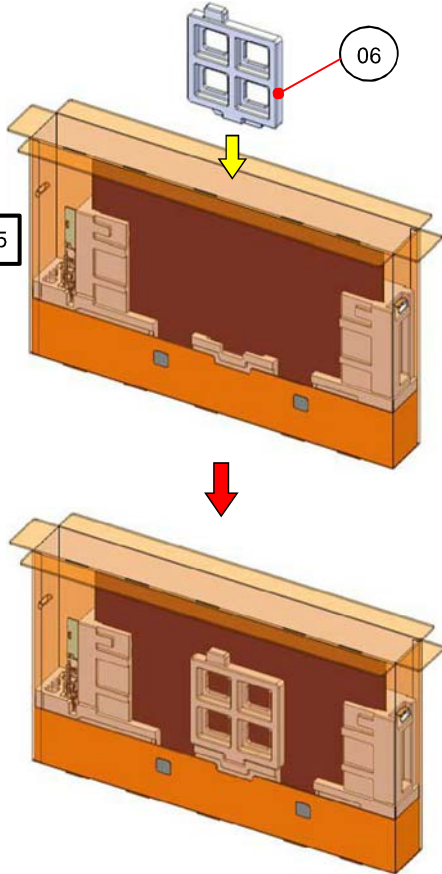

Ensure packing case hole and carton bottom hole must align before


"↑" direction

Push

Ensure fully lock

- ASSEMBLY CONTENTS :
- 1. Fix the leaflet(01) with Tape (02)
 - 2. Then, fix the leaflet at the cushion rear.

No.	Item	Description	Qty	UOM	Remarks
01	TQD4G19180	LEAFLET_FOR_ASSEMBLING PEDESTAL	1	PC	
02	T4FL1907N	TAPE (LEAFLET 0.08)	0.08	MT	80mm x 1pcs

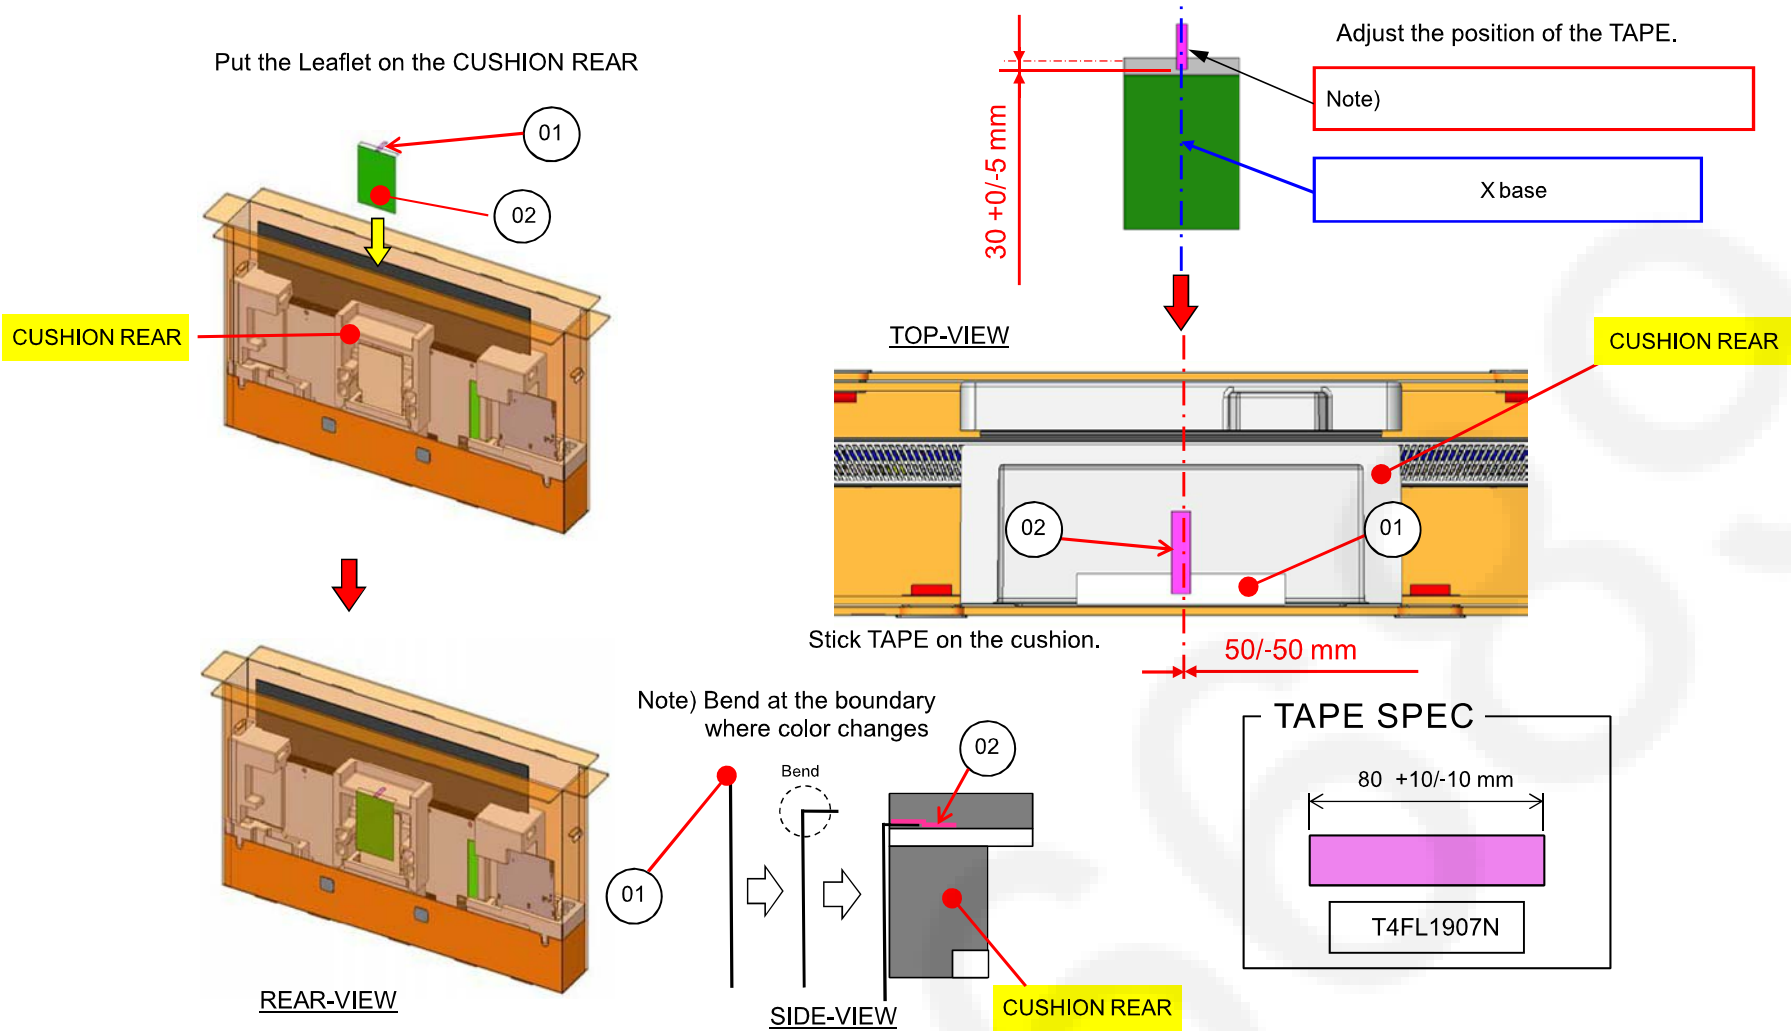

- ASSEMBLY CONTENTS :
- 1. Insert the cushion tops left and right (01)(02) into carton top
 - 2. Fold all four flap of the carton top inside
 - 3. Tape the carton top with PP-Tape(03)

No.	Description	Qty	UOM	Remarks
01	CUSHION_TOP_L	1	PC	
02	CUSHION_TOP_R	1	PC	
03	PP_TAPE	1.98	MT	

