



ELECTROLUX HOME PRODUCTS PTY LTD
ABN 51 004 762 341

Technical Publication N° RE226

Issue: 2
Date: 6/08

WEB SITE ADDRESS: www.partnship.com.au

WESTINGHOUSE

MANUALLY CONTROLLED

FROST FREE

“B” SERIES

BOTTOM MOUNT

REFRIGERATORS

MODELS

WBM3700PB (*Pacific Silver*)
WBM3700SB (*Stainless Steel*)
WBM3700WB (*White*)
WBM4000SB (*Stainless Steel*)
WBM4000WB (*White*)
WBM4300PB (*Pacific Silver*)
WBM4300WB (*White*)
WBM5100PB (*Pacific Silver*)
WBM5100WB (*White*)


INDEX

SECTION	PAGE N°
Index	2
Notes	3
Exploded View Control Housings WBM3700PB, WBM3700SB, WBM3700WB	4 - 5
Exploded View Control Housings WBM4000SB, WBM4000WB, WBM4300PB, WBM4300WB, WBM5100PB, WBM5100WB	6 - 7
Exploded View Door Assy. WBM3700PB, WBM3700SB, WBM3700WB	8 - 9
Exploded View Door Assy. WBM4000SB, WBM4000WB	10 - 11
Exploded View Door Assy. WBM4300PB, WBM4300WB	12 - 13
Exploded View Door Assy. WBM5100PB, WBM5100WB	14 - 15
Exploded View Freezer Assy. WBM3700PB, WBM3700SB, WBM3700WB, WBM4000SB, WBM4000WB	16 - 17
Exploded View Freezer Assy. WBM4300PB, WBM4300WB	18 - 19
Exploded View Freezer Assy. WBM5100PB, WBM5100WB	20 - 21
Exploded View Cabinet Assy. WBM3700PB, WBM3700SB, WBM3700WB, WBM4000SB, WBM4000WB	22 - 23
Exploded View Cabinet Assy. WBM4300PB, WBM4300WB	24 - 25
Exploded View Cabinet Assy. WBM5100PB, WBM5100WB	26 - 27
Exploded View Machine Compartment Assy. WBM3700PB, WBM3700SB, WBM3700WB, WBM4000SB, WBM4000WB	28 - 29
Exploded View Machine Compartment Assy. WBM4300PB, WBM4300WB	30 - 31
Exploded View Machine Compartment Assy. WBM5100PB, WBM5100WB	32 - 33

NOTES


[illegible]

**MODELS: WBM3700PB, WBM3700SB, WBM3700WB EX. VIEW DRAWING 4987
CONTROL HOUSING
ASSEMBLIES**

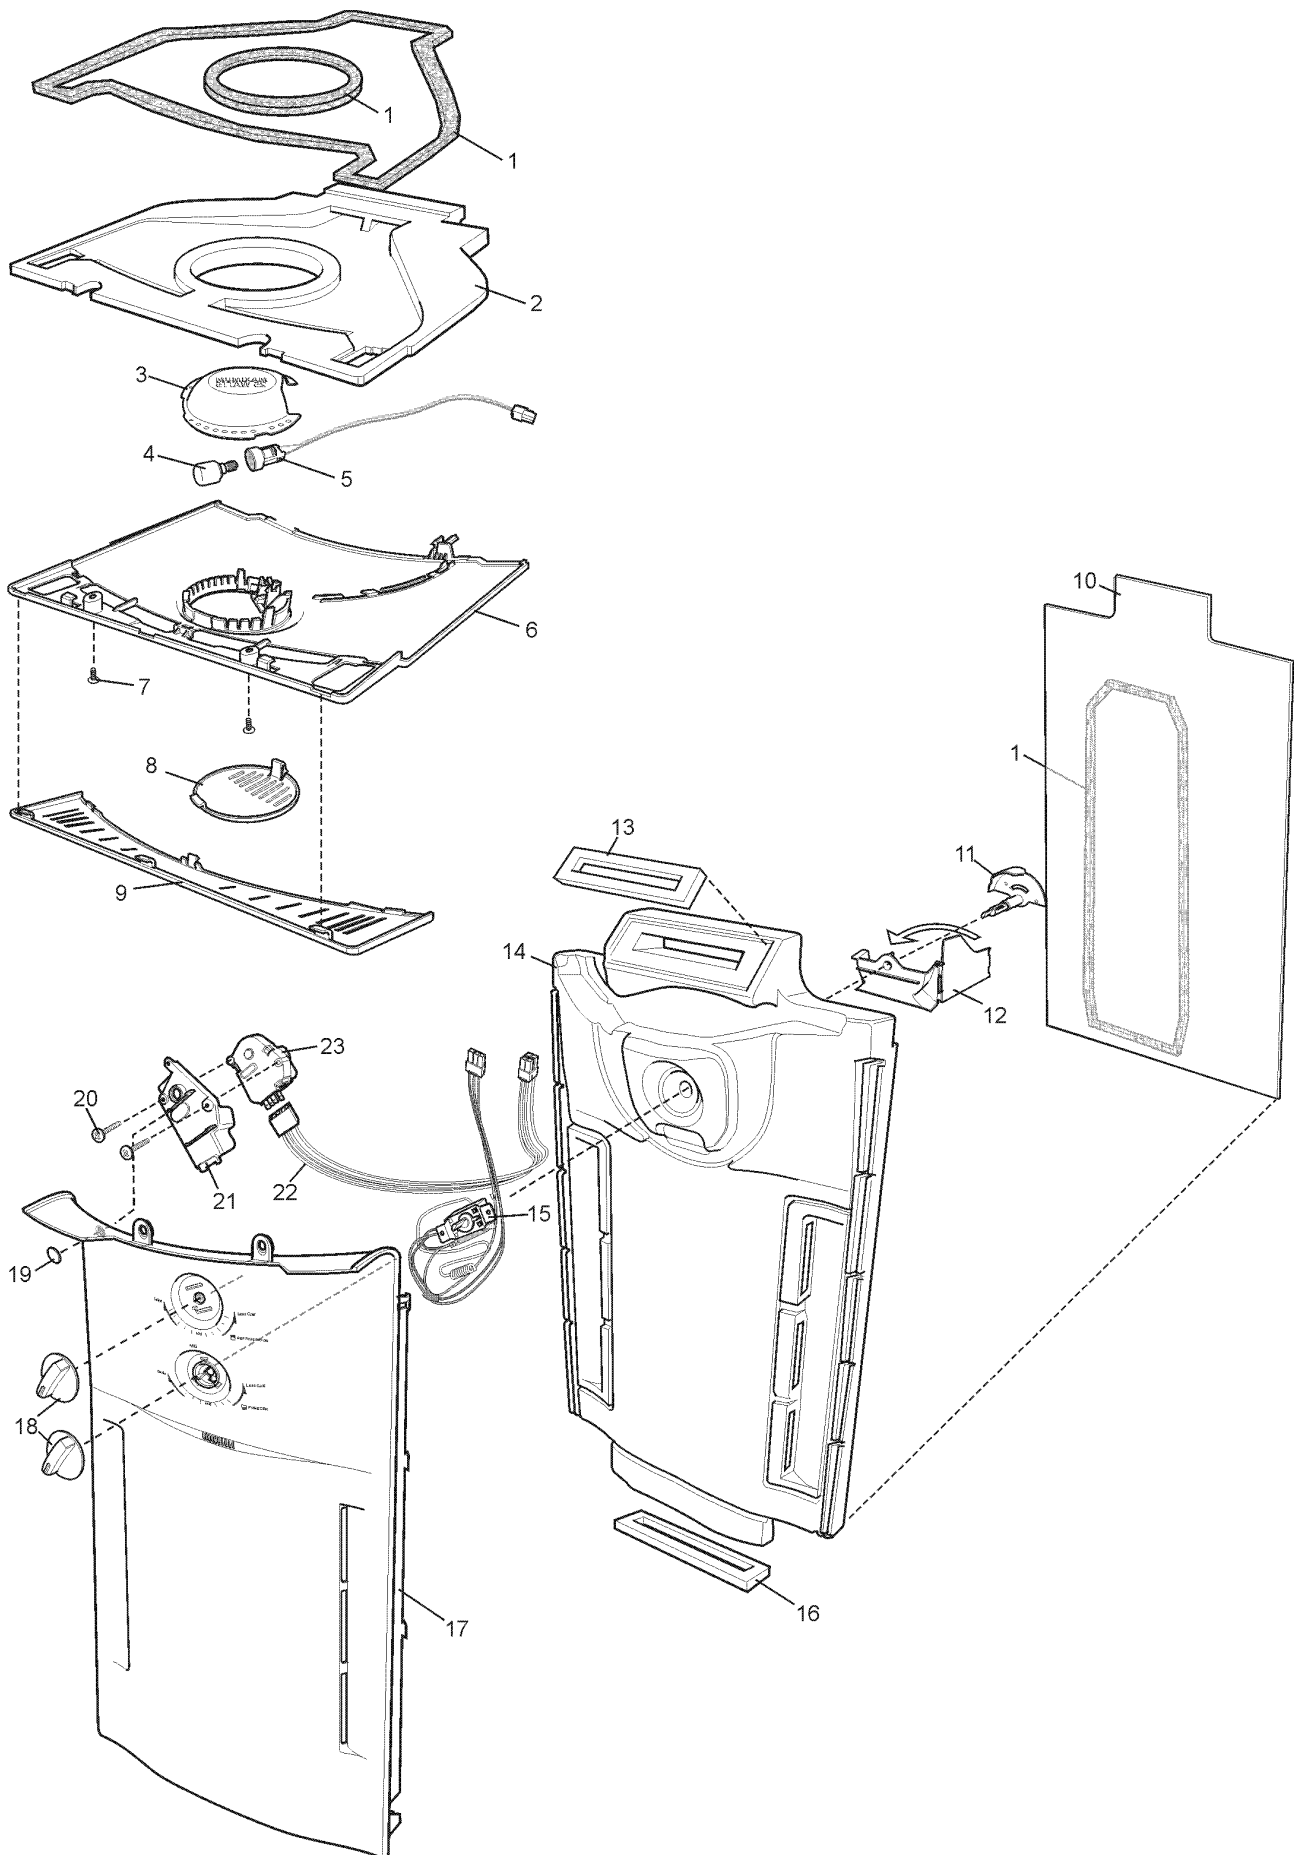


ITEM	PART N°	DESCRIPTION Ex. 4987	QTY
1	*#1435811	Tape, P/urethane	1
2	#1441737	EPS Air Curtain	1
3	#1444945	Shield, Light	1
4	#1451284	Lamp, 25 watt Blue E14SES	1
5	#1442657	Lampholder & Harness	1
6	#1441902	Air Curtain Moulded	1
7	1449412	Screw, #8 x ½" TF Flange HD WHT	2
8	#1446593	Lens, Light	1
9	1446267	Air Curtain Vents	1
10	*1442024	M/F Sealing	1
11	*1441195	Baffle M/F	1
12	*1441738	Baffle Casing	1
13	*1446919	Gasket, Delivery Front	1
14	*1443619	EPS Housing, Control Rear	1
15	*1451143	Control (Thermostat) Assy.Yeon Kyung	1
16	*1450540	Gasket, Delivery	1
17	*1441397	Housing, Control Rear	1
18	1444896	Knob, Baffle/Control	2
19	1445182	Cap, Timer Hole	1
20	*1446040	Screw, 6GA ¾ Pan Phillips STS	2
21	*1445152	Shield, Timer	1
22	*1449714	Harness, Defrost Timer	1
23	*1448728	Timer, Defrost 8 Hr Invensys	1
Note * Can replace these parts with assembly 1453137.			
Note # Can replace these parts with assembly 1449430.			

MODELS: WBM3700PB, WBM3700SB, WBM3700WB EX. VIEW DRAWING 6637
DOOR ASSEMBLIES

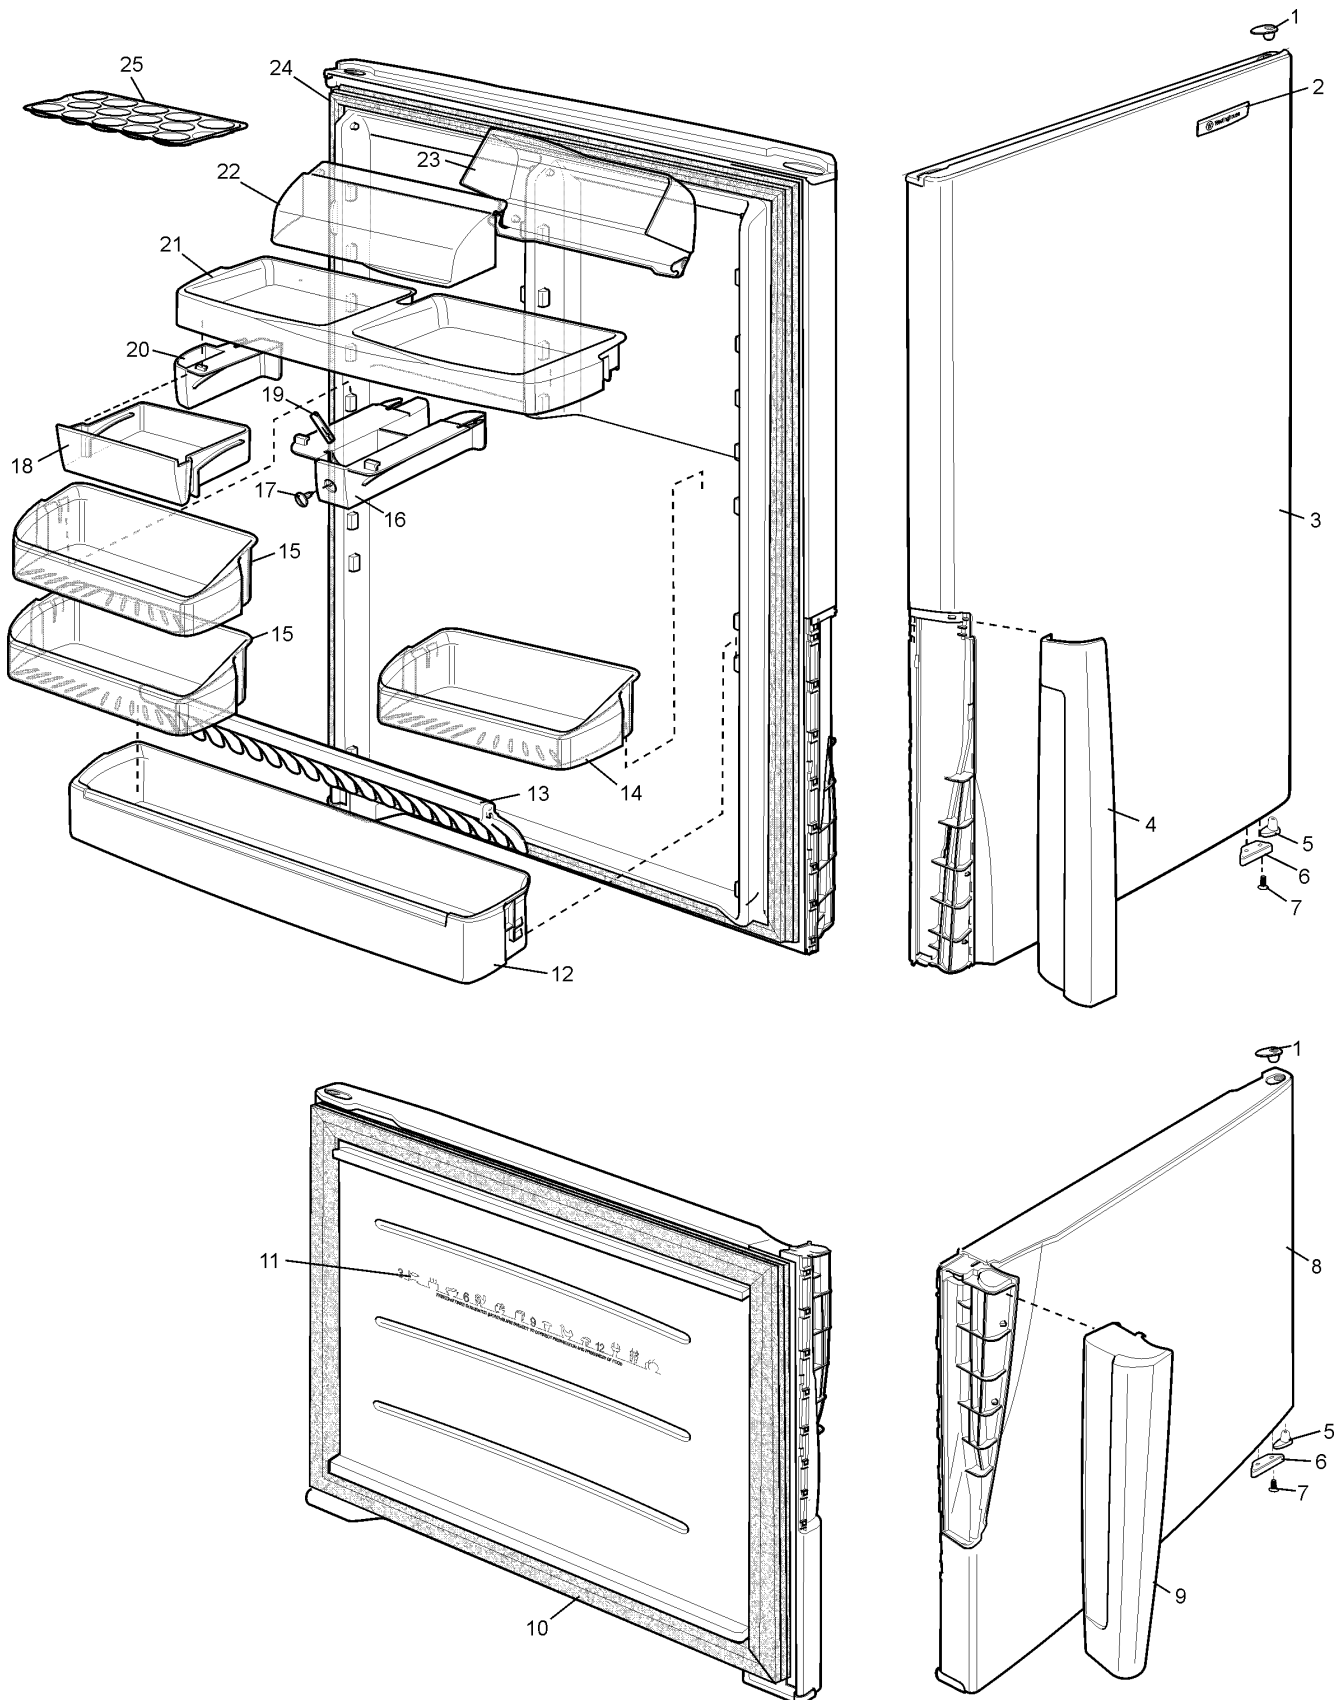


ITEM	PART N°	DESCRIPTION Ex. 6637	PB	SB	WB
1	1443579	Thimble, Filler Assy. Closed	2	2	2
2	1453668	Nameplate, Badge	1	1	1
3	1452069	Door FIP F.C. RH.	1		
	1452055	Door FIP F.C. LH.	1		
	1452046	Door FIP F.C. RH.		1	
	1452036	Door FIP F.C. LH.		1	
	1452015	Door FIP F.C. RH.			1
	1452005	Door FIP F.C. LH.			1
4	1453902	Handle Cover LH. F/C. Door	1	1	
	1453901	Handle Cover RH. F/C. Door	1	1	
	1451574	Handle Cover LH. F/C. Door			1
	1451573	Handle Cover RH. F/C. Door			1
5	1443580	Thimble, Cam Assy. Closed	2	2	2
6	1427662	Stop, Door	2	2	2
7	154564	Screw, Door Stop N°10 x ¾" T/CT T23 C/SUNK	4	4	4
8	1452073	Door FIP Frz. RH.	1		
	1452059	Door FIP Frz. LH.	1		
	1452049	Door FIP Frz. RH.		1	
	1452039	Door FIP Frz. LH.		1	
	1452018	Door FIP Frz. RH.			1
	1452008	Door FIP Frz. LH.			1
9	1453902	Handle Cover RH. Frz. Door	1	1	
	1453901	Handle Cover LH. Frz. Door	1	1	
	1451574	Handle Cover RH. Frz. Door			1
	1451573	Handle Cover LH. Frz. Door			1
10	1450840K	Gasket, Door Fzr.	1	1	1
11	N.P.N.	Silk Screened	x	x	x
12	1446882	Bin, Bottle	1	1	1
13	1443409	Bottle, Finger	1	1	1
14	1441783	Bin, Half Width	1	1	1
15	1441780	Bin, Half Width	2	2	2
16	1445729	Utility Runner Centre Single	1	1	1
17	1441562	Lock, Knob	1	1	1
18	1447737	Utility Bin, Dec LH	1	1	1
19	1441563	Lock, Latch	1	1	1
20	1443623	Utility Runner LH	1	1	1
21	1446878	Bin, Dairy	1	1	1
22	1446875	Door, Dairy LH.	1	1	1
23	1441560	Door, Dairy RH.	1	1	1
24	1450841K	Gasket, Door F.C.	1	1	1
25	1448066	Egg Tray	1	1	1

MODELS: WBM3700PB, WBM3700SB, WBM3700WB EX. VIEW DRAWING 6634
WBM4000SB, WBM4000WB
FREEZER ASSEMBLY

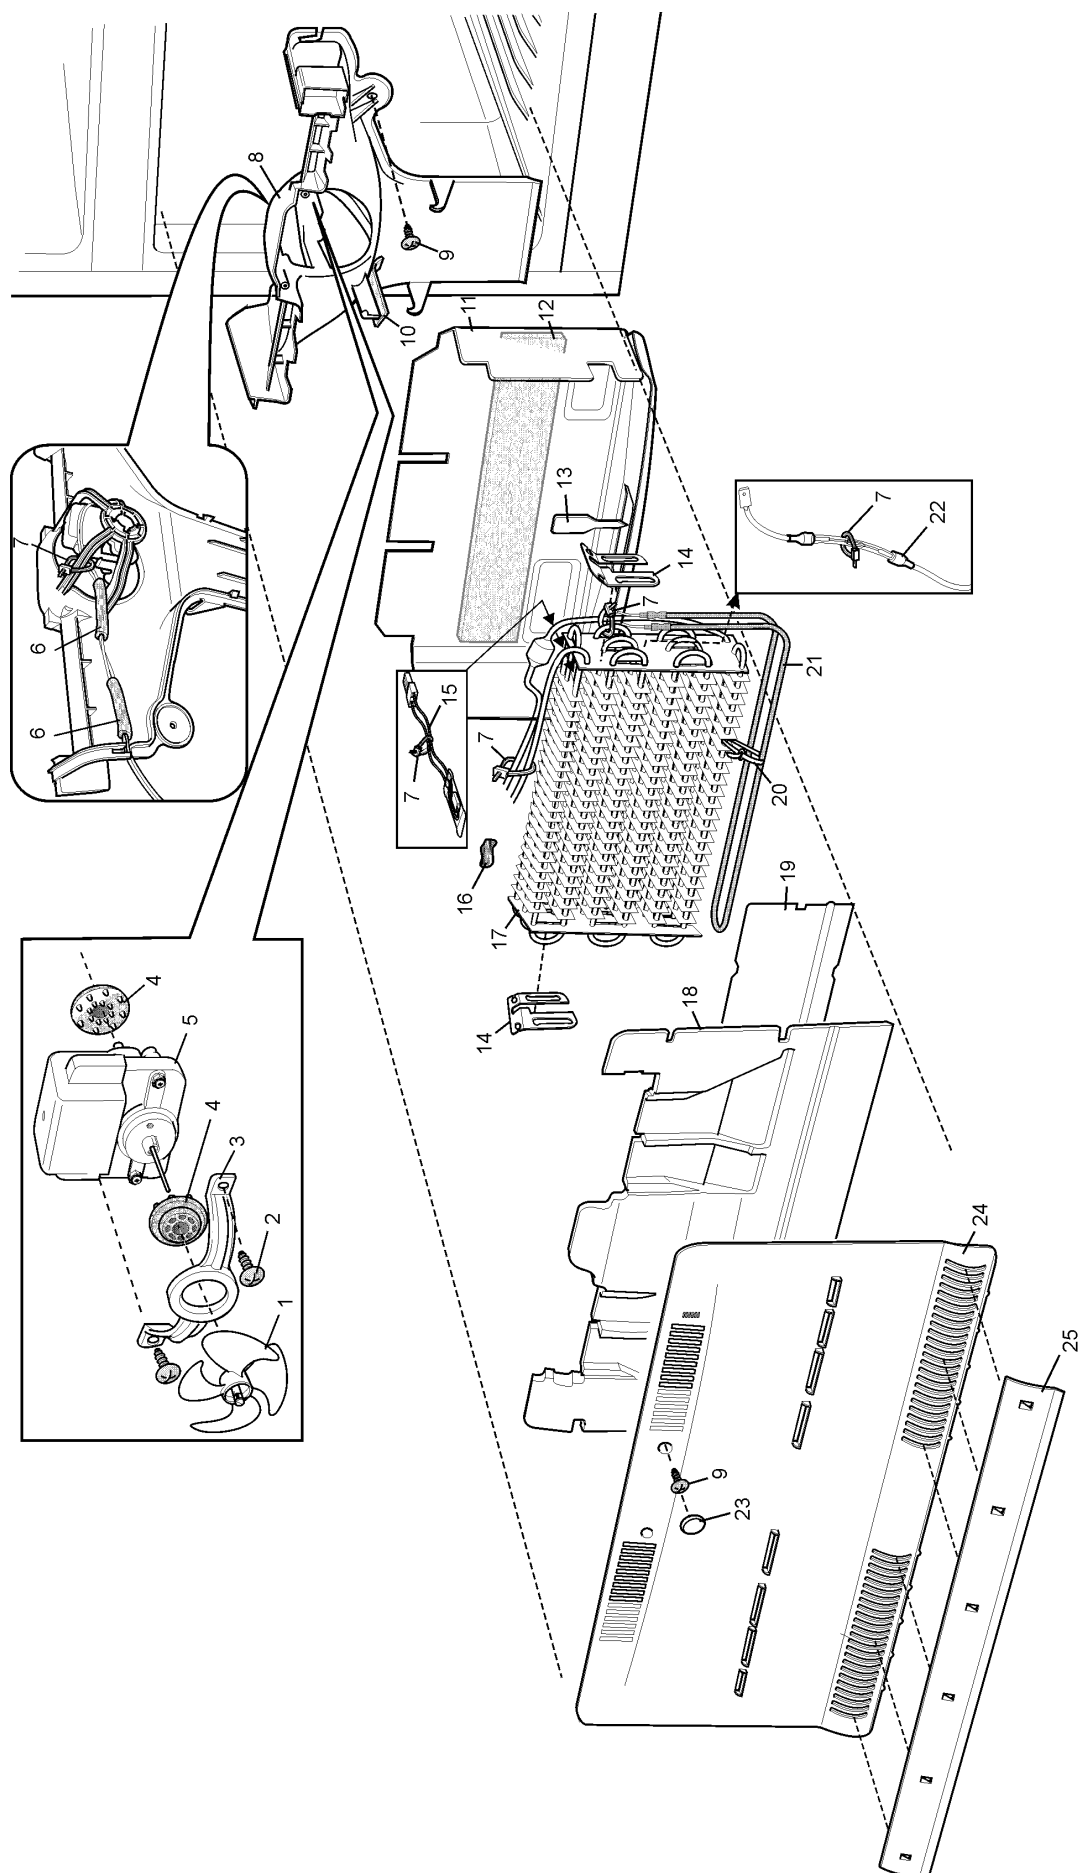


ITEM	PART N°	DESCRIPTION Ex. 6634	QTY
1	1446167	Fan Blade Assy.	1
2	1449422	Screw, #8 x ½" T/F TA PAN/HD	2
3	1435137	Bracket, Fan	1
4	1446048	Grommet, Fan Mounting	2
5	1449376	Motor, Fan 5w	1
6	1424984	Foam Tape	1
7	1416248	Cable Tie	5
8	1446883	Shroud, Fan Moulded	1
9	1449412	Screw, #8 x ½" TF HD WHT	4
10	57010553	Foam Piece	1
11	1451279	Trough, Drain Assy.	1
12	1445861	Noise, Damper	1
13	1446587	Strainer, Drain Tube	1
14	1436676	Bypass Seal Plastic	2
15	1448818	Defrost Termination Thermostat Assy	1
16	1437017	Noise Damper	1
17	1446941	Evaporator	1
18	1440943	Insulation (Evaporator Cover)	1
19	1447389	Heat Shield (Evaporator Cover)	1
20	1427422	Clip, Heater	4
21	1440999	Heater, Defrost	1
22	1449012	Thermal Fuse Assy.	1
23	1442951	Plug Button	2
24	1448562	Evaporator Cover Assy. (Includes Items 18 & 19)	1
	1441003	Evaporator Cover (Part Of 1448562)	1
25	1451587	Air Return Baffle	1

MODELS: WBM3700PB, WBM3700SB, WBM3700WB EX. VIEW DRAWING 6638
WBM4000SB, WBM4000WB
CABINET ASSEMBLY

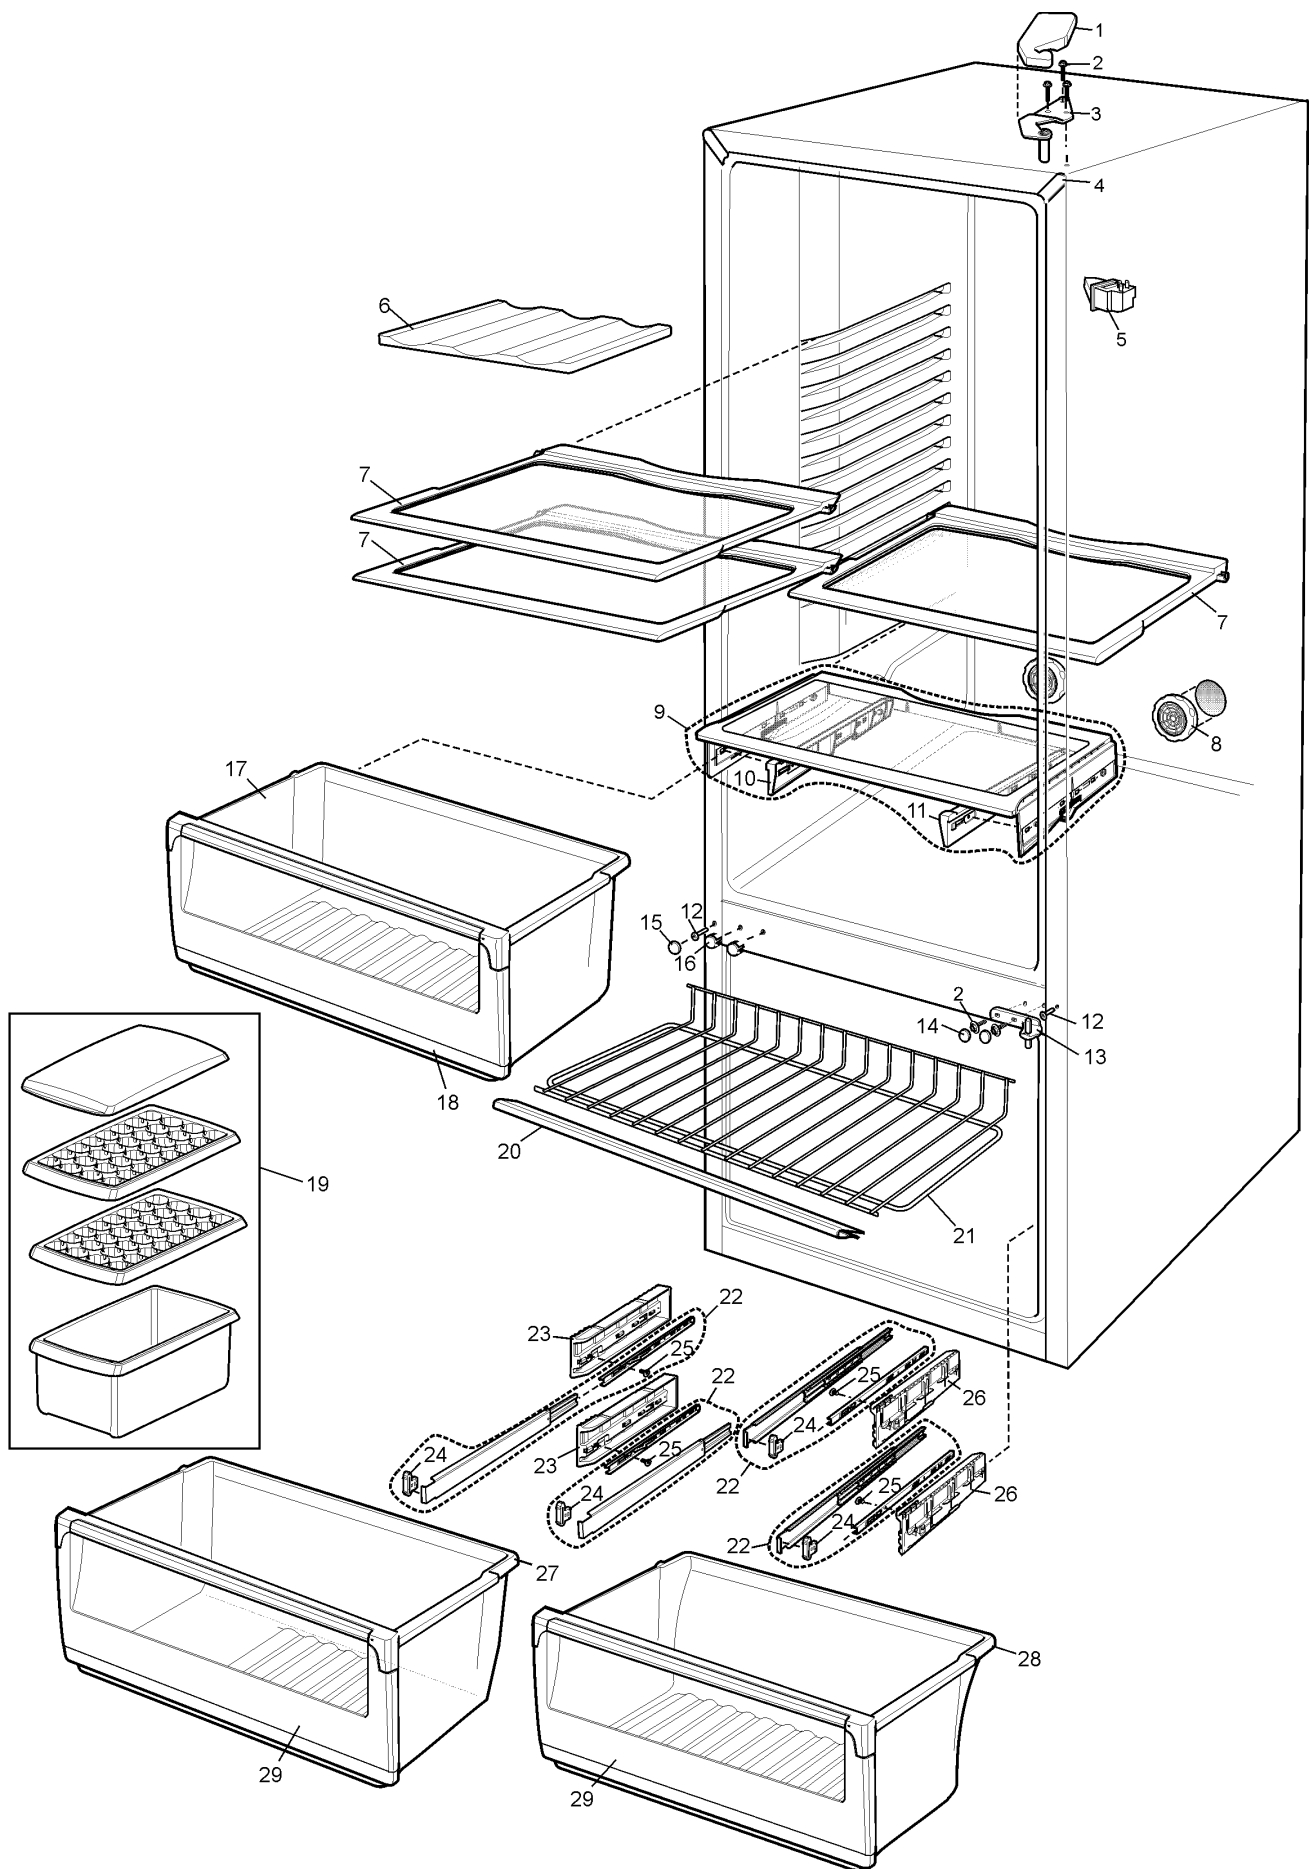

ITEM	PART N°	DESCRIPTION Ex. 6638	PB	SB	WB
1	1449941	Cover, Hinge RH (Grey SYD 1212-A)	1	1	
	1449942	Cover, Hinge LH (Grey SYD 1212-A)	1	1	
	1442280	Cover, Hinge RH (White)			1
	1443565	Cover, Hinge LH (White)			1
2	1449414	Screw, Centre/Top Hinge	5	5	5
3	1448261	Hinge, Top RH	1	1	1
	1448262	Hinge, Top LH	1	1	1
4	1450894	Cap, Corner (Grey SYD 1212-A)	2	2	
	1450853	Cap, Corner (White)			2
5	1446958	Switch, Light	1	1	1
6	243214801	Bottle Holder, White	1	1	1
7	1446844	Shelf Assy. Glass	3	3	3
8	1444592	Air Grille / Duct Connection	2	2	2
9	1451536	Cover, Crisper Assy. (Includes Items 10 & 11)	1	1	1
10	Refer Item 9	Part Of Item N° 9	x	x	x
11	Refer Item 9	Part Of Item N° 9	x	x	x
12	1422846	Bulbex Rivet	2	2	2
13	1449939	Hinge, Centre (Grey)	1	1	
	1449843	Hinge, Centre (White)			1
14	1449940	Cap, Screw (Grey SYD 1212-A)	2	2	
	1425223	Cap, Screw (White)			2
15	1449974	Snap Cap (Grey)	1	1	
	1417378	Snap Cap (White)			1
16	1432141	Plug Hole, (White)	2	2	2
17	1451525	Bin Crisper, Rear	1	1	1
18	1451515	Facia Assy., Crisper	1	1	1
19	1445907	Ice Cube Assy.	1	1	1
20	1452858	Trim, Shelf	1	1	1
21	1446847	Shelf, Freezer, Top	1	1	1
22	1451507	Extension Slide Assy. (Includes Item 24)	4	4	4
23	1451542	Fzr Ext Slide Insert LH	2	2	2
24	1453200	Rubber Bumper Union	4	4	4
25	1453186	Screw, #8 x 7.5 Typ-BT Pan/Hd Phi	4	4	4
26	1451541	Fzr Ext Slide Insert RH	2	2	2
27	1451492	Bin, Freezer Top	1	1	1
28	1451495	Bin, Freezer Bottom	1	1	1
29	1451994	Facia Assy. Bin Freezer	2	2	2

MODELS: WBM3700PB, WBM3700SB, WBM3700WB EX. VIEW DRAWING 6630
WBM4000SB, WBM4000WB MACHINE COMPARTMENT

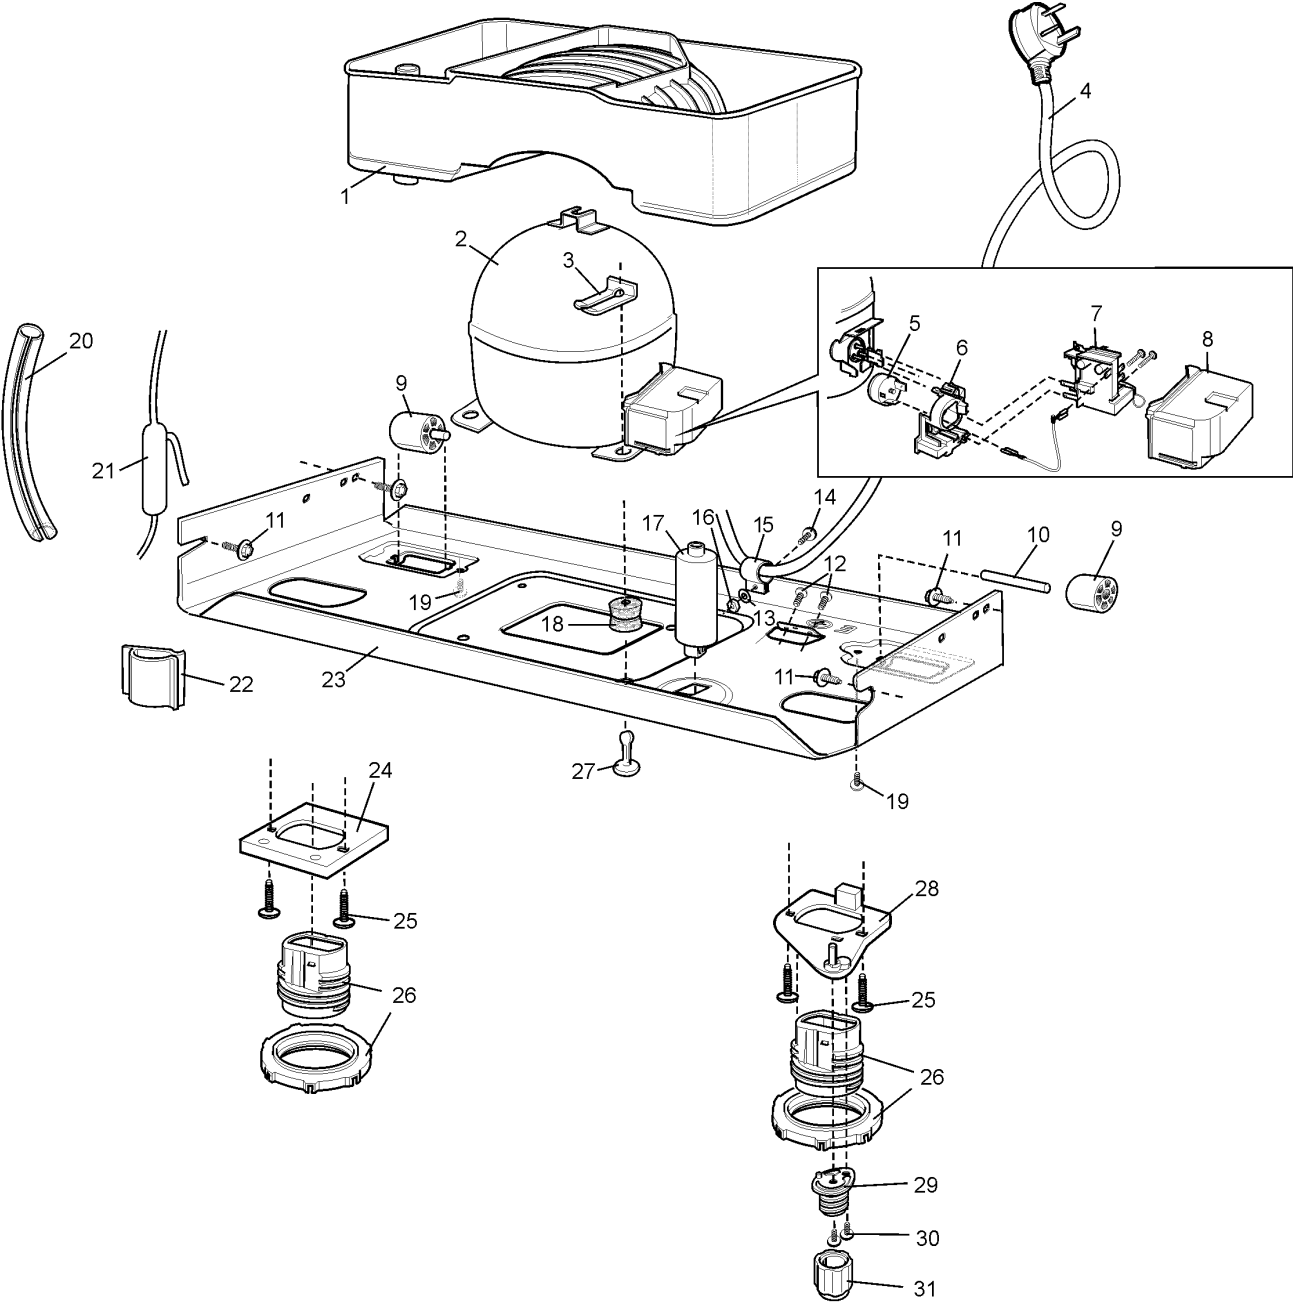

ITEM	PART N°	DESCRIPTION Ex. 6630	QTY
1	1447234	Pan, Drain	1
2	1451476	Compressor, Zanussi GTT66AA	1
3	1449402	Clip, Compressor Retaining	4
4	1446050	Cord, Service	1
5	1448164	Overload, Protector	1
6	1441033	P.T.C. Relay	1
7	1441035	Junction Box	1
8	1441036	Terminal Cover	1
9	1449731	Roller, Rear (Light Grey)	2
10	1451845	Shaft, Roller Rear	2
11	1449407	Screw, #12-14, 16.0mm	12
12	1449410	Screw, 8/32 " x 1/2" Thread Cut	2
13	1449433	Lock Washer	1
14	1449415	Screw	1
15	1438128	Clamp	1
16	1449423	Nut	1
17	1448816	Capacitor, 4µf 400 volts Snap In	1
18	1446306	Grommet, Rubber Comp. Mtg.	4
19	1449401	Screw, #8-32 x 3/8	2
20	1446166	Drain Tube, Slit, Clear	1
21	ES5332	Dryer	1
22	1436223	Clip, Self Adhesive	2
23	1446897	Base Plate, Compressor	1
24	1441916	Spacer, Roller, Strikeside	1
25	1449409	Screw, Lower Hinge/Roller Spacer	4
26	1442374	Roller, Adjustable	2
27	1416655	Pin, Comp. Mtg.	4
28	1447211	Hinge Plate, Bottom LH (Black)	1
	1447210	Hinge Plate, Bottom RH (Black)	1
29	1441979	Mount Foot Stabilising	1
30	1444541	Screw, M4x8 Mush X/R T-23 ZP	2
31	1441919	Cap, Stabilising Foot	1