
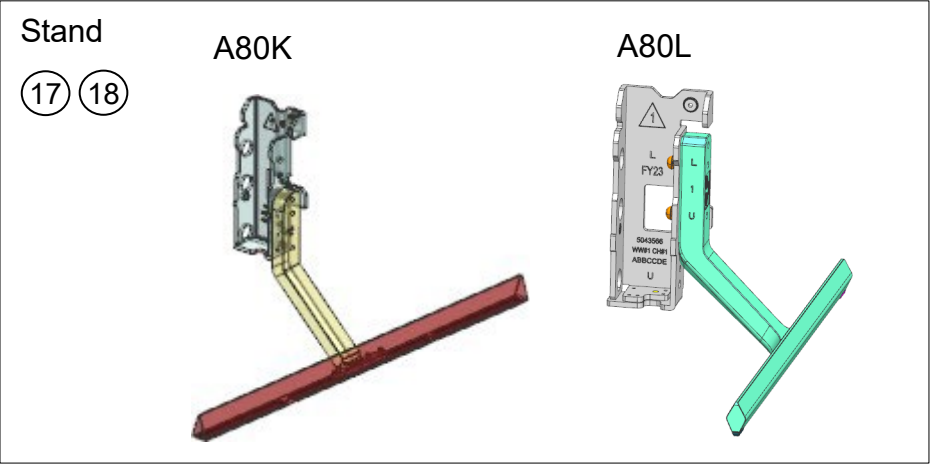


SECTION 2: XR / XRM-65A80*

2-4. EXPLODED VIEW AND PART LIST



- Place the TV set facing downwards on a stable, level surface before disassembly and assembly of parts.
 -  and shaded parts are critical for safety. Replace only with part number specified.
 -  Parts contain confidential information. Strictly follow the instruction whenever the components are repaired and/or replaced
- \ (*) Parts are not stocked since they are seldom required for routine service. Some delays should be anticipated when ordering these components.
 - \ Picture provided in this section might have slight difference from the actual sets.
 - \ The reference number beside the part indicates the disassembly sequence.
 - \ Remove screws before disassembly. Unplug connectors before disassembly

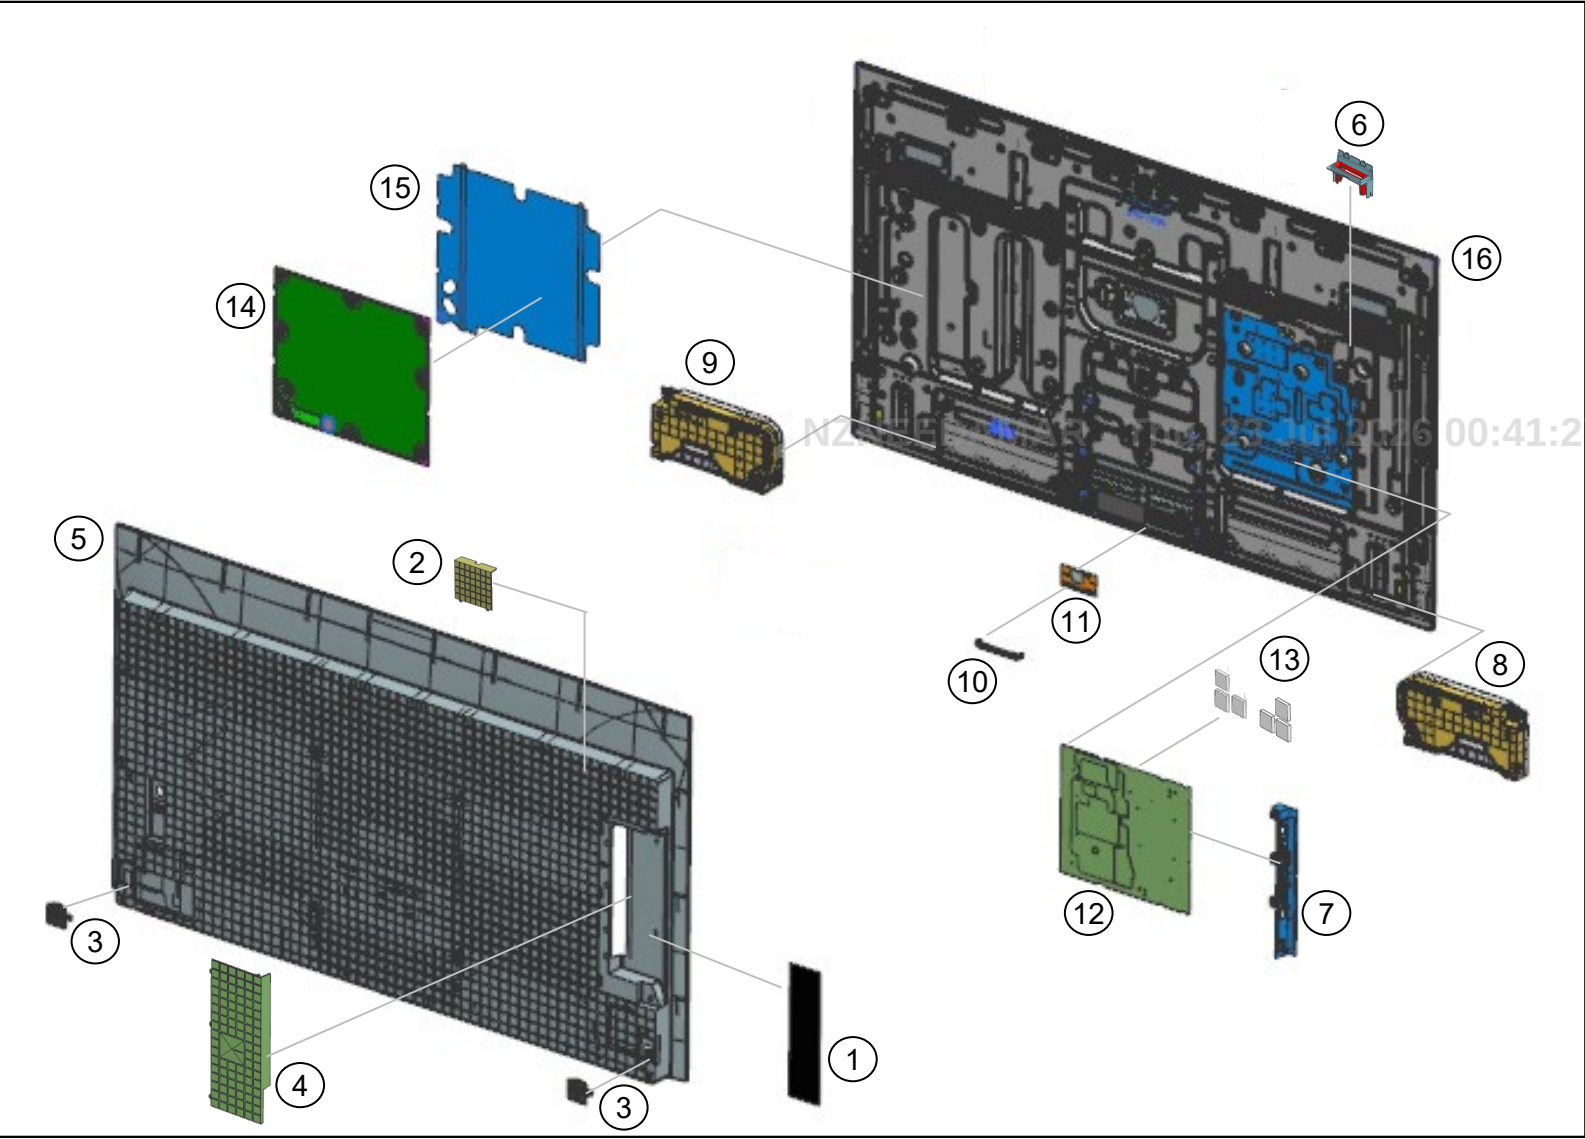

SECTION 2: XR / XRM-65A80*

2-4. EXPLODED VIEW AND PART LIST


SCREW

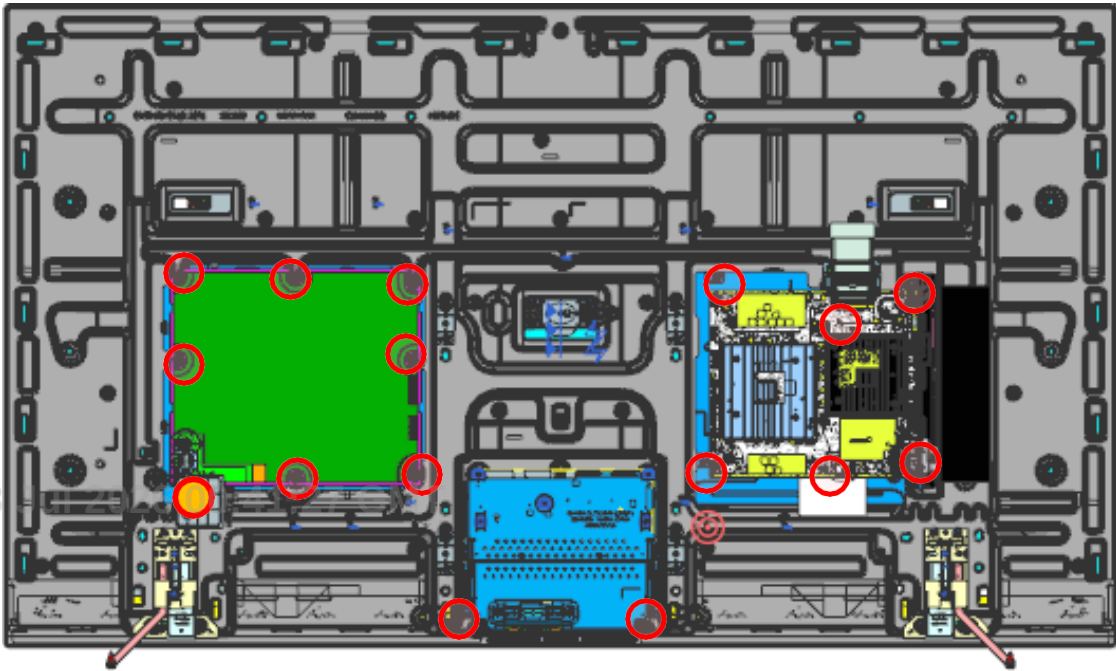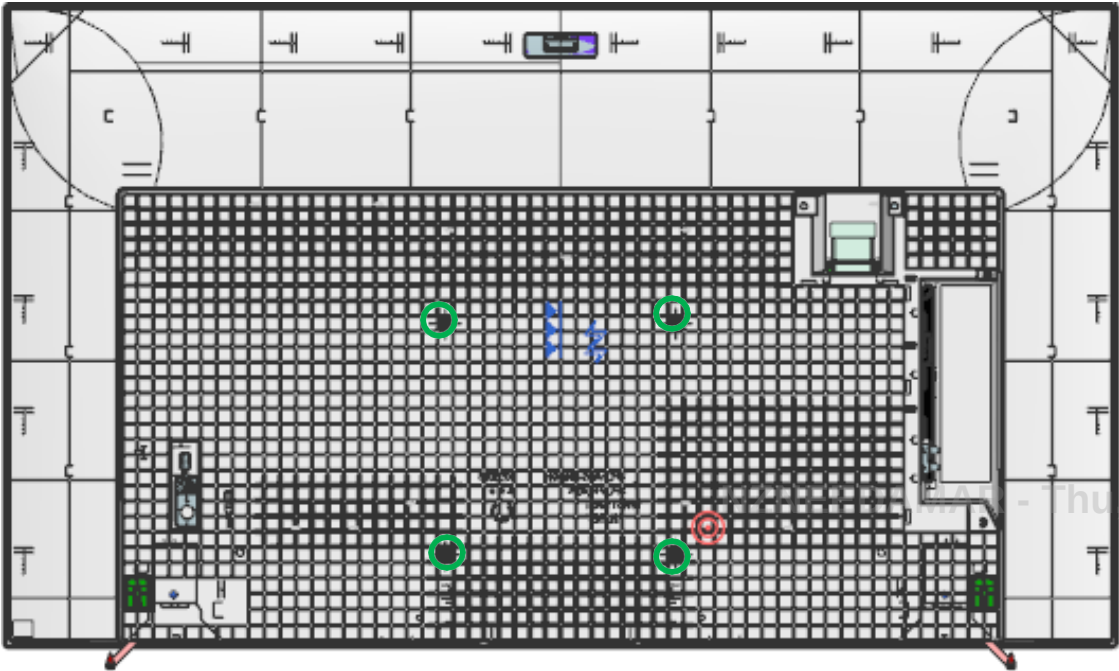

SECTION 2: XR / XRM-65A80*


2-4. EXPLODED VIEW AND PART LIST

CONNECTOR

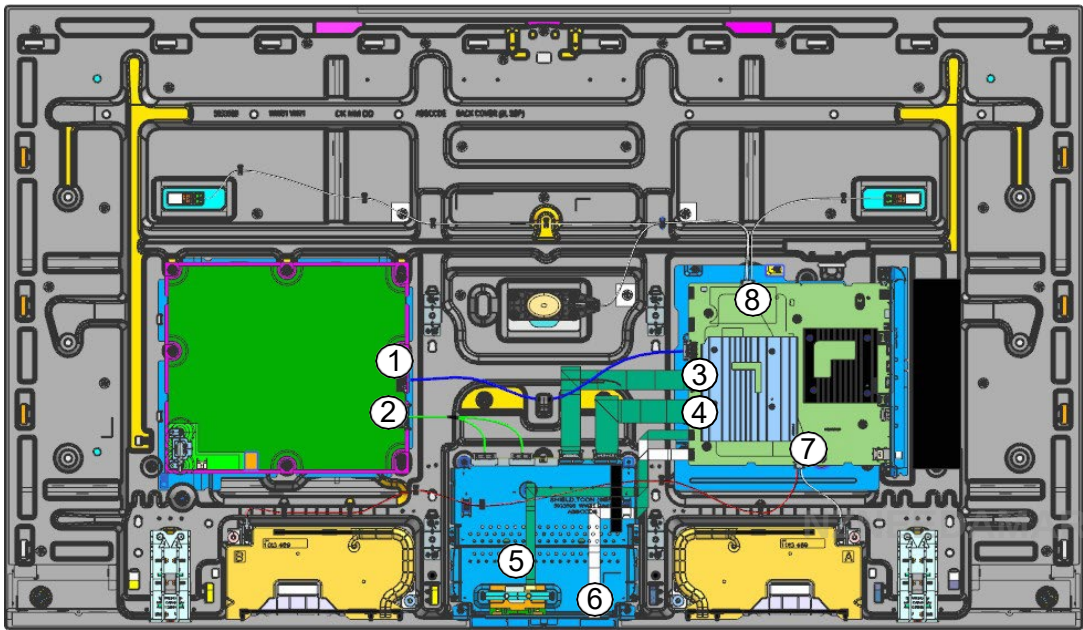

SMART CORE**DISASSEMBLY AND REMOVAL CAUTION**

1. Release FFC in red box.
2. Release screws in red circle.
3. Take out the smart core.

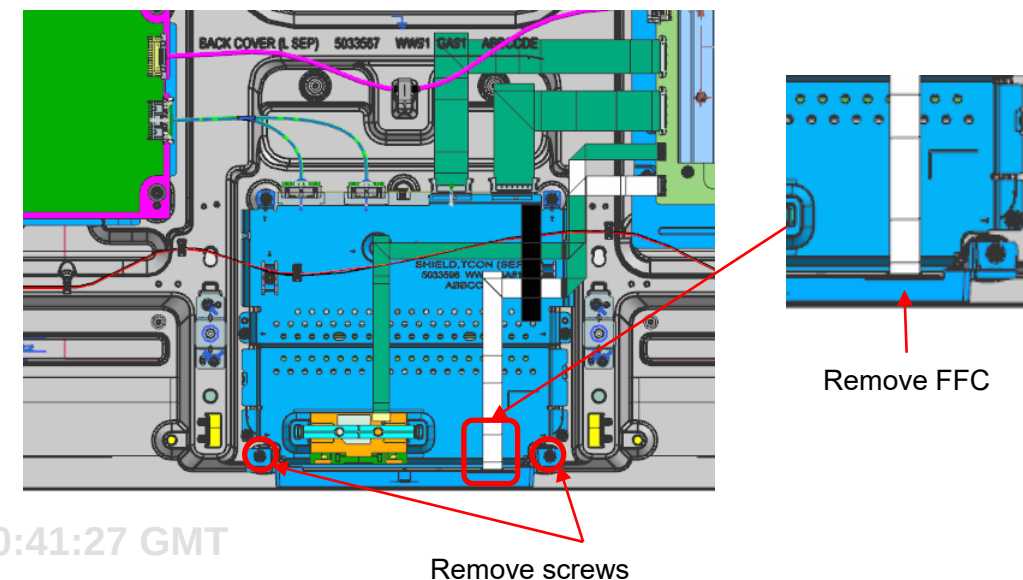


NZNEEDAMAR - Thu, 23 Jul 2026 00:41:27 GMT

DISASSEMBLE COVER TOP (55" / 65" / 77")

Remove the hooks in the following order.


- ① Lift the hook in red circle and slide it.
- ② Hold the area in the red box and lift the receiver board.

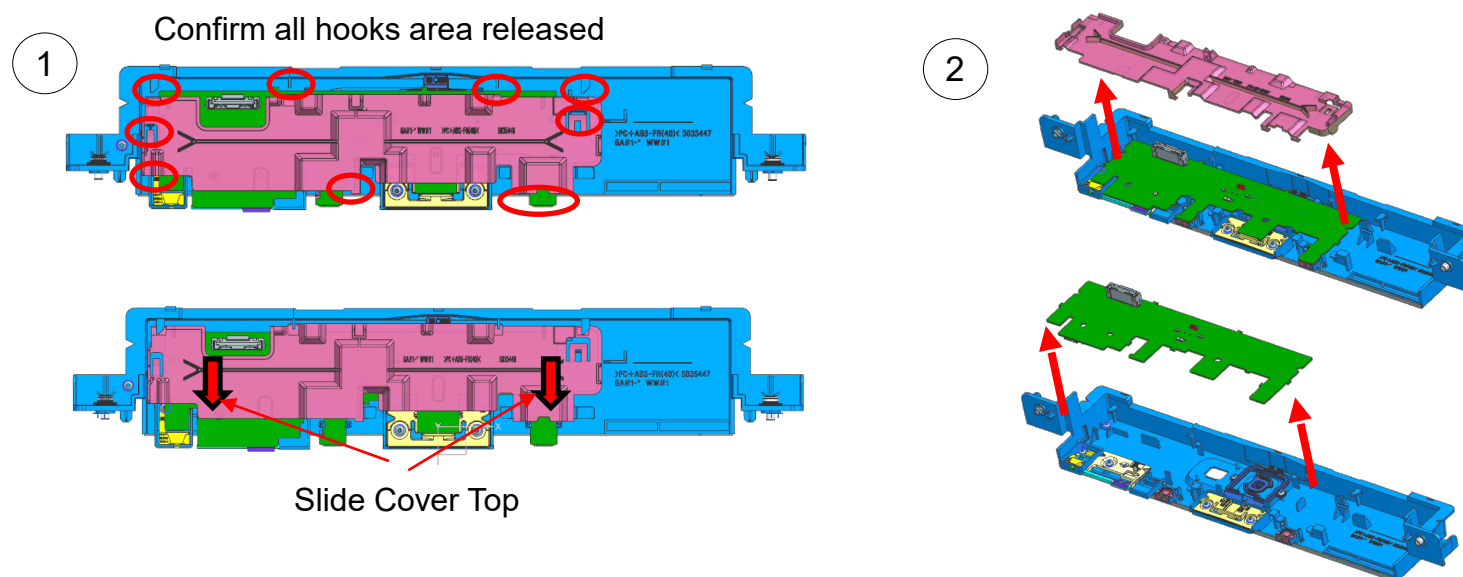

SMART CORE

EXPLODED VIEW AND PART LIST

55" / 65" / 77"

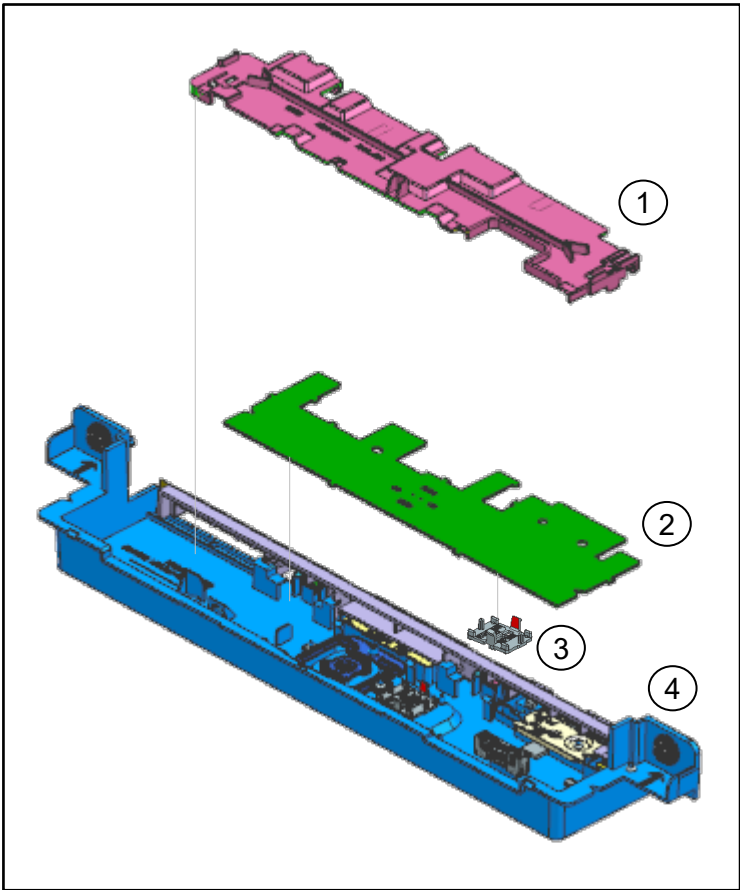

REF. NO	DESCRIPTION	REMARKS
1	COVER,TOP (SEP)	Compatible
1	COVER,TOP (SEP)	
2	COM SVC HY1_MIC_WW_EVPROS INZ	80K - TW6
2	COM SVC HY1_MIC_WW_EVPROS CTTI	80K - IN5
2	COM SVC HY1_MIC_WW_EV_PR_OS	80K
2	COM SVC FY23_HY2_MIC_WW_EVSIOS	80L
2	COM SVC 23HY2MICWWEVSIOS INZ	80L - TW6
2	COM SVC 23HY2MICWWEVSIOS CTTI	80L – IN5
3	SLIDE, SW	Compatible
3	SLIDE, SW	
4	COVER,BTM (SEP) A	TW6 / IN5
4	COVER,BTM (SEP) A	PA / HK5 / PL1 / E33